

User Manual

AR002

(Fold Inward) — — — — ▶

(Back Cover)

(Front Cover)

Warranty Information

This product as supplied and distributed new by Southern Telecom, Inc. to the original consumer purchaser is warranted by Southern Telecom against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

Obtaining Warranty Service

To obtain warranty service on your Polaroid product go to our website, SouthernTelecom.com, and click on **Product Support**. Select **Polaroid**, then click on **Service Request** to get started.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

IN NO EVENT WILL SOUTHERN TELECOM, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY.

Warranty Service Not Provided

- This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, or unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.
- No warranties, whether express or implied, including, but not limited to, any implied warranties of merchantability or fitness for a particular purpose, other than those expressly described above shall apply. Distributor further disclaims all warranties after the express warranty period stated above. No other express warranty or guaranty given by any person, firm or entity with respect to the product shall be binding on distributor. Repair, replacement, or refund of the original purchase price – at distributor's sole discretion – are the exclusive remedies of the consumer. In no event will distributor or its manufacturers be liable for any incidental, direct, indirect, special, punitive or consequential damages such as, but not limited to, damages for loss of products, business, savings, data or records) cause by the use, misuse or inability to use the product. Except as stated herein, no other warranties shall apply. Notwithstanding the foregoing, consumer's recovery against distributor shall not exceed the purchase price of the product sold by distributor. This warranty shall not extend to anyone other than the original consumer who purchased the product and is not transferable.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

ART+SOUND™

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China
v1, 09-2019

ART+SOUND™



Instruction Manual
Karaoke Mic + Stand
AR002

Before You Begin...

Customer Support

For any questions or problems with your product, please visit our website at SouthernTelecom.com and click on **Product Support**.

⚠ Caution

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved accessories and supplies.

- THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- Do not disassemble, modify, or repair the device.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions.

In the Box

- Microphone (x1)
- Microphone Stand (x1)
- Mic Holder (x1)
- Mic Lock (x1)
- Cable Clip (x1)
- Instruction Manual (x1)

Getting Started

Setting Up the Mic Stand

Remove the mic stand and its contents from packaging.


1. Open the legs of the mic stand all the way so that they are splayed out, flat.

The mic stand should feel sturdy, like it won't tip over.

Loosen the **knob** at the tripod base to adjust the **height of the shaft** from the base. The shaft can be dropped down to further brace the mic stand against the floor.

2. Turn and loosen the **neck grip** and slide the shaft out to adjust height.


Tighten the **neck grip** once the mic stand is at desired height.

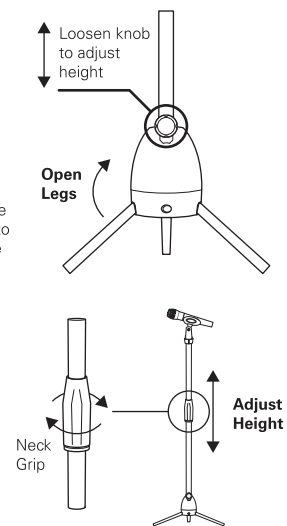

3. Some microphone holders may require the use of the **mic lock** attachment.

Screw the **mic lock** onto the threaded end of the mic stand then screw the included **microphone holder** onto the mic lock.

4. Slide the microphone into the **mic holder**.

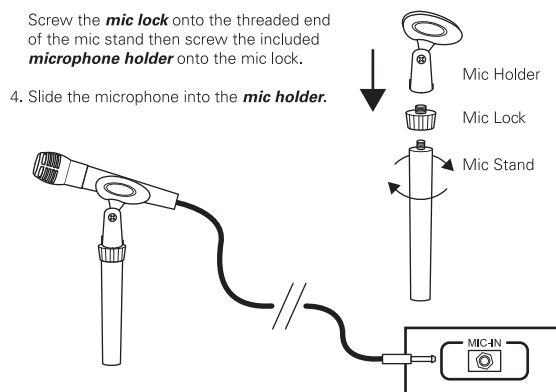

Plug the 1/4" connector to the microphone input jack on your sound system/speaker.