

FOLD INWARD



(Back Cover)



(Front Cover)



Compliance Information

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

Rating Label Definitions



Direct current symbol.



This symbol signifies that the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol signifies and declares that this equipment complies with battery charging which complies with California CEC and energy efficiency.



This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Southern Telecom is under license.



This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

90-day Limited Warranty

Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our website at www.southerntelecom.com
- Click on **Product Support**
- Select the **Brand** of your device
- Select **Service Request** and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

ART+SOUND™



All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China
v1. 10-2020

ART+SOUND™

Wireless Microphone with Speaker



Instruction Manual AR461 DISCO


Before You Begin...

- CAUTION**
- **READ CAREFULLY AND KEEP THIS MANUAL**
 - **THIS IS NOT A TOY**, please keep away from children.
 - Do NOT submerge in water.
 - Keep away from extreme heat and/or humidity.
 - Do not open this product or attempt to repair the unit yourself should it not be working.
 - Low power may cause poor Bluetooth connection or sound distortion.
 - Only power this device with its supplied power cable/adaptor.
 - Do not disassemble, modify, or repair the device.
 - Do not overcharge battery.
 - Do not allow the power port or the connectors of the supplied power cable/adaptor to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
 - The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

Questions & Customer Support
For any issues concerning this product, please visit our website at **SouthernTelecom.com** and click on **Product Support**.

- What You Get**
- AR461DISCO - Microphone Speaker (x1)
 - USB Charging Cable (x1)
 - USB Disco Ball Attachment (x1)
 - Instruction Manual (x1)

Location of Controls

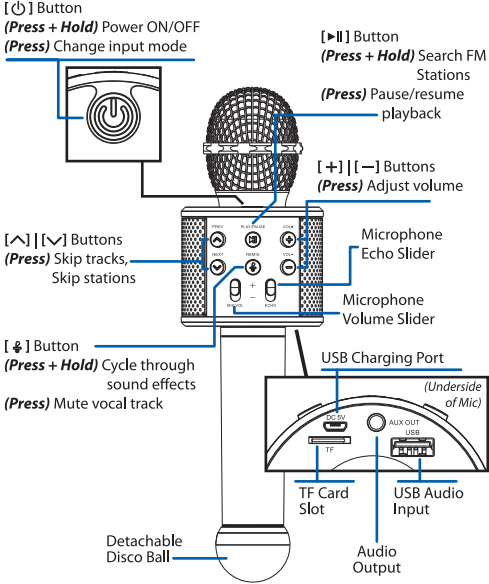

Charging the Mic
Insert the small connector of the supplied micro-USB cable into the USB charging port on the underside of the mic. Insert the large connector into the USB port on a computer, a USB charging device, or a **5V USB adapter** (not included) and plug into a wall socket.

On low battery, a tone will be periodically heard, indicating that the mic needs to be charged.

Getting Started

Powering ON/OFF
• Press and hold the [Power] button to power the microphone ON and OFF.

Changing Input Modes
• Press the [Power] button to switch input modes.

Bluetooth Pairing
1. Power the mic ON. A tone will be heard indicating that the mic is powered ON. After a moment a voice will be heard indicating the mic is in Bluetooth mode.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **AR461DISCO** from the list of found devices.
3. After a successful pairing, you will be able to play music through the microphone's speaker.

Using the Disco Ball
Plug the USB connector of the included disco ball into the USB port on the bottom of the microphone. It will only plug in in one direction.

The microphone must be charged and powered ON for the disco ball to work.

Connecting a USB Device
Insert the connector of your USB device into the USB audio input on the underside of the mic.

If the mic does not automatically switch to USB mode, press the [Power] button.

Connecting a TF Card
Insert a TF card into the TF card slot on the underside of the mic.

If the mic does not automatically switch to TF card mode, press the [Power] button.

Adjusting Playback & Volume

- Press the [Pause/Play] button to pause/resume playback.
- Press the [Skip Forward] and [Skip Backward] buttons to skip tracks.
- Press the [Volume Up] and [Volume Down] buttons to adjust volume.

Using the FM Radio
For best FM reception, make sure the mic has clear line of sight to the sky. Switch to FM radio mode by pressing the [Power] button.
• Press and hold the [Search] button to scan and save nearby radio stations.
• Press the [Skip Forward] and [Skip Backward] buttons to skip through saved stations.

Using with a Karaoke App
1. Pair to your device with Bluetooth (refer to the **Bluetooth Pairing** section of this user manual).
2. Open the karaoke app of your choice.

Using with a Non-Karaoke App
1. Pair to your device with Bluetooth (refer to the **Bluetooth Pairing** section of this user manual).
2. Open the music-playing app of your choice.
3. While music is playing, press the [Cycle/Effects] button to mute/reduce the volume of the vocals. Not all music apps/files will support this functionality.

Microphone Sound Effects

- Adjust microphone volume and echo effect with the sliders on the front of the mic.
- The volume of the sound effects is controlled with the mic echo slider.
- Press and hold the [Cycle/Effects] button to change the microphone effect.

Using the Audio Output
You can connect the microphone to a pair of headphones or speaker using the audio output jack on the underside of the mic.

Insert the connector of a 3.5 mm AUX cable (not included) into the audio output jack. Insert the other end(s) into the audio input jack of your audio device.