

## Legal Information

### READ CAREFULLY AND KEEP THIS MANUAL

**Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### Radiation Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



#### Rating Label Definitions

— Direct current symbol.

BC This symbol signifies that the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

⏳ This symbol signifies and declares that this equipment complies with battery charging which complies with California CEC and energy efficiency.

**Bluetooth** The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Southern Telecom is under license.

## 90-Day Limited Warranty

### 90-day Limited Warranty

Territory: United States/Canada

#### LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

#### To obtain warranty service:

- Visit our website at [www.southerntelecom.com](http://www.southerntelecom.com)
- Click on **Product Support**
- Select the **Brand** of your device
- Select **Service Request** and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

#### Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

# ART+SOUND™

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China  
Designed in USA  
v2. 3-2019

# ART+SOUND™

## TIMEWAVE

DIGITAL CLOCK + WIRELESS SPEAKER



User Manual  
AR530

## Before You Begin...

### CAUTION

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

• **THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with this device.**

- Do not disassemble, modify, or repair the device.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.

### Questions & Customer Support

For questions, troubleshooting or any other assistance, please visit our website at [SouthernTelecom.com](http://SouthernTelecom.com) and click on **Product Support**.

### In the Box

- AR530 - **Digital Clock & Wireless Speaker** (x1)
- Charging Cable (x1)
- User Manual (x1)

### NOTE

If using the AR530 as an alarm clock it is highly recommended that you plug it into a USB adapter and leave it plugged into an electrical outlet. The clock will remember its set clock and alarm times so long as it is powered or has battery remaining.


### Location of Controls

(Front of Speaker)

1. **[Snooze]** Button: Snooze alarm 5 minutes
2. **[Alarm]** Button: Turn alarm ON/OFF
3. **[Digit]** Button: Adjust hour and minute digits
4. **[Set]** Button: Set clock and alarm time

5. Bluetooth LED Indicator  
(Back of Speaker)

6. **[Power]** Switch
7. Micro-USB Charging Port
8. Charging LED Indicator

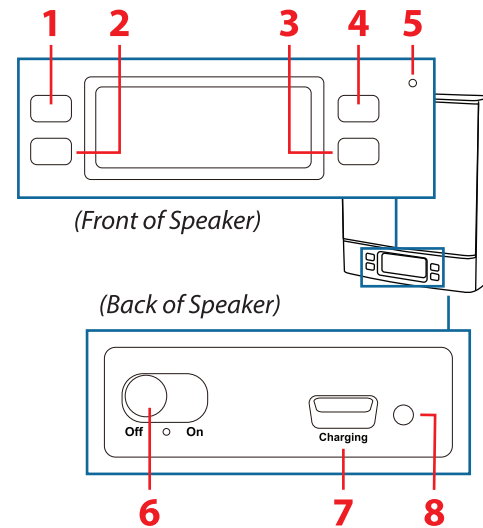

## Getting Started

### Charging the Speaker

Insert the small connector of the included micro-USB charging cable into the micro-USB charging port on the back of the speaker. Insert the large connector into the USB port on a computer, a USB charging device, or a 5V USB adapter (*not included*) and plug into a wall socket.


The charging LED indicator will **turn RED** while charging and turn OFF when fully charged. On low power, a tone will be heard indicating that the speaker needs to be recharged.

The clock will remember its set clock and alarm times as long as it has battery remaining.

### Powering ON/OFF

**Note:** When powered off, the clock will remember its set clock and alarm times as long as it has battery remaining. If the battery dies completely, you will need to re-set the clock and alarm after recharging the speaker.

- Move the **[Power]** switch to the middle or ON position to power the speaker on.
- Move the **[Power]** switch to the ON position to power the speaker and lights on.
- Move the **[Power]** switch to the OFF position to power the speaker and lights off.

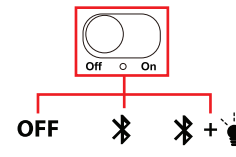

### Playing Music

To play music on the speaker, you must be paired to a Bluetooth-enabled device. Once paired, playback and volume adjustment can be controlled via your media-playing device.

### Using the Lights

- Move the **[Power]** switch to the ON position to power the speaker lights ON.
- Play music off of your device via Bluetooth®, and the lights will react to the music you play.
- The lights will power OFF when the speaker is powered off.

### Bluetooth Pairing

1. Power the speaker ON. A tone will be heard and the Bluetooth LED indicator will **quickly flash BLUE**.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **AR530** from the list of found devices.
3. After a successful pairing, a tone will be heard and the Bluetooth LED indicator will **slowly flash BLUE**.

**Note:** Bluetooth pairing will turn off if not paired to a device within 5 minutes. If this happens, power the clock off and on again.

### Setting the Clock & Alarm

1. Long press the **[Set]** button. The hour of the **clock time** will start blinking. Press the **[Digit]** button to increase the hour from 1-12. The clock display will show AM or PM.
2. Once you have selected the correct hour, press the **[Set]** button. The minute of the **clock time** will start blinking.
3. Repeat the above step to set the time minute, and alarm hour and minute.



### Using the Alarm

Press the **[Alarm]** button to enable or disable the alarm. The alarm icon on the clock display will light up to indicate that the alarm is activated.

When the alarm is ringing:

- Press the **[Snooze]** button to snooze the alarm for 5 minutes. The alarm icon will blink.
- To completely disable the alarm, press the **[Alarm]** button. The alarm icon on the display will turn off to indicate that the alarm is disabled.