## (Fold Inward) - - - - **▶**

(Back Cover)

(Front Cover)

## Compliance Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Rote: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation, If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Recrient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected,

• Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

WARNING Li-lon Battery Inside
This product is fitted with a Li-lion battery, Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers, Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

(BC) This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



This symbol represents FCC Declaration of Conformity and compliance.

Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology.

## Warranty Information

## 90-day Limited Warranty Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailed rie warranted by Southern Telescom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:

  100 Surroustnmer support portal: www.customersupport123.com

Warranty service not provided This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSIV DESCRIBED ABOVE SHALL APPLY, DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR QUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURES BE LIABLE FOR ANY INCIDENTAL DIFFCT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINSS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITYTO USETHE PRODUCT EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FORECOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR'S SHALL NOT EXCEED THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT AND IS NOTTRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

# ART+SOUND

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does

Printed in China v1. 04-2021

## ART+SOUND



Instruction Manual

Vintage Wireless Speaker

## Before You Begin...

### **READ CAREFULLY AND KEEP THIS MANUAL**

Customer Support For any questions or problems with your product, please visit our website at customersupport123.com

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.


• THIS DEVICE IS NOT A TOY, keep away from children and pets.

- Do not disassemble, modify, or repair the device.
  Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet

- . Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
   Do not overcharge battery.
   If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of

- In the Box
   AR1074 Wireless Speaker (x1)
- Micro-USB Charging Cable (x1)
   User Manual (x1)

## Location of Controls

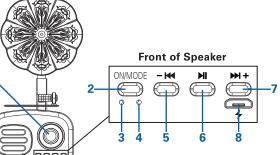

1. [Volume] Dial

AR1074

- 2. [ON/MODE] Button: Press: Change input mode Press+hold: Power ON/OFF
- 3. Charging LED Indicator
- 4. Bluetooth LED Indicator

- 5. [ **⋈**] Button: Press: Skip to previous track Press+hold: Decrease volume
- 6. [**▶II**] Button: Press: Play/pause Scan stations (FM mode)
- 7. [**▶ +**] Button: Press: Skip to next track Press+hold: Increase volume
- 8. Micro-USB Charging Port

## Getting Started

## Charging the Speaker

Plug the micro-USB (smaller) connector of the included charging cable into the micro-USB charging port on the speaker. Plug the USB (larger) connector into a USB power source such as the USB port on a computer, or into a **5V USB adapter** (not included) and plug into a wall outlet.

The charging LED indicator will turn RED while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

## Powering ON/OFF

- Press + hold the **[ON/MODE]** button to power the speaker ON or OFF.
- When powered ON, the speaker will enter Bluetooth pairing mode, and may automatically re-pair to any available previously-paired device nearby.

### Adjusting Volume & Playback

- Press the [] to pause/resume playback (Bluetooth mode only).
- Press the [>+] button to skip to the **next** track/station. Press the [- ► ] button to skip to the previous track/station.
- Press + hold the [- | ←] and [> +] buttons to adjust volume, or use the
- In Bluetooth mode, you can also adjust volume & playback with the controls on

## Changing Input Modes

Press the [ON/MODE] button on the speaker to switch input modes.

- Bluetooth Pairing
  1. Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode. The Bluetooth LED indicator will quickly flash BLUE.

  2. Set your mobile device to search for Bluetooth devices. When it appears,
- select AR1074 from the list of found devices.

  3. After a successful pairing, a tone will be heard, and the Bluetooth LED
- indicator will turn solid BLUE. You should be able to play music on the speaker. 4. When playing music, the Bluetooth LED indicator will slowly flash BLUE.

In Bluetooth mode, playback and volume can be controlled using your paired device, or the buttons on the speaker listed in the **Adjusting Volume & Playback** section of this manual.

## Using the FM Radio

Change input modes until you enter FM radio mode.

In FM radio mode, all playback and volume adjustment will be controlled by the buttons on the speaker.

- Press the [ ] July button to start or stop automatically scanning and saving nearby FM radio stations. If not stopped, the radio to make a complete scan and save of all available radio stations, and return to the first saved station.

  After you have scanned and saved stations, press the
- [- ₩] and [▶ +] buttons to skip through saved

