(Fold Inward) — — — **▶**

(Back Cover)

(Front Cover)

Using the FM Radio

Change input modes until you enter FM radio mode.

In FM radio mode, all playback will be controlled by the buttons on the speaker.

- Press the [▶|I] button to start/stop scanning & saving nearby available FM radio stations. If not stopped, the radio will make a complete scan & save of all available radio stations, and automatically stop scanning and return to the first saved station.
 Press the [+] and [-] buttons to skip through saved stations.

Using a TF Card or USB Device

To insert a TF card, insert a TF card into the TF card slot on the speaker with the metal contacts facing down, and push in until it clicks.

To insert a USB device, such as a USB flash drive containing audio files, insert the USB device into the USB device port on the speaker.

Change input modes until you enter TF or USB mode. The speaker will automatically begin playing music off the device. **Note:** You must have a TF card or USB device inserted to switch to TF or USB input mode.

In TF card and USB mode, all playback is controlled by the buttons on the speaker.

Using the LED Lights

The speaker LED lights will automatically power ON/OFF when the speaker is powered

• Press + hold the [▶II] button on the speaker to switch through the different LED light

Compliance Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Rote: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment penerates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installed, If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

*Recrient or relocate the receiving antenna.

*Increase the separation between the equipment and receiver.

*Connect the equipment into an outlet on a circuit different from that to which the receiver is connected,

*Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and I2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

exposure condition without resolution.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery, Do not damage, open, or dismantle the battery and do not use it in damp and/or consiste conditions. Use only with compatible dragers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



(BC) This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

90-Day Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

oroduct as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original umer purchaser against defects in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:

 Visit our customer support portal: www.customersupport123.com

 Select if warrant and model of your device

 Select "Service Request" and fill out the form to begin your inquiry

 Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, afters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of

v1. 01-2021

ART+SOUND



Instruction Manual

LUMINA Wireless Lantern LED Speaker

Before You Begin...

READ CAREFULLY AND KEEP THIS MANUAL

Customer Support For any questions or problems with your product, please visit our website at

customerservice123.com

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

• THIS DEVICE IS NOT A TOY, keep away from children and pets.

- Do not disassemble, modify, or repair the device.
 Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet
- . Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
 Do not overcharge battery.
 If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of

- In the Box
 AR1081 Wireless Speaker (x1)
- Micro-USB Charging Cable (x1)
 User Manual (x1)

Location of Controls

USB Device Input Port Charging Port TF Card Slot [▶II] Button: — Press: Pause/Resume playback Press + hold: Change LED mode **·[७]** Button: Press + hold: Power ON/OFF Press: Change input Ç 4 _ [+]|[-] Buttons: AR1081 Press: Skip tracks

Getting Started

Charging the Speaker

Plug the small connector of the included micro-USB charging cable into the charging port on the speaker. Plug the large connector into a USB power source such as the USB port on a computer, or into a **5V USB adapter** (not included) and

The LED indicator will turn RED while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to

Powering ON/OFF

- Press + hold the [🕒] button on the speaker to power ON and OFF.
- When powered ON, the speaker will enter Bluetooth pairing mode, and may automatically re-pair to an available previously-paired device nearby.

Adjusting Volume

In all modes, overall volume can be adjusted with the buttons on the speaker. In AUX and Bluetooth modes, volume can also be controlled by your connected

- Press + hold the [+] button to increase volume.
- Press + hold the [] button to decrease volume.

Adjusting Playback

In all modes except AUX mode, playback can be controlled by the buttons on the speaker.

- Press the [▶II] to pause playback. Press again to resume.
- Press the [+] button to skip to the **next** track/station.
- ullet Press the [] button to skip to the **previous** track/station.

Changing Input Modes

Press the [(1)] button on the speaker to switch input modes.

ATF card or USB device must be inserted or connected to switch to these modes.

Bluetooth Pairing

- 1. Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode.
- Go to your device's Bluetooth Settings and set your device to search for new Bluetooth devices. When it appears, select AR1081 from the list of found
- 3. After a successful pairing, a tone will be heard and you will be able to play music on the speaker.

In Bluetooth mode, playback & volume can be controlled by the buttons on the speaker or your paired device.

Note: The speaker may automatically power OFF if it is not paired to a Bluetooth device after 30 minutes.

Using the AUX Input

Insert one end of a 3.5 mm auxiliary cable (not included) into the 3.5 mm AUX port on the speaker. Insert the other end into the headphone jack or 3.5 mm AUX output port on your media-playing device.

The speaker will automatically enter AUX mode.

In AUX mode, all playback will be controlled by your connected device.