# (Fold Inward) — — — **▶**

## (Back Cover)

# (Front Cover)

### Using the 3.5 mm AUX Input

Insert one connector of a 3.5 mm auxiliary cable (not included) into the 3.5 mm auxiliary input port on the top of the speaker.

Insert the other connector into the headphone jack or 3.5 mm aux output port on your media-playing device. Switch input modes until you reach AUX mode.

In AUX mode, all playback will be controlled by your connected device.

### USB and TF Card Input

Insert a USB device or TF card into the USB or TF card input ports on the speaker.

Change input modes until you enter USB or TF card mode. The speaker will automatically begin playing music off the device.

In USB and TF card mode, control playback with the controls on the speaker.

- Press the [►II/SCAN] button to pause and resume playback.
- Press the [►► /V+] and [ K4/V-] buttons to skip tracks.

### Using the FM Radio

Change input modes until you enter FM radio mode.

In FM radio mode, playback will be controlled by the buttons on the front of the

- Press + hold the [►II /SCAN] button to start or stop scanning and saving available radio stations. If it is not stopped, the radio will make a complete scan and save of all nearby radio stations.
- Press the [►► /V+] and [I◄ /V-] buttons to skip through saved stations.

### Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment penerates, uses and can radiale radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference tradio communications. However, there is no guarantee that interference will not occur in a particular installation, if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received,

exposure condition with routiness.

WARNING Li-ion Battery Inside
This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not awrose the product to temperatures exceeding 60°C (140°F).

=== Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



### Warranty Information

### 90-Day Limited Warranty

### LIMITED WARRANTY TO ORIGINAL CONSUMER

- To obtain warranty service:

  \*Visit our customer support portal: www.customersupport123.com

  \*Select the braid and model of your device

  \*Select "Service Request" and "Ill out the form to begin your inquiry

  \*Exchanges require dated proof of purchase from an authorized retailer

NO WARRANTIES OF SILLING PROBLEMS OF MPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EVERESSLY DESCRIBED ABOVE SHALL APPLY DISTRIBUTIOR FURTHER DEVELOUS AND ALL WARRANTIES AFTER THE EVERESS WARRANTY OR GULARIOS ALL WARRANTIES AFTER THE EVERPESS WARRANTY OR GULARIOS ALL WARRANTIES AFTER THE EVERPESS WARRANTY OR GULARIOS ALL WARRANTIES AFTER THE EVERPESS WARRANTY OR GULARIOS AND ALL BE RIDINGO ON DISTRIBUTIOR REPAIR. REPLUACIMENT OR REPUND OTHE OF GORDIAL PURPOSE PRICE. AT DISTRIBUTOR'S SOLE DISCRETION. ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIBALE FOR ANY INCORPORTAL DIRECT HORDISCE. PUNITIVE OR CONSCIOURNIAL DIAMAGES (SUCH AS, BUT) NOT LIMITED TO, DAMAGES FOR LOSS OF PROFTIS. BUSINESS, SAWINS, DATA OR RECORDS CAUSED BYTHE USE. MUSIC SOLE DINBULLITY OLD SCHOOL THE PROPOLATE EXCEPT AS STATED HEREIN NO THEM WARRANTIES SHALL APPLY NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURPLICATE PRICE OF THE PROPOLATE SUSMERS AND STATED TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT SHAWBRANTIES WARRANTIES AND THE PURCHASE PRICE OF THE PRODUCT SOLD BY SUSMESSAY AND STATED TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT SHAWBRANTS SHALL NOT EXCEED THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOTTRANSFERBLE.

Designed in US Printed in China

# ART+SOUND



**Party Jammer Wireless Speaker** 

### Before You Begin...

### **READ CAREFULLY AND KEEP THIS MANUAL**

Customer Support For any questions or problems with your product, please visit our website at customersupport123.com

### **⚠** Caution

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with this device.

  • Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not submerge in water.
   Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
   If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.

### In the Box

- AR1090 Wireless Speaker (x1)
   USB Charging Cable (x1)
- User Manual (x1)

### Location of Controls [Power] Switch: USB Device -2-in-1 Charging/AUX Port USB -Microphone Input Port ш OFF/ON AUX/5V MC (Top of TF TF Card [►II/SCAN] Button: Speaker) **ART+SOUND** [MODE] Button: [ ▶ I/V+ ] and [ I≪/V-]: Press + Hold: Adjust volume

### Getting Started

ON

### Charging the Speaker

Plug the small connector of the supplied USB charging cable into the charging port on the top of the speaker. Plug the large connector into the USB port on a computer, or into a **5V USB adapter** (not included) and plug into an electrical

The LED indicator, which can be seen through the AUX input port, will **tum RED** while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

### Powering ON/OFF

- Move the [Power] Switch to the ON position to power ON. A tone will be heard, and the speaker will enter Bluetooth pairing mode. It will automatically re-pair to any nearby, previously-paired device with Bluetooth
- Move the [Power] switch to the OFF position to power OFF.

### Playing Music

To play music on the speaker, you must be paired to a Bluetooth-enabled device, connected with an aux cable, or have a USB device or TF card inserted.

In all modes, volume can be adjusted by pressing and holding the [►► /V+] and [I≪/V-] buttons on the front of the speaker. In AUX and Bluetooth modes, volume can also be controlled by your connected device.

### Changing Input Modes

Press the [MODE] button on the front of the speaker to switch input modes.

You must have an AUX cable connected or TF card or USB device inserted to switch to AUX. TF or USB input mode.

### Bluetooth Pairing

- 1. Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode.
- 2. Set your mobile device to search for Bluetooth devices. When it appears, select **AR1090** from the list of found devices.
- 3. After a successful pairing, a tone will be heard and you will be able to play

In Bluetooth mode, playback and volume can be adjusted by the controls on the front of the speaker, or by the controls on your paired device.

• Press the [►II /SCAN] button to pause and resume playback.

- Press the [ ₩ /V-] and [ ▶ /V+] buttons to skip tracks.

### Using a Microphone

A microphone can be used in any mode. Plug the 6.5 mm connector of a microphone (not included) into the MIC input port on the speaker. Switch the

To avoid feedback, hold the microphone behind the speaker, and point away from the speaker.