(Fold Inward) — — — ▶

(Back Cover)

(Front Cover)

Bluetooth Pairing

- 1. Power the speaker ON. A tone will be heard and the Bluetooth LED indicator will
- Set your mobile device to search for Bluetooth devices. When the list appears, select AR3069 from the found devices.
- 3. After a successful pairing, a tone will be heard and the Bluetooth LED indicator

Using the AUX Input Insert one connector of a 3.5 mm auxiliary cable (not included) into the 3.5 mm auxiliary input jack on the back of the speaker. Insert the other connector into the headphone jack or 3.5 mm aux output port on your media-playing device.

Once plugged in, the speaker will automatically switch to auxiliary input mode and the AUX/FM LED indicator will turn solid RED.

Using the FM Radio

Switch to FM Tuner mode. For best reception, extend the FM antenna. You may need to adjust or position the antenna for certain stations.

• Use the [TUNER] dial to tune to FM radio stations.

Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Rote: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference and ornaminactions, However, there is no guarantee that interference will not occur in a particular installation, if this equipment does cause harmful interference or radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

*Reorient or relocate the receiving antenna.

*Increase the separation between the equipment and receiver.

*Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

*Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operations.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING Li-on Battery Inside

This product is fitted with a Li-ion battery, Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions, Use only with compatible dragers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



(BC) This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

90-day Limited Warranty Territory: United States/Canada

MINITED WARRANTY TO ORIGINAL CONSUMER
This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized etailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Varranny") as follows:

To obtain warranty service: Visit our website at www.southerntelec

Visit our website at www.sournernteteconi.coni
 Click on Product Support
 Select the Brand of your device
 Select Service Request and fill out the form to begin your inquiry

returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLED INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FINESS FOR A PARTICULAR PURPOSE. OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY, DISTRIBUTOR FURTHER DISCLAIMS, ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECTOT OTHE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMOBELS OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIBBLE FOR ANY TROUBLESS OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIBBLE FOR ANY TROUBLESS OF THE PRODUCT SECAL, PUNITURE OR CONSCIUMENT AND ANAGES FOR THE PRODUCT EXCEPT AS STATED HERRIN, NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SUCL BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PRODUCT BLUE BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PRODUCT BLUE BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PRODUCT BLUE BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOTTHANSFERABLE.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Designed in US v1. 07-2020

ART+SOUND



Instruction Manual

Wireless Vintage Radio

Before You Begin...

READ CAREFULLY AND KEEP THIS MANUAL

Customer Support For any questions or problems with your product, please visit our website at SouthernTelecom.com and click on Product Support.

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

• THIS DEVICE IS NOT A TOY, keep away from children and pets.

- Do not disassemble, modify, or repair the device.
 Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet
- . Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
 Do not overcharge battery.
 If using with a USB adapter, make sure the adapter is not damaged.

- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of

- In the Box
 AR3069 Wireless Speaker (x1)
- USB Charging Cable (x1)User Manual (x1)


Location of Controls

(Front of Speaker) 1. [TUNER] Dial:

- Tune FM stations
- 2. Bluetooth LED Indicator
- 3. Auxiliary/FM Input LED Indicator
- 4. [VOL] Dial:
 - Art+&found

Location of Controls (cont'd)

- (Back of Speaker)
- 6. [POWER] Switch
- 7. Charging LED Indicator 8. 3.5mm Auxiliary Input Jack 9. USB Charging Port
- 10. [MODE] Button:
- Change input mode (Bluetooth/FM Tuner/Auxiliary)

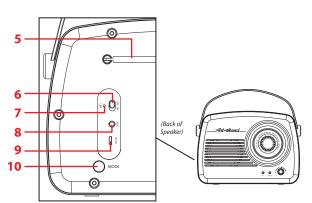

Charging the Speaker

Plug the small connector of the included USB charging cable into the USB charging port on the back of the speaker. Plug the large connector into the USB port on a computer, or into a **5V USB adapter** (not included) and plug into a wall

Getting Started

The charging LED indicator will turn RED while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

Powering ON/OFF

- Move the [Power] switch on the back of the speaker to power ON and OFF.
- When powered ON, the speaker will enter Bluetooth pairing mode, and will automatically re-pair to any available previously-paired device nearby.

Adjusting Volume

• Turn the [Vol] dial on the front of the speaker to adjust volume.

Changing Input Modes

• Press the [MODE] button on the back of the speaker to switch between Bluetooth and FM Tuner or auxiliary mode.

NOTE: When plugging in a 3.5 mm auxiliary cable, the speaker will automatically