

# User Manual

AR3071

(Fold Inward) — — — — ▶

(Back Cover)

(Front Cover)

<p><b>Using the 3.5 mm AUX Input</b> Insert one connector of a 3.5 mm auxiliary cable (<i>not included</i>) into the 3.5 mm auxiliary input port on the top of the speaker.</p> <p>Insert the other connector into the headphone jack or 3.5 mm aux output port on your media-playing device. Switch input modes until you reach AUX mode.</p> <p>In AUX mode, all playback will be controlled by your connected device.</p> <p><b>USB and TF Card Input</b> Insert a USB device or TF card into the USB or TF card input ports on the speaker.</p> <p>Change input modes until you enter USB or TF card mode. The speaker will automatically begin playing music off the device.</p> <p>In USB and TF card mode, control playback with the controls on the speaker.</p> <ul style="list-style-type: none"> <li>Press the [ <b>⏸</b> ] button to pause and resume playback.</li> <li>Press the [ <b>⏮</b> ] and [ <b>⏭</b> ] buttons to skip tracks.</li> </ul> <p><b>Using the FM Radio</b> Change input modes until you enter FM radio mode.</p> <p>In FM radio mode, playback will be controlled by the buttons on the front of the speaker.</p> <ul style="list-style-type: none"> <li><b>Press + hold</b> the [ <b>⏸</b> ] button to start or stop scanning and saving available radio stations. If it is not stopped, the radio will make a complete scan and save of all nearby radio stations.</li> <li>Press the [ <b>⏮</b> ] and [ <b>⏭</b> ] buttons to skip through saved stations.</li> </ul>	<p align="center"><b>Compliance Information</b></p> <p><b>FCC Information</b> This device complies with Part 15 of the FCC Rules.</p> <p><b>Caution:</b> Any changes or modifications not expressly approved could void the user's authority to operate the equipment.</p> <p><b>Note:</b> This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:          — Reorient or relocate the receiving antenna.          — Increase the separation between the equipment and receiver.          — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.          — Consult the dealer or an experienced radio/TV technician for help.</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p><b>Radiation Exposure Information</b> The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p><b>WARNING Li-ion Battery Inside</b> This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).</p> <p><b>Rating Label Definitions</b></p> <p>— Direct current symbol.</p> <p> This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.</p> <p> This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.</p> <p> This symbol signifies that this is a wireless device powered by Bluetooth® technology.</p> <p align="center"></p>	<p align="center"><b>Warranty Information</b></p> <p><b>90-Day Limited Warranty</b> Territory: United States/Canada</p> <p><b>LIMITED WARRANTY TO ORIGINAL CONSUMER</b> This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:</p> <p><b>To obtain warranty service:</b></p> <ul style="list-style-type: none"> <li>Visit our customer support portal: <a href="http://www.customersupport123.com">www.customersupport123.com</a></li> <li>Select the brand and model of your device</li> <li>Select "Service Request" and fill out the form to begin your inquiry</li> <li>Exchanges require dated proof of purchase from an authorized retailer</li> </ul> <p>Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.</p> <p><b>Warranty service not provided</b> This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.</p> <p><b>NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.</b></p> <p>Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.</p> <p><b>All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.</b></p> <p align="right">Designed in US Printed in China v1.06-2021</p>	<p align="center"><b>ART+SOUND™</b></p> <p align="center"></p> <p align="center">Instruction Manual <b>Party Rocker Wireless Speaker</b> AR3071</p>
--	---	--	---

<p align="center"><b>Before You Begin...</b></p> <p><b>READ CAREFULLY AND KEEP THIS MANUAL</b></p> <p><b>Customer Support</b> For any questions or problems with your product, please visit our website at <a href="http://customersupport123.com">customersupport123.com</a>.</p> <p><b>⚠ Caution</b> To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.</p> <ul style="list-style-type: none"> <li><b>THIS DEVICE IS NOT A TOY</b>, do NOT allow children or pets to use or play with this device.</li> <li>Do not disassemble, modify, or repair the device.</li> <li>Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.</li> <li>Do not submerge in water.</li> <li>Low power may cause poor Bluetooth connection or sound distortion.</li> <li>Do not overcharge battery.</li> <li>If using with a USB adapter, make sure the adapter is not damaged.</li> <li>Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.</li> </ul> <p><b>In the Box</b></p> <ul style="list-style-type: none"> <li>AR3071 - <b>Wireless Speaker</b> (x1)</li> <li>USB Charging Cable (x1)</li> <li>User Manual (x1)</li> </ul>	<p align="center"><b>Location of Controls</b></p> <p align="center"></p> <p><b>[MODE] Button:</b> Change Input Mode</p> <p><b>[⏸] Button:</b> Pause/resume playback</p> <p><b>[⏮] and [⏭]:</b> Press: Skip tracks <b>Press + Hold:</b> Adjust volume</p>	<p align="center"><b>Getting Started</b></p> <p><b>Charging the Speaker</b> Plug the small connector of the supplied USB charging cable into the charging port on the top of the speaker. Plug the large connector into the USB port on a computer, or into a <b>5V USB adapter</b> (<i>not included</i>) and plug into an electrical outlet.</p> <p>The LED indicator, which can be seen through the AUX input port, will <b>turn RED</b> while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.</p> <p><b>Powering ON/OFF</b></p> <ul style="list-style-type: none"> <li>Move the <b>[Power]</b> Switch to the ON position to power ON. A tone will be heard, and the speaker will enter Bluetooth pairing mode. It will automatically re-pair to any nearby, previously-paired device with Bluetooth enabled.</li> <li>Move the <b>[Power]</b> switch to the OFF position to power OFF.</li> </ul> <p><b>Playing Music</b> To play music on the speaker, you must be paired to a Bluetooth-enabled device, connected with an aux cable, or have a USB device or TF card inserted.</p> <p><b>Adjusting Volume</b> In all modes, volume can be adjusted by pressing and holding the [ <b>⏮</b> ] and [ <b>⏭</b> ] buttons on the front of the speaker.</p> <p>In AUX and Bluetooth modes, volume can also be controlled by your connected device.</p>	<p><b>Changing Input Modes</b> Press the <b>[MODE]</b> button on the front of the speaker to switch input modes.</p> <p>You must have an AUX cable connected or TF card or USB device inserted to switch to AUX, TF or USB input mode.</p> <p><b>Bluetooth Pairing</b></p> <ol style="list-style-type: none"> <li>Power the speaker ON. A tone will be heard and the LED indicator will <b>quickly flash BLUE</b>.</li> <li>Set your mobile device to search for Bluetooth devices. When it appears, select <b>AR3071</b> from the list of found devices.</li> <li>After a successful pairing, a tone will be heard and the LED indicator will <b>slowly flash BLUE</b>.</li> </ol> <p>In Bluetooth mode, playback and volume can be adjusted by the controls on the front of the speaker, or by the controls on your paired device. The LED indicator will slowly flash BLUE when you begin playing audio.</p> <ul style="list-style-type: none"> <li>Press the [ <b>⏸</b> ] button to pause and resume playback.</li> <li>Press the [ <b>⏮</b> ] and [ <b>⏭</b> ] buttons to skip tracks.</li> </ul> <p><b>LED Indicator</b></p> <ul style="list-style-type: none"> <li> <b>Quickly Flashing BLUE</b>: Speaker is ready to pair</li> <li> <b>Slowly Flashing BLUE</b>: Speaker is paired</li> <li> <b>Solid RED</b>: Speaker is charging</li> <li> <b>OFF</b>: Speaker is fully charged</li> </ul>
---	--	--	--