

User Manual

AR3780

(Fold Inward)

(Back Cover)

(Front Cover)

Controlling Playback & Volume (Bluetooth Only)

- Press the **[O/M]** button on the soundbar to pause/resume media playback.
- Press and hold the **[M/+]** and **[M/-]** buttons to adjust volume.
- Press the **[M/+]** and **[M/-]** buttons to skip tracks.

Using the Remote Control

- **[O]** Button: Enter/leave standby mode
- **[M]** Button: Change input mode
- **[M]** Button: Pause/resume playback
- **[M/+]** Button: Skip to next track
- **[M/-]** Button: Skip to previous track
- **[M]** Button: Mute/unmute volume
- **[VOL+]** Button: Increase volume
- **[VOL-]** Button: Decrease volume



Compliance Information

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Rating Label Definitions

Direct current symbol.

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under license.

Warranty Information

90-Day Limited Warranty

Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com
- Select the brand and model of your device
- Select "Service Request" and fill out the form to begin your inquiry
- Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

ART+SOUND™

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Designed in US
Printed in China
v1. 07-2021

ART+SOUND™



AR3780
37" HD Bluetooth Soundbar
User Manual

Before You Begin...

READ CAREFULLY AND KEEP THIS MANUAL

Customer Support

For any questions or problems with your product, please visit our website at customersupport123.com.

Caution


To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- **Do not disassemble, modify, or repair the device.**
- Do not expose the device to extreme temperatures (heat or cold), open flames, wet, or humid conditions.
- **Do not submerge in water.**
- Do not allow any ports or connectors of the device or its accessories to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- To re-boot the device, please unplug the power adapter and wait at least 5 seconds before plugging back in.

In the Box

- AR3780 - Wireless Soundbar (x1)
- 12V/1.5A Power Adapter (x1)
- Remote Control (x1)
- Mounting Screws (x2)
- Instruction Manual (x1)

Location of Controls

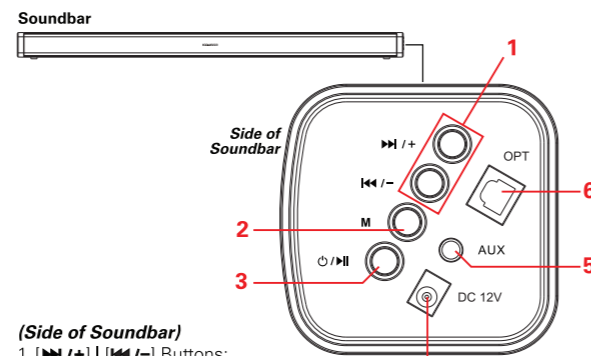

(Side of Soundbar)

1. **[M/+]** / **[M/-]** Buttons:
Press: Skip tracks
Press + hold: Adjust volume
2. **[M]** Button:
Press: Change input mode
3. **[O/M]** Button:
Press: Pause/resume playback
Press + hold: Power soundbar ON/OFF
4. Soundbar DC 5V Power Input
5. 3.5 mm Auxiliary Input Port
6. Optical Input Port

Getting Started

Wall Mounting the Soundbar


1. Remove the speaker and its contents from packaging.
2. Using a pencil, mark two spots on a wall measuring 33.8 inches apart.



3. If installing to a wooden surface, drive or drill a mounting screw into the wall at each marked location. If installing to drywall or a brick surface, you may need to install plastic anchors to properly secure the mounting screws.
4. Place and hang the speaker from its mounting holes on the back onto the installed mounting screws.

Connecting to Power

Insert the pin of the supplied power adapter into the DC power input on the side of the soundbar. Plug the adapter into an electrical outlet.

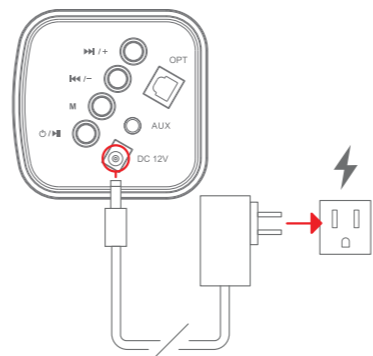

Powering ON/OFF

- Press and hold the **[O/M]** button on the soundbar to power ON. A tone will be heard and the soundbar will automatically enter Bluetooth mode.
- Press and hold the **[O/M]** button again to power OFF.

Changing Input Modes

- Press the **[M]** button to change between Bluetooth, Optical, and 3.5 mm AUX audio inputs.
- When plugging in a 3.5 mm or optical connector to the speaker, the speaker should automatically switch to the correct mode. If it does not, press the **[M]** button to switch to the correct mode.

Adjusting Volume & Playback

- In Bluetooth mode, skip tracks by pressing the **[M/+]** and **[M/-]** buttons on the side of the soundbar, the **[M/+]** and **[M/-]** buttons on the remote control, or the controls on your paired device.
- In all modes, adjust volume by pressing + holding the **[M/+]** and **[M/-]** buttons on the side of the soundbar, or by using the controls on your connected device.
- In AUX and optical modes, all playback will be controlled by the connected device.

Bluetooth Pairing

1. Power the soundbar ON. The soundbar will enter Bluetooth mode, the LED indicator will quickly flash BLUE.
2. Set your mobile device to search for new Bluetooth devices. When it appears, select **AR3780** from the list of found devices.
3. After a successful pairing, a tone will be heard and you will be able to play audio off of your device.

Using the 3.5 mm AUX Input

Plug the 3.5 mm connector of your audio-playing device (*not included*) into the 3.5 mm auxiliary audio input jack on the side of the soundbar.

The LED indicator will turn BLUE when the AUX input is in use.

In AUX mode, all playback (play/pause, skipping tracks) will be controlled by the connected audio-playing device. Volume can be controlled by the connected device, the remote control, or the buttons on the soundbar.

Using the Optical (OPT) Input Port

Plug the optical connector of your audio-playing device (*not included*) into the optical (OPT) input port on the side of the soundbar.

The LED indicator will turn RED when the optical (OPT) input is in use.

In OPT mode, all playback (play/pause, skipping tracks) will be controlled by the connected audio-playing device. Volume can be controlled by the connected device, the remote control, or the buttons on the soundbar.