# (Fold Inward) – – – –

# (Back Cover)

# (Front Cover)

## TF Card & USB Device Input

To use a TF card, insert the TF card into the TF card input port on the speaker with the metal contacts facing down, and push in until it clicks.

To use a USB device, such as a USB flash drive containing audio files, insert the USB device into the USB port on the speaker.

Note: You must have a TF card or USB device inserted to switch to TF or USB input mode.

Change input modes until you enter TF or USB mode. The speaker will automatically begin playing music off the device.

In TF card mode, control playback with the controls on the speaker. Press the center of the Playback Dial to pause and resume playback. • Press the Playback Dial to the left and to the right to skip tracks.

Using the FM Radio Change input modes until you enter FM radio mode.

In FM radio mode, playback will be controlled by the buttons on the front of the speaker.Press the center of the Playback Dial to start or stop scanning and saving

available radio stations. The radio will make a complete scan and save of all nearby radio stations.

• Press the Playback Dial to the left and to the right to skip through saved stations.

**Compliance Information** his device complies with Part 15 of the FCC Rules.

# Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pur-suant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment of penetate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarante that the interference will no cocur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:

FCC Information

to high to (140°F)

Rating Label





BC This symbol signifies and declares that this equipment has battery charging which com California CEC and energy efficiency. Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology

FC This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

# 90-Day Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER duct as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original er purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service: Visit our customer support portal: www.customersupport123.com Select the brand and model of your device Select: "Service Request: and III out the form to begin your inquiry Exchanges require dated proof of purchase from an authorized tetailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the a claim with the carrier.

# Warranty service not provided This warranty does not cover da

any service not privided warran'ty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, horized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any horized person opens, afters or repairs this product. All products being returned to the authorized service center for repair must be by packaged.

NO WARRANTES WHETHER EXPRESS OR IMPLIED. INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERICHANTABILITY OR FITNESS FOR A PRATICILLAR PURPOSE, OTHER THANTHOSE EXPRESSIV DESCRIBED ABOVE SHALL APPLY DISTRIBUTOR FUTHER DISCLAMSA LL WARRANTES AFTER THE EXPRESS WARRANTY PROLOT STATED ABOVE AND CHARLE APPLY DISTRIBUTOR FUTHER DISCLAMSA LL WARRANTES AFTER THE EXPRESS WARRANTY PROLOT STATED ABOVE AN OTHER EXPRESS WARRANTY OR GUARANTY OR GIVEN BY ANY PRESON, FIRM OR ENTITY WITH RESPECTTO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. PREAM, REFLACEMENT OR REFUND OF THE ORIGINAL PURCHASE PRICE - TO STRIBUTORS SOLE DISCRETION - ARE THE DISCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL. DIRECT.

AL, DIRECT SPECIAL, PUNITVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, S, SWANGS, DATA OR RECOROS) CAUSED BYTHE USE, MISUEE OR INAULITYTO USE THE PRODUCT EXCEPT AS STATED ON OTHER WARFANTIES SHALL APPY NOTWIT-STANDING THE FOREGONG, CONSUMER'S RECOVERY AGAINST TOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTIOR. THIS WARFANTY SHALL NOT O ANOTHE OTHER THAN THE ORIGINAL CONSUMER TWO PURCHASED THE RODUCT AND SOLT TRANSFERABLE.





## AR9530 Wireless Boombox User Manual

# Before You Begin...

Customer Support

or any questions or problems with your product, please visit our website at uthernTelecom.com and click on Product Support.

### ▲ Caution

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies. • THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with

this device.


- Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not submerge in water.

Low power may cause poor Bluetooth connection or sound distortion.

- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged. • Do not allow the USB port or the connectors of the supplied USB cable to be
- exposed to dust or water, or to come into contact with any conductive materials
- such as liquids, metallic powders, etc. • The speaker should not be disposed of with regular household waste. Please
- consult the local authorities on the correct way to dispose of this device.

### In the Box

 AR9530 - Wireless Speaker (x1) 2-in-1 Charging & Auxiliary Cable (x1)
User Manual (x1)

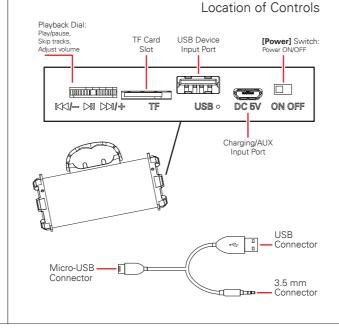

# Charging the Speaker

Plug the micro-USB connector of the supplied USB charging cable into the charging/AUX port on the side of the speaker. Plug the USB connector into the USB port on a computer, or into a 5V USB adapter (not included) and plug into an electrical outlet.

The charging LED indicator will turn RED while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

Powering ON/OFF • Move the [Power] switch on the side of the speaker to power ON and OFF. When powered ON, the speaker will enter Bluetooth pairing mode, and will
 automatically re-pair to any available previously-paired device nearby.

## Adjusting Volume

In all modes, overall volume can be adjusted with the Playback Dial on the side of the speaker. In AUX and Bluetooth modes, volume can also be controlled by your connected device

## Press + hold the Playback Dial to the left side to decrease volume.

Adjusting Playback In Bluetooth, AUX, TF and USB modes, playback can be controlled by the Playback Dial on the side of the speaker.

 Press the center of the Playback Dial to pause and resume playback Press the Playback Dial to the left side to skip to the previous track. • Press the Playback Dial to the **right** side to skip to the **next** track.

Press + hold the Playback Dial to the right side to increase volume.

Press and hold the Playback Dial on the side of the speaker to switch input modes. ATF card or USB device must be inserted or connected to switch to these

Bluetooth Pairing 1. Power the speaker ON. A voice will be heard and the speaker will enter Bluetooth pairing mode. The LED indicator will **turn solid BLUE**. 2. Set your mobile device to search for Bluetooth devices. When the list appears,

In Bluetooth mode, playback and volume can be adjusted by the controls on the side of the speaker, or by the controls on your paired device. Press the center of the Playback Dial to pause and resume playback.
Press the Playback Dial to the left and to the right to skip tracks.

### Using the AUX Input

Insert the micro-USB connector of the included 2-in-1 cable into the charging/AUX input port on the side of the speaker. Insert the 3.5 mm connector into the headphone jack or 3.5 mm aux output port on your media-playing device.

### Switch input modes until you reach AUX mode.

In AUX mode, all playback will be controlled by your connected device.

select **AR9530** from the found devices. 3. After a successful pairing, a voice will be heard and you will be able to play music on the speaker.

modes.

Getting Started Changing Input Modes

# of the following measures: - Recrient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/IV technician for help. This device complex with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Radiation Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warrancies, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that use form attack the table previous the regime of the constraint of t

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Designed in US Printed in China v1. 09-2021