

User Manual

ARBT456

Using a TF Card

While the speaker is powered off, insert a TF card into the TF card slot. A voice will be heard, indicating that the speaker is in TF card mode and will automatically play from the TF card.

- Skip tracks using the [⏮] and [⏭] buttons on the speaker.
- Pause and resume playback with the [⏸] button.

Note: TF cards can only be inserted in one direction. If the card does not easily slide and “click” into place, remove, turn it around, and re-insert into the slot.

Using the USB Audio Input

Plug the USB connector of your music-playing device into the USB audio input port on the speaker. If the speaker does not automatically switch to USB Input Mode, press the [M] button until a voice indicates USB mode.

- Skip tracks using the [⏮] and [⏭] buttons on the speaker.
- Pause and resume playback with the [⏸] button.

Using the Headphone Jack

To listen using headphones in any mode, plug the 3.5 mm connector of your headphones (not included) into the headphone jack on the speaker.

Compliance Information

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

This device complies with Industry Canada license – exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. The digital apparatus complies with Canadian CAN ICES - 3 (B)/NMB - 3 (B). The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

Rating Label

--- Direct current symbol.

Definitions

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., used under license.



Warranty Information

90-Day Limited Warranty

Territory: United States

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com and select "Support".

• Select the brand, fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.


NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China
v1. 03/2022

ART+SOUND™

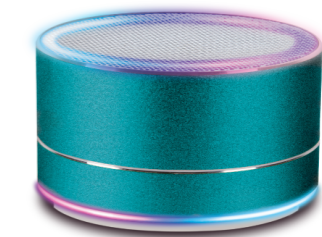

Instruction Manual
METALLIC LED
Portable Wireless Speaker
ARBT456

Before You Begin...

Customer Support

For any questions or problems with your product, please visit our website at customersupport123.com.

⚠ Caution


To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- **Do not disassemble, modify, or repair the device.**
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- **Do not submerge in water.**
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

In the Box

- ARBT456 - **Wireless Speaker** (x1)
- Micro-USB Charging Cable (x1)
- Instruction Manual (x1)

Location of Controls

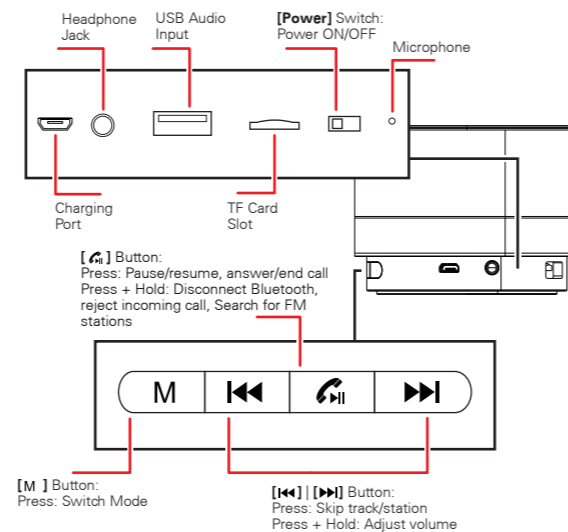

Getting Started

Charging the Speaker

Plug the small connector of the included USB charging cable into the USB charging port on the side of the speaker. Plug the large connector into the USB port on your computer, a USB charging device, or a 5V USB charging adapter (not included) and plug into an electrical outlet.

The LED indicator will **turn RED** while charging. On low power, a tone will be periodically heard, indicating that the speaker should be charged.

Powering ON/OFF

Make sure that the speaker has been charged.

- Move the [Power] switch to the ON position. A tone will be heard and the speaker will enter Bluetooth pairing mode. The speaker will automatically re-pair to any nearby, previously-paired device.
- Move the [Power] switch to the OFF position to power OFF.

Changing Modes

Press the [M] button to switch between input modes. A voice will be heard indicating the current mode. You must have an USB device connected to switch USB mode, or have a TF card inserted to switch to TF Card mode.

Adjusting Volume & Playback

- Press and hold the [⏮] and [⏭] buttons on the speaker to adjust volume, or use the controls on a connected device.
- Press the [⏮] and [⏭] buttons on the speaker to skip tracks or stations in Bluetooth mode, FM Radio mode, USB mode and TF card mode.
- Press the [⏸] button to pause and resume playback.

Connecting with Bluetooth

1. Power the speaker ON. A voice will be heard and the speaker's light ring will flash.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **ARBT456** from the list of found devices.
3. After a successful pairing, a tone will be heard and the speaker's light ring will continue to flash.

In Bluetooth mode, playback and volume adjustment can be controlled with the buttons on the speaker or with the controls on your paired device.

Answering/Ending Phone Calls (Bluetooth Only)

- Press the [⏸] button to answer an incoming phone call. Press again to end the call.
- Long press the [⏸] button to reject an incoming call.
- Double press the [⏸] button to redial the last outgoing number.

Using the FM Radio

Press the [M] button until you hear a voice indicating FM mode.

- Press the [⏸] button to search for stations.
- Press the [⏮] and [⏭] buttons to skip stations.

For best reception, insert the small connector of the supplied USB charging cable into the USB charging port on the side of the speaker but **do not plug the large connector into anything**. The cable will operate as an antenna.

Position the speaker and the cable so that it has clear line of sight to the sky.