(Fold Inward) – – – –

Re-Pairing the Earbuds

The ARTWS110 earbuds should pair to each other automatically when powered ON. If the earbuds come un-paired from each other, or only one earbud pairs to your device, try following these instructions to re-pair:

- Go to your device's Bluetooth settings and find the earbuds on the list of Bluetooth devices. Tap to manually "Forget" the earbud(s), then turn your device's Bluetooth OFF.
- 2. Place the earbuds in their case to power them OFF, then remove them to power them ON again. 3. After a moment, the earbuds should automatically re-pair to each other. A voice
- will be heard indicating that they have paired to each other. 4. Once re-paired, you can now pair the earbuds to your mobile device. Turn your
- device's Bluetooth back on again. Follow the instructions in the Bluetooth Pairing section of this manual to try pairing again.v

Compliance Information FCC Information This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pur-suant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will no cocur in a particular installed of this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

or the following measures: • Recrient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced redio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

WARNING Li-Ion Battery Inside This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

This symbol represents FCC Declaration of Conformity and compliance.

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

(BC) This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency. This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG Inc. and any use of such marks by Southern Telecom is under license.

Direct current symbol.

Front of Case

Rating Label Definitions

90-day Limited Warranty Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

Warranty Information

To obtain warranty service: ort123 com • Visit our customer support portai: www.customersupport123.com
• Select the brand and model of your device
• Select Service Request and fill out the form to begin your inquiry
• Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warrant yearse not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

products being returned to the authorized service center for repair must be suitably packaged. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTES OF MERCHANTABILITY OR FITNESS FOR A PARTICULARS, CHIER THAN THOSE EXPRESSIV DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT OR REFUND OF THE ORIGINAL, PURCHASE PRICE - AT DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTIAL DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SATINGERS BE LIABLE FOR ANY INCIDENTIAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR STATED HEREIN, NO OTHER WARRANTES SHALL APPLY NOTWITHSTANDING THE FOREGOLING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT EXCEPT AS STATED HEREIN, NO OTHER WARRANTES SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTYS SHALL NOT EXCEED THE PURCHASE PRICE OF THE ORIGINAL CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE ORIGINAL CONSUMER'S NECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE ORIGINAL CONSUMER'S NECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE ORIGINAL CONSUMER'S NECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE ORIGINAL CONSUMER'S NECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE ORIGINAL CONSUMER'S NECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE ORIGINAL CONSUMER'S NECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or conse-

Before You Begin...

READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE

▲Caution

- To ensure safe and proper use, read all safety information before using the device. Only use with

- To ensure safe and proper use, read all safety information before using the device. Only use with manufacture-approved batteries, chargers, accessories, and supplies. THIS DEVICE IS NOT ATOY, do NOT allow children or pets to use or play with this device. Do not disassemble, modify, or repair the device. Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions. Do not submerge in water. Low power may cause poor Bluetooth connection or sound distortion. Do not overcharge battery. If using with a USB adpater, make sure the adapter is not damaged. Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc. The earbuds and case contain built-in batteries, and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

Customer Support

For any questions or problems with your product, please visit our website at customersupport123.com

In the Box

- ARTWS110 True Wireless Earbuds (x1)
- Charging Case (x1)
- Silicone Case (x1)
- Carabiner (x1)
- Silicone Safety Strap (x1) USB Charging Cable (x1)
- User Manual (x1)

[Power] **0**– Micro-USB Earbud Charging LED Indicator Case Charging LED Indicator Charging Port . **0** ~ LED Indicator [Multi] Button: Press + Hold: Power ON/OFF, Reject incoming call Press: Pause/resume playback, Answer/end phone call 2x Press: Adjust volume 3x Press: Dial last outgoing number 4x Press: Activate voice assistant

Location of Controls

Back of Case

Charging the Case

Insert the small connector of the supplied micro-USB charging cable into the micro-USB charging port on the back of the charging case. Insert the large ector into a USB power source, such as the USB port on a computer, or into a 5V USB adapter (not included) and plug into a wall socket.

The case-charging LED indicator will flash RED while charging, and will turn solid RED when fully charged.

Charging the Earbuds Use the included charging case to protect and charge the earbuds as described below.

- 1. Make sure that the case is fully charged. 2. Open the cover of the charging case and place the earbuds into the correct charging ports. They should easily "clip" into place
- and feel secure. 3. The earbuds will automatically begin charging when placed into the case. The earbuds' LED indicators will **turn** *RED* while charging and turn BLUE when fully charged.

Note: A tone will be heard when the earbuds are low on battery. Please recharge when this happens.

Powering ON/OFF

 
[Multi] buttons device after 2 minutes.

Adjusting Volume & Playback


controls on the earbuds below.


- track previous track

•• (0)




Getting Started

 

 

(Back Cover)

(Front Cover)

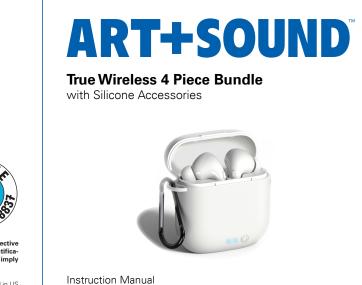



All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identifica-tion purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Designed in US Printed in China v1. 10-2021

• The earbuds will automatically power ON when removed from their case, and power OFF when placed into their case.

• When powered ON, the earbuds will automatically pair to each other and then enter Bluetooth pairing mode. They may automatically re-pair to a

The earbuds can also be powered ON and OFF by pressing and holding the

 $\ensuremath{\textbf{Note}}\xspace$ A tone will automatically power OFF if they do not connect to a Bluetooth

To listen to music and talk on the phone using your True Wireless Earbuds, you must pair them to a Bluetooth-enabled device. If you are pairing the device for the first time, please see the Bluetooth Pairing section on the next page.

Once paired, playback can be controlled through your paired device, or with the

• 1x press the [Multi] button on either earbud to pause or resume playback. • Short press + hold the [Multi] button on the main earbud to skip to the next

• Short press + hold the [Multi] button on the auxiliary earbud to skip to the

Bluetooth Pairing

ARTWS110

- 1. Power the earbuds ON. Both of their LED indicators will *flash RED and BLUE*. After a moment, a voice will be heard on the earbuds indicating that they have paired to each other. The LED indicator on the main earbud will *flash RED and*
- BLUE. The LED indicator on the auxiliary earbud will slowly flash BLUE. 3. Set your mobile device to search for Bluetooth devices. When it appears, select ARTWS110 from the list of found devices.
- 4. Once successfully paired to your device, a voice will be heard and the LED indicators on both earbuds will turn OFE
- **Pairing Issues?** See the **Re-Pairing the Earbuds** section on the next page.

Answering/Ending Phone Calls

When paired, you can control your paired device's phone functions using your device, or the controls on the earbuds listed below.

- 1x press the [Multi] button on either earbud to answer an incoming phone
- 1x press the [Multi] button on either earbud to end a phone call.
 Press and hold the [Multi] button on either earbud to reject an incoming call.
- 3x press the [Multi] button on either earbud to redial the last outgoing phone number dialed.

Activating Voice Assistant

If your Bluetooth-paired device has a Voice Assistant, you can activate it using the controls on the earbuds.

• 4x press the [Multi] button on either earbud to activate Voice Assistant.