(Fold Inward) - - - - **▶**

(Back Cover)

(Front Cover)

TF Card Input

Insert a micro SD/TF card into the TF card input port on the headphones.

Change input modes until you enter TF card mode. The headphones will automatically begin playing music off the device.

In TF card mode, control playback with the controls on the speaker.

- Press the [仂/▶ii] button to pause and resume playback.
 Press + hold the [V+/▶i] and [I◄/V-] buttons to skip tracks.

Using the FM Radio

Change input modes until you enter FM radio mode.

stations. If it is not stopped, the radio will make a complete scan and save of all nearby radio stations.

• Press+ hold the [V+/≫I] and [I≪/V-] buttons to skip through saved stations.

When connected to a phone via Bluetooth, phone functions can be used on the headphones

• Press the [] button to answer an incoming call. Press again to end the call. • Press + hold the [] button to reject an incoming call.

Compliance Information

FCC Information This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment penerates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference tradio communications. However, there is no guarantee that interference will not occur in a particular installation, if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received,

exposure condition with routine and the state of the stat



=== Direct current symbol.



BC This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.

Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology.

Warranty Information

90-Day Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

- To obtain warranty service:

 *Visit our customer support portal: www.customersupport123.com

 *Select the braid and model of your device

 *Select "Service Request" and "Ill out the form to begin your inquiry

 *Exchanges require dated proof of purchase from an authorized retailer

NO WARRANTIES OF SILLING PROBLEMS OF MPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EVERESSLY DESCRIBED ABOVE SHALL APPLY DISTRIBUTIOR FURTHER DEVELOUS HARMANT PERIOD STATED ABOVE, NO OTHER EVERESS WARRANTY OR GUARANT GUEND BY ANY PERSON, FIRM OR BUTTLY WITH RESPECT TO THE PRODUCT SHALL BE BRINNED ON DISTRIBUTIOR REPAIR. REPLACEMENT OR REPUND OTHER OBTAINED VIRTURE PRICE. AT DISTRIBUTOR'S SOLE DISCRETION. ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIBALE FOR ANY INCIDENTAL, DIRECT INDIRECT SPECIAL, PUNITIVE OR CONSCIOURNIAL DIAMAGES (SUCH AS, BUT) NOT LIMITED TO, DAMAGES FOR LOSS OF PROFTIS, BUSINESS, SAWINS, DATA OR RECORDS CAUSED BYTHE USE. MUSIC SECOND THE PRODUCT SECOPT AS STATED HEREIN NO THEN WARRANTIES SHALL APPLY NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCRED THAT HERE PROPOLET SUSTRIBUTOR SHALL NOT EXCRED THAT HERE PROPOLET SUSPENSIONAL STATEMENT AND THE PURPORMENT STANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCRED THAT HAVE THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT SHAWBRARNITY SHALL NOT EXCRED THAT HAVE THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT SHAWBRARNITS SHALL NOT EXCRED THAT THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOTTRANSFERBLE.

Designed in US Printed in China v1. 07-2021

Getting Started

ART+SOUND



LED Light-Up Kitty-Cat Headphones

Before You Begin...

READ CAREFULLY AND KEEP THIS MANUAL

Customer Support For any questions or problems with your product, please visit our website at customersupport123.com

⚠ Caution

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.


- THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with
- this device.

 Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not submerge in water.
 Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
 If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.

In the Box

- ASA106 Wireless Headphones (x1)
 USB Charging Cable (x1)
- User Manual (x1)

Location of Controls

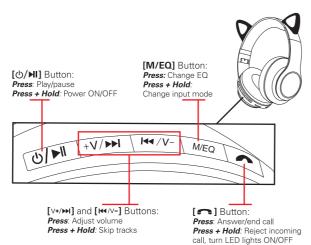

Charging the Headphones

Plug the small connector of the supplied USB charging cable into the charging port on the headphones. Plug the large connector into a USB power source, such as the USB port on a computer, or a **5V USB wall adapter** (not included).

When the headphones are low on power, a tone will be heard indicating that it needs to be recharged.

Powering ON/OFF

- Press + hold the [७/▶||] button for 2 seconds to power ON. A tone will be heard, and the headphones will enter Bluetooth pairing mode. They will automatically re-pair to any nearby, previously-paired device with Bluetooth
- Press + hold the [₺/▶II] button for 3 seconds to power OFF.

Adjusting Volume
• Press the [v+/▶+] and [I◄/v-] buttons to adjust volume.

Using the LED Lights

- The built-in LED lights will automatically turn on when the headphones are powered ON/OFF.
- Press + hold the [] button to turn the LED lights ON/OFF while the headphones are powered on.

Press the [M/EQ] button to change between EQ modes (normal, pop, rock,

Changing Input Modes

- Press + hold the [M/EQ] button to switch input modes.
- You must have an AUX cable connected or TF/micro SD card inserted to switch to AUX or TF input mode.

- Bluetooth Pairing
 1. Power the headphones ON. A tone will be heard, the LED indicator will flash
- RED and BLUE, and the headphones will enter Bluetooth pairing mode. 2. Set your mobile device to search for Bluetooth devices. When it appears, select **ASA106** from the list of found devices.

 3. After a successful pairing, a tone will be heard, the LED indicator will turn solid
- BLUE, and you will be able to play music on the headphones. In Bluetooth mode, playback and volume can be adjusted by the controls on the

front of the speaker, or by the controls on your paired device.

- Press the [♂/▶II] button to pause and resume playback.
 Press + hold the [V+/▶I] and [I◄/V-] buttons to skip tracks.

Using the 3.5 mm AUX Input

Insert one connector of a 3.5 mm auxiliary cable (not included) into the 3.5 mm auxiliary input port on the headphones.

Insert the other connector into the headphone jack or 3.5 mm aux output port on your media-playing device. Switch input modes until you reach AUX mode.

In AUX mode, all playback will be controlled by your connected device.

Instructions continued on the next page.