

asora

Distributed by:
1616 Holdings, Inc.
701 Market Street, Suite 200
Philadelphia, PA 19106
Made in China



TXSMG1100WH



Tracking Code : SOO40019

Printed in China
v1. 04-2019

asora

Ergonomic Massage Wand

Instructions

TXSMG1100

Questions & Support

If you have any questions or problems concerning this product, please visit our website at SouthernTelecom.com and click on **Product Support**.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

NOT Intended for Medical Use

This product is designed as a non-professional device to soothe tired and aching muscles. It is not intended to be a substitute for medical attention. If your ailments persist or worsen after use, contact your doctor immediately.

General Warnings

Please consult your doctor prior to using this product, if

- You are pregnant
- You have a pacemaker
- You have any concerns regarding your health
- **THIS IS NOT A TOY, please keep away from children**
- Keep away from water and extreme temperatures
- Never leave the appliance operating unattended. Always unplug when not in use
- Do NOT reach for a unit that has fallen into water. Unplug immediately
- Do not operate after taking pain killers, sedatives or alcohol
- This product should NEVER be used by any individual suffering from any physical ailment that would limit the user's capacity to operate the controls, or who has sensory deficiencies in the lower half of the body
- Do not operate for more than 15 minutes continuously
- Do not operate under a blanket or pillow
- Extended use of the product can lead to the product's excessive heating and may cause damage to the product, its surroundings, or bodily harm. Should this occur, discontinue use and allow the unit to cool before operating

WARNING: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly, and always follow the product and battery manufacturers' instructions.
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- 3) Always remove weak or dead batteries from the product.
- 4) Remove battery if product is left unused for a long period of time.

Installing Batteries

This massager requires 4x AA-sized alkaline batteries to operate.

1. Remove the cover of the battery compartment.
2. Insert 4 AA-sized alkaline batteries into the compartment following the polarity diagram.
3. Put the battery compartment cover back on.

Using the Massager

- Once the batteries are installed, use the **[Power]** switch on the massager to power the massager ON.
- The massager has a high and low setting.
- Gently press the massager to aching or sore areas.