

## Legal Information

### READ CAREFULLY AND KEEP THIS MANUAL

FCC Information  
FCC ID: 2AG5CLSSOUND

This device complies with Part 15 of the FCC Rules.

**Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Radiation Exposure Information

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

#### WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



#### Rating Label Definitions

— Direct current symbol.

This symbol signifies that the product must not be discarded as household waste and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

This symbol signifies and declares that this equipment complies with battery charging which complies with California CEC and energy efficiency.

## 90-Day Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may return it to the authorized service center for repair or exchange within ninety (90) days from your original date of purchase.

#### TO OBTAIN WARRANTY SERVICE:

- Go to our website portal to receive an SRO number.
- Provide proof of the date of purchase within the package (dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Customer Service Dept. 36  
c/o Southern Telecom  
400 Kennedy Drive  
Sayreville NJ 08872

Should have any questions or problems concerning this product, please visit our website at [SouthernTelecom.com](http://SouthernTelecom.com) and click on **Product Support**.

#### Warranty Service Not Provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

#### Limitation of Warranty

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM, INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

# SOUND BEATS

# SOUND BEATS

## True Wireless Earbuds



### User Manual ASOTV-TWS-1

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China  
Designed in USA  
v2.12-2018

## Before You Begin...

### CAUTION

- **THIS IS NOT A TOY, Please keep away from children and pets**
- Keep away from water and extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions
- Low power may cause poor Bluetooth connection or sound distortion
- Do not overcharge the battery
- Do not expose the unit to extreme temperatures
- Do not submerge in water
- Do not open this product or attempt to repair the unit yourself should it not be working

### Questions & Customer Support

For questions, troubleshooting or any other assistance, please visit our website at [SouthernTelecom.com](http://SouthernTelecom.com) and click on **Product Support**.


### In the Box

- ASOTV-TWS-1 - **True Wireless Earbuds** (x1)
- Charging Case (x1)
- Micro-USB Charging Cable (x1)
- User Manual (x1)

### Location of Controls

(Earbuds)

1. **[Multi]** Button:
  - (Long Press) Power ON/OFF
  - (Double Quick Press) Redial last phone number
  - (Quick Press) Pause/resume playback, Answer/end phone call
2. Earbud LED Indicator
3. Case-Charging LED Indicator
4. Earbud-Charging LED Indicator
5. **[⏻]** Button: Enable/disable earbud charging
6. Micro-USB Charging Port

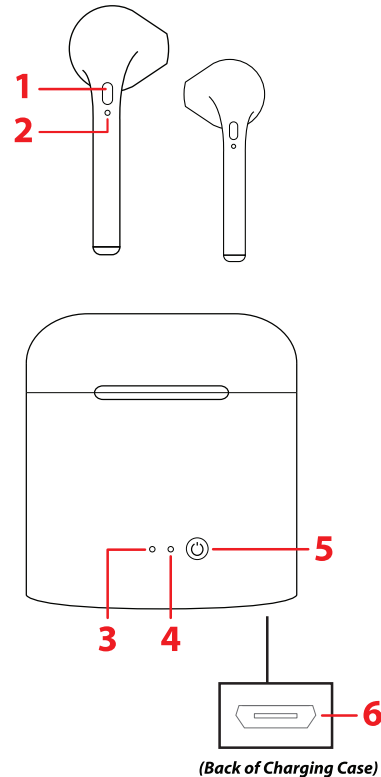

## Getting Started

### Charging the Case


Insert the small connector of the supplied micro-USB charging cable into the micro-USB charging port on the back of the charging case. Insert the large connector into the USB port on a computer, a USB charging device, or **5V USB adapter** (not included) and plug into a wall socket.

The case-charging LED indicator will **flash RED** while charging and **turn solid RED** when fully charged.

### Charging the Earbuds

Make sure that the charging case is fully charged.

Open the charging case and insert the stem of each earbud into the case's charging port. Gently press down until they "clip" into place and feel secure.

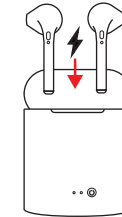

Press the **[⏻]** button to enable charging. The earbud-charging LED indicator on the case will **turn BLUE**. The earbud LED indicators will **turn RED** while charging and **turn BLUE** when fully charged.

### Powering ON/OFF

- Power the earbuds ON/OFF by long pressing both **[Multi]** buttons for 3 seconds.
- The earbuds will automatically enter Bluetooth pairing mode.

### Bluetooth Pairing

1. Hold the earbuds close together. Long press the **[Multi]** button on both earbuds until their LED indicators **flash RED and BLUE**.
2. After a moment, a voice will be heard on the earbuds indicating that they are connected. One earbud will **flash RED and BLUE**, the other will **slowly flash BLUE**.
3. Set your mobile device to search for Bluetooth devices. When it appears, select **ASOTV-TWS** from the list of found devices.
4. Once successfully paired, the LED indicators on each earbud will continue to **slowly flash BLUE**.

### Re-Pairing the Earbuds

The **ASOTV-TWS-1** earbuds come automatically paired to each other right out of the box. If the earbuds come un-paired from each other, follow these instructions to re-pair:

1. Go to your device's Bluetooth settings and locate the earbuds on the list of Bluetooth devices. Tap to "Forget" the earbuds.
2. Power both earbuds OFF.
3. Follow the instructions in the **Bluetooth Pairing** section of this user manual to re-pair the earbuds to each other, and to pair to your Bluetooth device.

### Playing Music

To enjoy music wirelessly on your earbuds, make sure they are properly paired to your Bluetooth-enabled device. Once paired, playback is controlled through your paired device.

If you are pairing the device for the first time, please consult the **Bluetooth Pairing** section in the previous column.

### Pause/Resume Music

- Quick press the **[Multi]** button on either earbud to pause media playback.
- Quick press the **[Multi]** button on either earbud to resume media playback.
- Long press either **[Multi]** button for **2 seconds** to skip to the next track.

**NOTE:** Long pressing an earbud's **[Multi]** button for 3 seconds will power the earbud OFF, unpairing the earbuds. If this happens, please consult the **Re-Pairing the Earbuds** section.

### Answering/Ending Phone Calls

- NOTE:** Phone calls will only be heard on one earbud.
- Quick press the **[Multi]** button to answer an incoming phone call.
  - Quick press the **[Multi]** button to end a phone call.
  - Double quick press the **[Multi]** button to redial the last phone number called.
  - Long press either **[Multi]** button to reject an incoming call.