



LED Light Up Basketball Net CPBB201CC

READ CAREFULLY AND KEEP THIS CARD

General Warnings

- Do not use in the rain, sleet or snow. Keep away from water and extreme temperatures. Do not allow batteries to get wet, or dispose of batteries with regular household trash.

Battery Installation

1. Undo the 2 clasps on the net lights' attached battery compartment, and open the compartment.
2. Install 3 AA-sized Alkaline batteries, following the polarity (+/-) diagram. Do not mix old and new batteries, or mix different brands or types of battery.
3. Close the compartment, and lock the 2 clasps.

 
Net Lights Installation

1. Install batteries according to the instructions above.
2. Mount the battery pack to your backboard using the included 3M™ adhesive hook-and-loop fastener.
 - Peel off one side's adhesive, stick on the battery pack. Press + hold for 1 min.
 - Peel off other side's adhesive, stick on desired location. Press + hold for 1 min.
3. Install the net onto your basketball hoop.

Using the Net Lights

- Press the button on the outside of the battery pack to turn the net lights ON.
- Press the button additional times to flip through the different modes, and to turn the lights OFF.
- Switch the lights OFF when not using to save battery.
- The net lights can also be controlled with the included remote control. See backside for details.

Open battery
compartment




Install batteries



Install net



 Tape battery
box




Remote Control Instructions →

Using the Net Lights Remote Control

1. Set up and install the net lights according to the above instructions.
2. Remove the plastic tab sticking out of the bottom of the remote control.
3. Press the remote control buttons to turn the net lights ON/OFF, change colors, and set an automatic shutdown timer.

Remove plastic tab

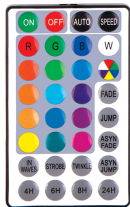

90-Day Limited Warranty

Territory: United States

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com and select "Support".
- Select the brand, fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China
v1. 04-2022