



CIPTON®

LED Light Up
Cornhole Set



Instruction Manual
CPOG102RD3WM

Before You Begin...

READ CAREFULLY AND KEEP THIS MANUAL FOR FUTURE REFERENCE

General Warnings

- Adult supervision required.
- Do not use in the rain, sleet or snow. Keep away from water and extreme temperatures.
- Adult supervision is required when performing any maintenance.
- The bean bags and remote control come with built-in batteries which should not be disposed of with regular household waste. Follow all local laws and regulations in disposing of batteries.
- Do not open these products or attempt to repair the units yourself should they not be working.
- Do not expose the units to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
- Do not submerge in water.

In the Box

- Cornhole Boards (x2)
- Beanbags (Red x4, Blue x4)
- Light-Up Balls (x16)
- Remote Control (x2)

Getting Started

Setting Up the Cornhole Boards

1. Remove the cornhole boards from the box. They will come stuck together with hook-and-loop fasteners. Pull them apart to separate.
2. To use the cornhole boards' built-in lightstrips, you must install batteries. On the undersides of both cornhole boards, undo the clasps on the battery compartments, and pull the covers open.
3. Install 3 AA-sized batteries into each of the compartments. Do not mix old and new batteries, or mix different brands or types of battery.
4. Close the battery compartment covers, and snap the clasps closed.
5. Unfold the legs under the cornhole boards to set up.

The cornhole board lights can be controlled using the remote control, or by pressing the button on the lights' battery pack.


- Press the button on the battery pack to power ON and to change LED light modes (colors and functions).
- Press + hold the button for 3 seconds to power OFF.
- To use the remote control, see the setup instructions below and the diagram on the next page.

Setting Up the Remote Controls

- After installing batteries in the cornhole boards, use the included remote controls to adjust the cornhole board lights.
- The remote controls come with batteries already installed. Pull the tabs marked "PULL" to remove the spacer insulating the batteries.
- The remote control battery can be replaced following the instructions on the back of the remote control. Please replace with a 3V CR2032 coin button cell battery.
- See the diagram on the next page for remote control operation instructions.

Remote Control Operation

Note: Press the "TIME" button on the remote control to set the lights on a 24-hour schedule. They will automatically power OFF after 6 hours, and then power ON again after 18 hours.

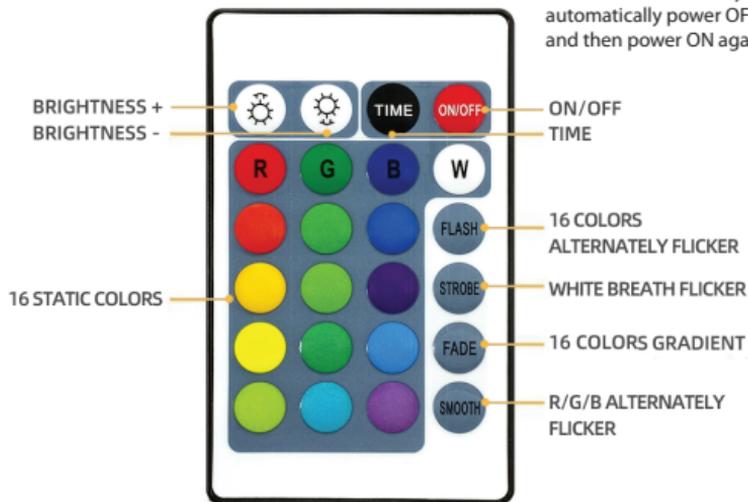


Beanbag Setup

- Each beanbag comes with 2 battery-powered light-up balls inside the bag (batteries included).
- **Before using, check the light-up balls to see if they have any "PULL" tabs to preserve the battery. If they do, remove the tabs to activate.**
- The light-up balls are activated upon impact, and will flash for 12 seconds when activated.
- The light-up balls' batteries can be replaced if needed. Please replace with LR44 Alkaline manganese button batteries.

Playing the Game

Board Setup

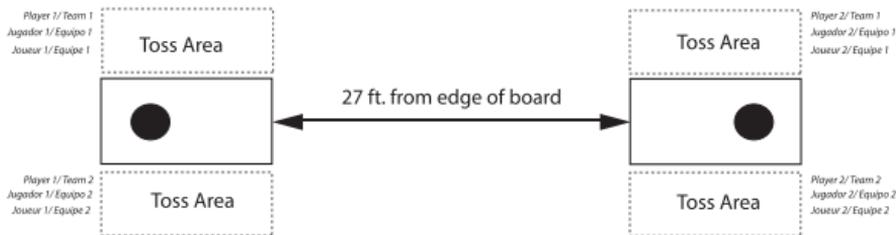

Boards are placed 27 feet (8.23 m) apart, measured from the front edges of the corn hole boards.

Rules of the game:

1. The corn hole bean bag toss game can be played with 2 players, or 4 players in 2 teams. When 4 players are used, teammates stand at opposite ends. They may throw from either side of the box.
2. Each player throws from behind the front of the box they're standing next to. This is the foul line. The player must not pass the foul line, or the player's throw will not count, and the bag will be removed from play.
3. During a turn, play alternates between the two players/teams until each player has tossed their 4 bags. The players/teams alternate shots, beginning with the team that had scored last.
4. Bean bags may be tossed in any way the player chooses, as long as they are tossed individually.
5. Players must not step across the foul line (the front edge of the corn hole board) during a throw, or the throw will not count.

(Game play instructions continued on the next page)

Playing the Game (cont.)

Game Play: For the first round, decide Player 1/Team 1 by tossing a coin, or another suitable method. For subsequent rounds, the team that scored the most points in the previous round is the first to toss in the next round.

Scoring:

3 points = In hole

1 point = On board

0 points = Bean bag misses the hole/board or bounce off the ground

To Win: Play to a score of 21.

Alternative ways to declare a winner:

1. The winning team must lead by at least two points; or
2. Requiring an exact score to win. For example, if a round's score would put the team over 21, that round's score would not be used.

Compliance Information

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product complies with the requirements for a Part 15 of the FCC rules. Although this product complies with the FCC, it may interfere with other devices. If this product is found to interfere with another device, separate the other device and this product.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Rating Label Definitions



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

Warranty Information

90-Day Limited Warranty

Territory: United States

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com
- Select the brand and model of your device
- Select "Service Request" and fill out the form to begin your inquiry
- Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China
Designed in USA
v2. 12-2021