

Brookstone®


airphones®

TRUE WIRELESS EARBUDS




BKH600

 IN THE BOX

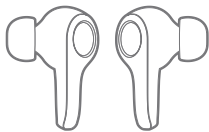


True Wireless Earbuds

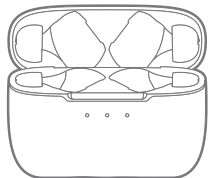 


Charging Case




 
Earbud Tips

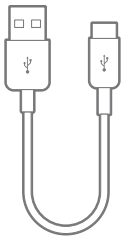

USB Type-C cable

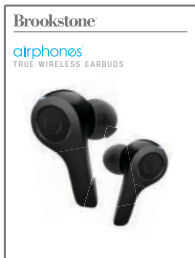 


User Guide

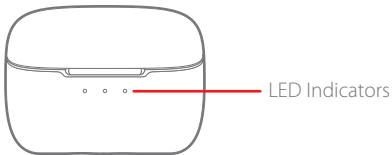  

CHARGING


Charging using the USB Type-C cable

 Insert the USB Type-C cable into the USB port of the charging case as shown below and connect the other end to any USB Charger or charging device. The Charging Case's LED indicators will flash while charging and become solid when fully charged.

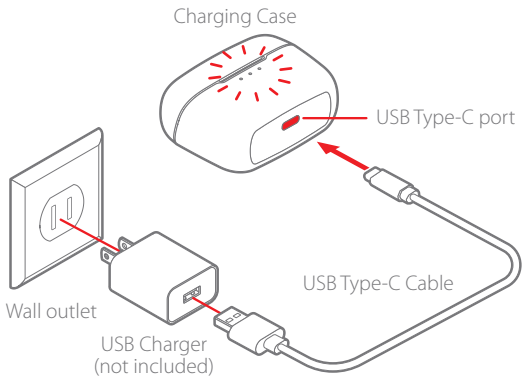

Qi Charging

 Wirelessly charge the case by placing it on any Qi wireless Charging Pad (not included) as shown below.

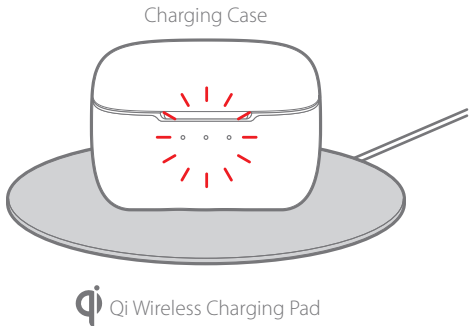

See pages 11 and 12 for more details regarding the charging case's LED indicators.

POWER ON/OFF

The earbuds will **automatically** power on when taken out of the charging case, and power off when placed back into the charging case.

To **manually** power the earbuds ON or OFF follow the instructions below:

 
 
Power ON:

Touch and **HOLD** the Multifunctional Touchpad on both earbuds for 2 seconds.

Power OFF:

Touch and **HOLD** the Multifunctional Touchpad of any earbud for 8 seconds.

Note: If not connected to a Bluetooth enabled device, the earbuds will automatically power off after 3 minutes.

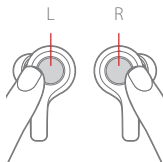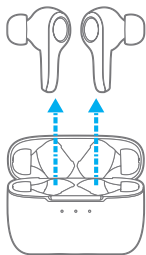


BLUETOOTH PAIRING

Follow the steps below to pair and connect the earbuds to your Bluetooth enabled device.

Connecting

 
1. The earbuds will automatically be in Bluetooth pairing mode when taken out of the case for the first time.
2. After the earbuds link with each other, the LED of the right earbud will quickly flash RED while the LED of the left earbud will slowly flash WHITE indicating they are in Bluetooth pairing mode.
3. Open your device's Bluetooth menu and find **Brookstone BKH600** and select it to pair.

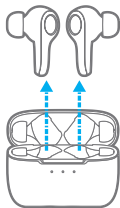

Slowly flash L Quickly flash R



 
4. Once paired, the voice prompt “Connected” will be heard and the LEDs of both earbuds will slowly flash WHITE.

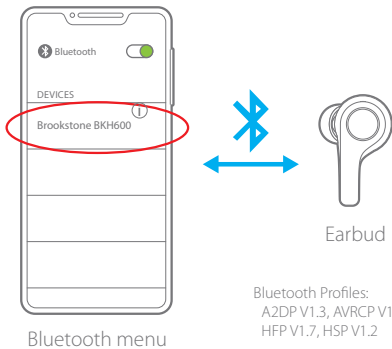

Note: After taking the earbuds out of the case, they will automatically link to each other and then try to connect to a previously paired Bluetooth enabled device. If they do not find a device to connect to, they will automatically be in Bluetooth pairing mode.

Disconnecting

 Open the Bluetooth settings on your device, and select "Disconnect" to disconnect from an already connected device. You'll hear a voice prompt "Disconnected" and the earbuds will go into pairing mode.

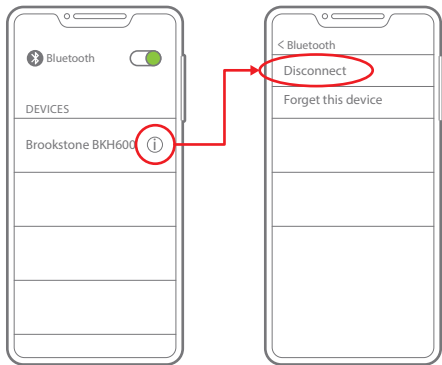


Note: Do not select "Forget this device" or you will have to go through the pairing process again.

USING ONE EARBUD


You can use the Right earbud alone to make or answer calls while the Left earbud is in the case but the Left earbud cannot be used alone while the Right earbud is in the case.

 L

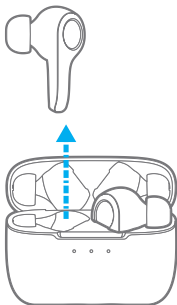

Wrong

 R

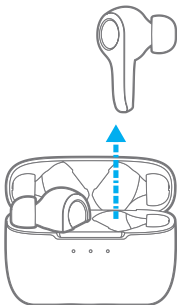

Correct

TOUCH CONTROL

The earbuds include a multifunctional touchpad. Just touch the earbuds to control the audio playback and answer calls.

Multifunctional Touchpad Operation

Play/Pause:

Double-tap the Left earbud.

Next track:

Double-tap the Right earbud.

Answer/End call:

 
Double-tap the Right or Left earbud during an incoming call to answer, and double-tap again during the call to end it.

Rejecting a call:

Touch and **HOLD** the Right or Left earbud during an incoming call.

Voice Assistant:


Touch and **HOLD** the Right or Left earbud. Touch and **HOLD** once again to cancel the Voice Assistant.

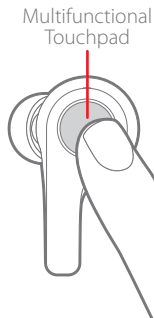





LED INDICATORS

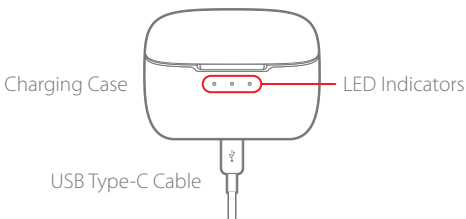 
The earbuds and charging case include LED indicators that are used to explain their different states.





 Charging Case (while charging)

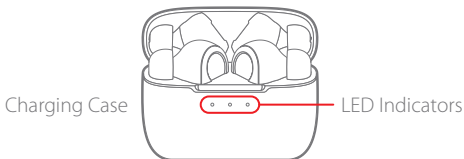

Battery Level	LED
0% – 30%	The first LED will slowly flash WHITE. 
30% – 70%	The first LED is solid WHITE while the second LED is slowly flashing WHITE. 
More than 70%	The first two LEDs are solid WHITE while the third LED is slowly flashing WHITE. 
Fully charged	All three LEDs are solid WHITE. 


Charging Case (not charging, when the cover is opened or closed)






Battery Level	LED
Less than 5%	The first LED will slowly flash WHITE for 5 seconds. 
5% – 30%	The first LED is solid WHITE for 5 seconds, then it will turn off. 
30% – 70%	The first and second LEDs are solid WHITE for 5 seconds, then they will turn off. 
More than 70%	All three LEDs are solid WHITE for 5 seconds, then they will turn off. 

 Earbuds (not in the Charging Case)

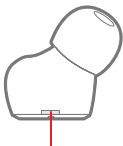TOP of the Earbud




LED Indicator



Earbud Status	LED
Low Battery	Quickly flashes RED twice every minute. 
Bluetooth Pairing	The Right earbud LED is quickly flashing RED and the Left earbud LED is slowly flashing WHITE. 
Connected	The LED indicators of both earbuds are slowly flashing WHITE. 

 Earbuds (in the Charging Case)

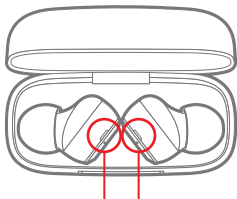TOP of the Charging Case




LED Indicators

Charging Status	LED
Charging	Solid WHITE. 
Fully Charged	Solid WHITE for 1 minute and then turns off. 


FACTORY RESET

If the earbuds are not linking with each other, or not working properly, try doing a factory reset by following the steps below.

 1. Place both earbuds inside the Charging Case and make sure they are charging (the LED of both earbuds should be solid WHITE).
2. While in the Charging Case, touch and **HOLD** the Multifunctional touchpad of either earbud for 10 seconds until the LED of that earbud flashes RED 3 times. This will clear the pairing information.

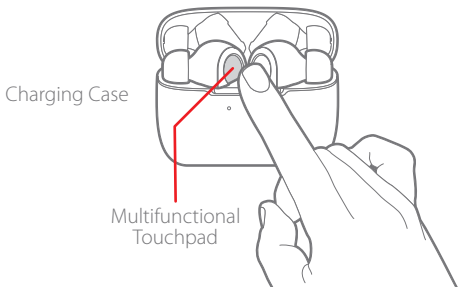

 3. Repeat step 2 with the other earbud.

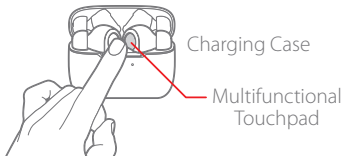

4. Take both earbuds out of the case, then put them back into the case for 10 seconds.

5. Remove both earbuds from the Charging Case and let them link with each other (this will occur automatically).

6. Once linked, they will automatically go into pairing mode. The LED of the Right earbud will quickly flash RED while the LED of the left earbud will slowly flash WHITE.

7. Open your device's Bluetooth list and delete **Brookstone BKH600** from your paired devices list.

8. Turn off the Bluetooth feature of your device and then turn it back on and search for **Brookstone BKH600** to connect.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Information Regarding Exposure to Radio Frequency Energy

Your device is designed and manufactured not to exceed the emission limits for exposure to RF energy set by the Federal Communications Commission of the United States (FCC). Information on your Device is

on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/> after searching on the FCC ID for your Device, which can be found on the back of the Device.

LITHIUM POLYMER BATTERY WARNINGS

This device contains a non-removable Lithium-Polymer battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.



Rating Label Definitions



Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., used under license.

LIMITED WARRANTY

1-Year Limited Warranty

Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our website at www.southerntelecom.com
- Click on Product Support
- Select the Brand of your device
- Select Service Request and fill out the form to begin your inquiry

Or call the Customer Support number below:

1-877-668-4839 (Toll Free)

Monday - Friday: 8AM - 10PM (EST)

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR

FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

The BROOKSTONE® trademarks, names and logos are owned by BKST Brand Holdings LLC. ©2019 All rights reserved. www.brookstone.com

Manufactured, marketed and distributed by Southern Telecom Inc. under license.

Airphones is a registered trademark of Southern Telecom, Inc.

The "Qi" symbol is a trademark of the Wireless Power Consortium.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.

All other trademarks and trade names are those of their respective owners.

Made in China v1.0 08-2019

Brookstone®