Brookstone°

Brookstone© trademark, name and logos are trademarks of BKST Brand Holdings LLC and used under license.

 $\label{thm:manufactured} \mbox{Manufactured and Marked by Southern Telecom, Inc.\ under \ license.}$

Southern Telecom Brooklyn, NY 11220

Model No.: BSSK706

Brookstone°

TORCHLIGHTDUO

True Wireless LED Lantern Speaker Duo



TABLE OF CONTENTS Compliance Information

Compliance information	I
Before You Begin Additional Warnings	3
Location of Controls	4
Getting Started	
Charging the Speakers	5
Powering ON/OFF	5
Using the Lights	
Bluetooth Pairing	
Pairing Two Speakers Together.	
Bluetooth Pairing with the Speaker Set	
Removing the Base	
Using the Garden Stake	
Warranty Information	10

Printed in China v1. 03-2022

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., used under license.

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

1

12

LITHIUM POLYMER BATTERY WARNINGS

This device contains a non-removable Lithium-Polymer battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.



Rating Label Definitions

=== Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., used under license.



This symbol represents FCC Declaration of Conformity and compliance.

Warranty (cont'd)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIB-UTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR. REPLACEMENT. OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

2

Warranty Information

90-day Limited Warranty Territory: United States

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com and select "Support".
- Select the brand, fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Before You Begin...

READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with this device.
- Do not disassemble, modify, or repair the device.
- Do not expose the device to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of these devices.

In the Box

- BSSK706 Wireless Speaker (x1)
- Micro-USB Charging Cable (x1)
- Garden Stake:
- Rod (x1)
- Spike (x1)
- Screw-On Base (x1)
- Instruction Manual (x1)


10

3

Location of Controls

- 2. [POWER] Switch


- 5. [次] Button:

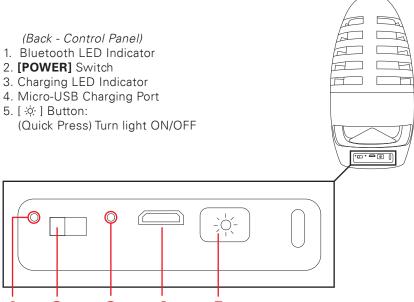


Removing the Base

Turn the base of the speaker to the right and carefully pull down.

Do not yank down without fully turning the base to the right as it may break the base.

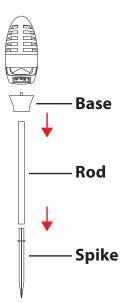

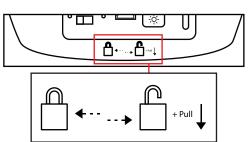

Using the Garden Stake

Make sure the base is secured to the speaker. Insert the rod of the garden stake into the base and the spike into the end of the rod.

Drive the spike and rod carefully, but firmly, into the ground so that it stands on its own.

Charging the Speakers

Insert the small connector of the supplied micro-USB charging cable into the micro-USB charging port on the control panel of the speaker. Insert the large connector into the USB port on a computer, USB charging device, or a 5V USB adapter (not included) and plug into a wall socket.

The charging LED indicator will turn RED while charging and turn off when fully charged.

A tone will be heard when the speaker is low on power, indicating that the speaker should be charged.

Powering ON/OFF

- Move the [Power] switch on the back of the soundbar to power ON and OFF.
- When powered ON, the soundbar will enter Bluetooth pairing mode, and may automatically re-pair to any available previously-paired device nearby.

Using the Lights

- Press the [☆] button to turn the lights on.
- Press the [-☆-] button again to turn the lights off.

5

Bluetooth Pairing

8

- 1. Power the speaker ON. A tone will be heard and the Bluetooth LED indicator will quickly flash BLUE.
- 2. Set your mobile device to search for Bluetooth devices. When it appears, select **BSSK706** from the list of found devices.
- 3. After a successful pairing, a tone will be heard and the Bluetooth LED indicator will turn solid BLUE.

Pairing Two Speakers Together

NOTE: If you have previously paired your device to either individual speaker, you will need to manually remove it under Bluetooth settings, and/or turn your device's Bluetooth OFF while pairing the speakers to each other.

- 1. Power both speakers ON at the same time. Both Bluetooth LED indicators will quickly flash BLUE.
- 2. After about 5 seconds, the speakers will automatically pair to one another, and a tone will be heard indicating that they have successfully paired. One of the speakers' Bluetooth LED indicators will flash BLUE quickly. This is the main unit. The other speaker's Bluetooth LED indicator will flash BLUE slowly. This is the secondary unit.

If the speakers have not paired to each other after 5 seconds, power both speakers OFF and follow the above instructions again.

Once the speakers have successfully paired to each other, the speaker set can pair to your Bluetooth-enabled device. See the **Bluetooth Pairing with the Speaker Set** section on the next page.

Bluetooth Pairing with the Speaker Set

- Make sure you have followed the instructions for Pairing the Speakers Together section on the previous page, and the speakers' Bluetooth LED indicators are flashing BLUE slowly and quickly, respectively.
- 2. Set your device to search for Bluetooth devices. When it appears, select **BSSK706** from the list of found devices.
- After a successful pairing, the main unit's Bluetooth LED indicator will turn solid BLUE, and the secondary unit's Bluetooth LED indicator will slowly flash BLUE.

While paired with the speaker set, you can power the secondary unit OFF to listen on the main unit only. Powering the main unit OFF will disable audio playback on both speakers.