

Brookstone

Brookstone® trademark, name and logos are trademarks of BKST Brand Holdings LLC and used under license.
Manufactured and Marked by Southern Telecom, Inc. under license.

Southern Telecom
Brooklyn, NY 11220

Model No.: BSSK1050

1-888-550-9121 (Toll Free)
Monday - Friday: 8AM - 10PM (EST)

Brookstone

KARAOKEMACHINE

Wireless LED Party Speaker



TABLE OF CONTENTS

Compliance Information.....	1
Before You Begin...	
Additional Warnings.....	3
In the Box.....	3
Location of Controls.....	4
Getting Started	
Charging the Speaker.....	5
Powering ON/OFF.....	5
Playing Music.....	5
Adjusting Volume.....	6
Connecting with Bluetooth.....	6
Using the AUX Input.....	7
Using the Speaker Lights.....	7
Setting Up the Stand.....	7
Using the Microphone.....	8
Warranty Information.....	9

Designed in US
Printed in China
v1. 10-2020

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., used under license.

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.


LITHIUM POLYMER BATTERY WARNINGS

This device contains a non-removable Lithium-Polymer battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.




Rating Label Definitions

== Direct current symbol.

 This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

 This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.

 This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., used under license.



Warranty (cont'd)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Before You Begin...

READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.


- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- **Do not disassemble, modify, or repair the device.**
- Do not expose the device to extreme temperatures (heat or cold), open flames, wet, or humid conditions.
- **Do not submerge in water.**
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

In the Box

- BSSK1050 - **Wireless Speaker** (x1)
- Microphone (x1)
- Adjustable Mic Stand (x1)
- USB Charging Cable (x1)
- User Manual (x1)

Location of Controls

1. Adjustable Mic Stand
2. Mic Stand Holder
3. Handle
4. LED Indicator
5. [LED] Button
6. [Power] Switch
7. USB Charging Port
8. 3.5 mm Auxiliary (AUX) Input
9. Mic 1 Input
10. Mic 2 Input
11. Mic Volume Knob
12. Mic Echo Knob
13. Main Volume Knob

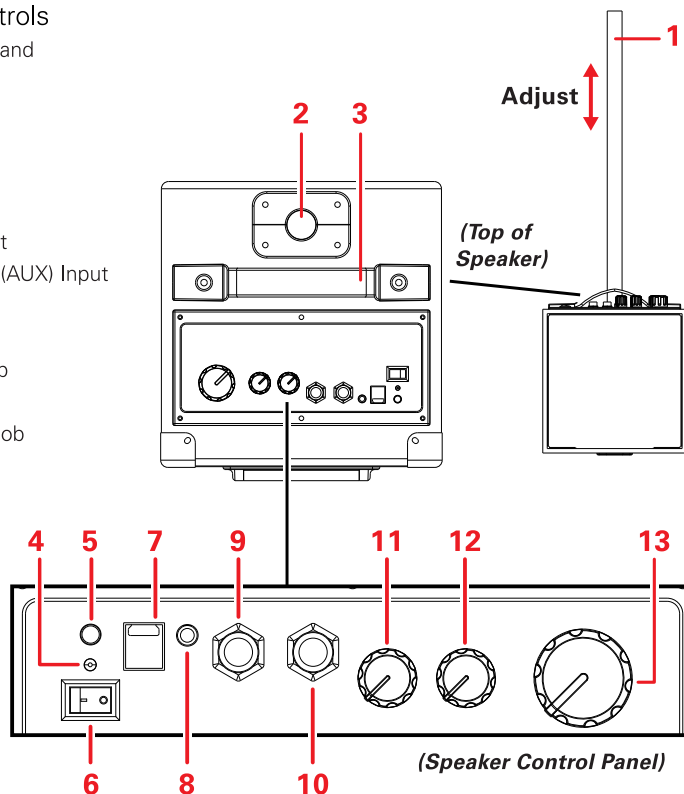

Warranty Information

90-day Limited Warranty

Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our website at www.southerntelecom.com
- Click on **Product Support**
- Select the **Brand** of your device
- Select **Service Request** and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Using the Microphone

Plug the connector of the included microphone into the Mic 1 Input port on the top of the speaker. Slide the microphone into the microphone holder at the top of the mic stand.

You can plug a second microphone (not included) into the Mic 2 Input port on the top of the speaker.

Microphone Controls

- Slide the microphone's power switch to the ON or OFF position to power the microphone ON or OFF.
- Adjust microphone echo using the Mic Echo Knob.
- Adjust microphone volume using the Mic Volume Knob.

NOTE: In order to avoid loud feedback, keep the microphone pointed in the opposite direction of the speaker. When not using, turn the mic volume down or turn the microphone off.

Charging the Speaker


Plug the micro-USB connector (smaller) of the included charging cable into the micro-USB port on the top of the speaker. Plug the USB connector (larger) into a USB power source, or into a **5V USB charging adapter** (not included) and plug into a wall outlet.

The LED indicator will **turn RED** while charging and turn OFF when fully charged. On low power, a tone will be periodically heard, indicating that the speaker needs to be recharged.

Powering ON/OFF

Make sure that the speaker has been charged.

- Flip the **[Power]** Switch to the ON position to power ON. A tone will be heard, and the speaker will enter Bluetooth pairing mode. It will automatically re-pair to any nearby, previously-paired device with Bluetooth enabled.
- Flip the **[Power]** switch to the OFF position to power OFF.

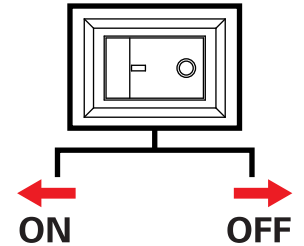

Playing Music

To play music on the speaker, you must be paired to a Bluetooth-enabled device or connected with an aux cable. See the **Bluetooth Pairing** and **Using with a Wired Device** sections of this manual.





Adjusting Volume

- To adjust overall volume, turn the Main Volume Knob on the top of the speaker, or use the controls on your connected device.
- To adjust microphone volume, turn the Mic Volume Knob.

Connecting with Bluetooth

1. Power the speaker ON. A tone will be heard, and the LED indicator will **quickly flash BLUE**.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **BSSK1050** from the list of found devices.
3. After a successful pairing, a tone will be heard and the LED indicator will **slowly flash BLUE**.

In Bluetooth mode, playback and volume can be adjusted by the controls on the top of the speaker, or by the controls on your paired device.

LED Indicator	
	Quickly flashing BLUE Speaker is ready to pair
	Slowly flashing BLUE Speaker is paired
	Solid RED Speaker is charging
	OFF Speaker is fully charged

Using the AUX Input

Insert one connector of a 3.5 mm auxiliary cable (not included) into the 3.5 mm auxiliary input port on the top of the speaker.

Insert the other connector into the headphone jack or 3.5 mm AUX output port on your media-playing device. The LED indicator will **turn solid BLUE** and all Bluetooth pairings will be disabled when the AUX input is in use.

Using the Speaker Lights

Press the **[LED]** button to cycle through the light modes.

Setting Up the Stand

Insert the base of the included mic stand into the stand holder on the top of the speaker, as shown in the diagram at right.

Pull the body of the stand up or down to adjust to the desired height.

