

Brookstone®

Brookstone® trademark, name and logos are trademarks of BKST Brand Holdings LLC and used under license.  
Manufactured and Marked by Southern Telecom, Inc. under license.

Southern Telecom  
Brooklyn, NY 11220

Model No.: BSSK3760

Designed in US  
Printed in China  
v2. 04-2021

Brookstone®

## 2.1 HOMETHEATER

37" Soundbar with Wireless Subwoofer



### TABLE OF CONTENTS

Compliance Information.....	1
Before You Begin...	
Additional Warnings.....	3
In the Box.....	3
Location of Controls.....	4
Getting Started	
Wall mounting the soundbar.....	5
Powering On/Off.....	5
Changing input modes.....	6
Bluetooth Pairing.....	6
Using the 3.5mm AUX Input.....	6
Using the HDMI (ARC) Input.....	7
Controlling Playback & Volume .....	7
Using the Remote Control .....	7
Warranty Information.....	8

### Warranty (cont'd)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

## Warranty Information

### 90-Day Limited Warranty

Territory: United States/Canada

#### LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

#### To obtain warranty service:

- Visit our customer support portal: [www.customersupport123.com](http://www.customersupport123.com)
- Select the brand and model of your device
- Select "Service Request" and fill out the form to begin your inquiry
- Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

#### Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

## FCC Information

This device complies with Part 15 of the FCC Rules.

**Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

## Rating Label Definitions

 Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., used under license.



## Using the HDMI (ARC) Input

Plug one connector of an HDMI (ARC) cable (*not included*) into the HDMI (ARC) port on the side of the soundbar. Plug the other connector into the HDMI (ARC) port into the port on your TV or media-playing device.

 
Press the [ M ] button to switch to HDMI mode. The LED indicator will light up PURPLE when the soundbar is in HDMI mode.

## Controlling Playback & Volume (Bluetooth Only)

- Press the [ ⏸ ] button on the soundbar to pause/resume media playback.
- Press and hold the [ ⏭ ] and [ ⏮ ] buttons to adjust volume.
- Press the [ ⏭ ] and [ ⏮ ] buttons to skip tracks.

## Using the Remote Control

- [ ⏻ ] Button: Enter/leave standby mode
- [ M ] Button: Change input mode
- [ ⏸ ] Button: Pause/resume playback
- [ ⏭ ] Button: Skip to next track
- [ ⏮ ] Button: Skip to previous track
- [ 🔇 ] Button: Mute/unmute volume
- [ VOL+ ] Button: Increase volume
- [ VOL- ] Button: Decrease volume

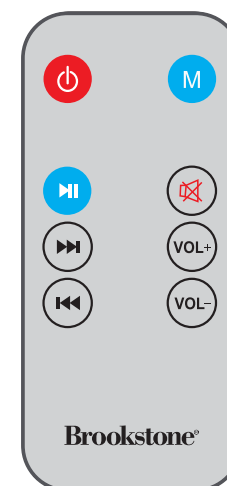

Brookstone®

## Powering ON/OFF

 
- Press and hold the [⏮/M] button on the soundbar to power ON. A tone will be heard and the soundbar will automatically enter the last mode it was in.
- Press and hold the [⏮/M] button again to power OFF.

## Changing Input Modes

- Press the [ M ] button to change between Bluetooth, HDMI (ARC) and 3.5 mm AUX audio inputs.
- Note:** When plugging in a 3.5 mm connector to the speaker, the speaker will automatically switch to AUX mode. If the 3.5 mm cable is plugged in and the speaker is powered ON, the speaker will automatically be in AUX mode.

## Bluetooth Pairing

1. Power the soundbar ON and switch to Bluetooth mode by pressing the [ M ] button. When the speaker is in Bluetooth mode, a tone will be heard and the LED indicator will quickly flash BLUE.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **BSSK3760** from the list of found devices.
3. After a successful pairing, a tone will be heard and the LED indicator will slowly flash BLUE.

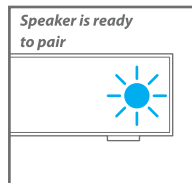

## Using the 3.5 mm AUX Input

To use the speaker as a wired device, insert the 3.5 mm connector of the supplied AUX cable into the 3.5 mm auxiliary audio input jack on the side of the soundbar. Insert the RCA connectors into the audio outputs of your media-playing device.

**Note:** Typically, RCA connectors are color-coded with red being for the right audio channel and white being for the left audio channel.

The LED indicator will turn RED when the AUX input is in use. While connected, playback is controlled via the connected device. Volume can be controlled with the speaker, remote control or the connected device.

## Before You Begin...

### READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE

 
To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- **Do not disassemble, modify, or repair the device.**
- Do not expose the device to extreme temperatures (heat or cold), open flames, wet, or humid conditions.
- **Do not submerge in water.**
- Do not allow any ports or connectors of the device or its accessories to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- To re-boot the device, please unplug the power adapter and wait at least 5 seconds before plugging back in.

## In the Box

- BSSK3760 - Wireless Soundbar (x1)
- Wireless Subwoofer (x1)
- Power Adapter (x2)
- AUX-RCA Audio Cable (x1)
- 3.5 mm Auxiliary Cable (x1)
- Remote Control (x1)
- Mounting Screw (x2)
- Instruction Manual (x1)

## Location of Controls

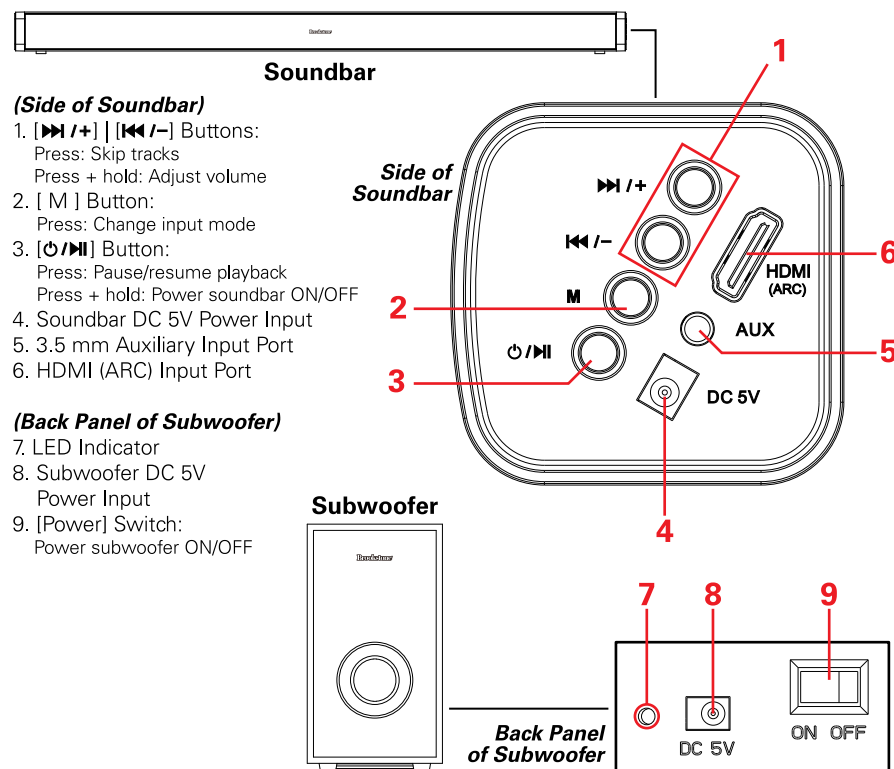

## Wall Mounting the Soundbar

 
1. Remove the speaker and its contents from packaging.
2. Using a pencil, mark two spots on a wall measuring 34.7 inches apart.
3. If installing to a wooden surface, drive or drill a mounting screw into the wall at each marked location. If installing to drywall or a brick surface, you may need to install plastic anchors to properly secure the mounting screws.
4. Place and hang the speaker from its mounting holes on the back onto the installed mounting screws.



## Powering the Soundbar and Subwoofer

Insert the pin of one of the supplied power adapters into the DC power input on the side of the soundbar. Plug the adapter into an electrical outlet.

Insert the pin of the other supplied power adapter into the DC power input on the back of the subwoofer. Plug the adapter into an electrical outlet.

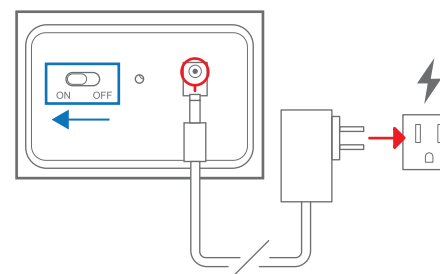

Slide the [Power] switch on the back of the subwoofer to the ON position. When powered on the subwoofer and soundbar will automatically connect to each other.