

**Brookstone**

Brookstone® trademark, name and logos are trademarks of BKST Brand Holdings LLC and used under license.  
Manufactured and Marked by Southern Telecom, Inc. under license.

Southern Telecom  
Brooklyn, NY 11220

Model No.: BSSK9066

**Brookstone**

## **CHROMAMAX**

Wireless LED Speaker



### **TABLE OF CONTENTS**

Compliance Information.....	1
Before You Begin...	
Additional Warnings.....	3
In the Box.....	3
Location of Controls.....	4
Getting Started	
Charging the Speaker.....	5
Powering ON/OFF.....	5
Changing Input Modes.....	5
Using the LED Lights.....	5
Adjusting Volume.....	6
Adjusting Playback.....	6
Connecting with Bluetooth.....	6
Using the FM Radio.....	7
Using the 3.5 mm AUX Port.....	7
USB and TF Card Input.....	8
Warranty Information.....	9

Designed in US  
Printed in China  
v1. 03-2021

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., used under license.

### FCC Information

This device complies with Part 15 of the FCC Rules.

**Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.


### LITHIUM POLYMER BATTERY WARNINGS


This device contains a non-removable Lithium-Polymer battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.




### Rating Label Definitions

 Direct current symbol.

 This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

 This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.

 This symbol signifies that this is a wireless device powered by Bluetooth® technology.

 This symbol represents FCC Declaration of Conformity and compliance.

## Warranty (cont'd)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

## Before You Begin...

### READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE


To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- **Do not disassemble, modify, or repair the device.**
- Do not expose the device to extreme temperatures (heat or cold), open flames, wet, or humid conditions.
- **Do not submerge in water.**
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

## In the Box

- BSSK9066 - Wireless Speaker (x1)
- Micro-USB Charging Cable (x1)
- Instruction Manual (x1)

## Location of Controls

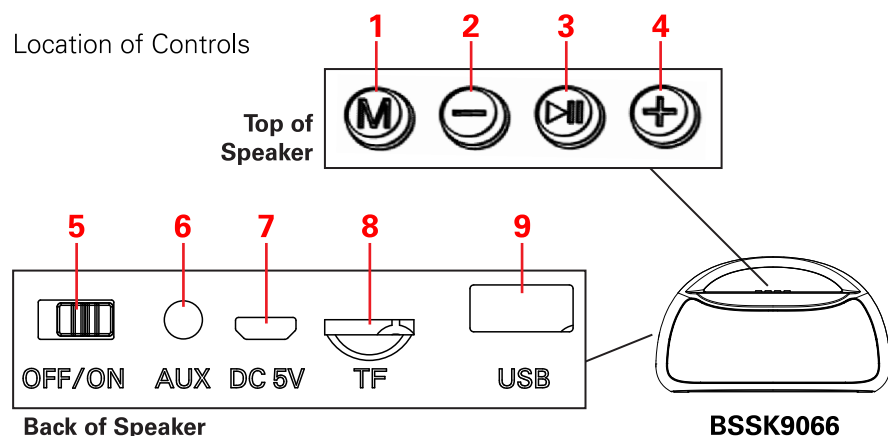

- |  |  |
|--|--|
| 1. [ M ] Button:<br>Press: Change input mode<br>Press + hold: Turn LEDs ON/OFF   | 4. [ + ] Button:<br>Press: Skip to next track<br>Press+hold: Increase volume |
| 2. [ — ] Button:<br>Press: Skip to previous track<br>Press+hold: Decrease volume | 5. [Power] Switch: Power ON/OFF  |
| 3. [▶  ] Button: Play/pause,<br>Scan stations (FM radio mode)                    | 6. 3.5 mm AUX Port   |
|  | 7. Micro-USB Charging Port   |
|  | 8. TF Card Slot  |
|  | 9. USB Device Input  |

## Warranty Information

### 90-Day Limited Warranty

Territory: United States/Canada

### LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

#### To obtain warranty service:

- Visit our customer support portal: [www.customersupport123.com](http://www.customersupport123.com)
- Select the brand and model of your device
- Select "Service Request" and fill out the form to begin your inquiry
- Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

#### Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

## USB Device and TF Card Input

To insert a TF card, insert a TF card into the TF card input port on the speaker with the metal contacts facing down, and push in until it clicks.

To insert a USB device, such as a USB flash drive containing audio files, insert the USB device into the USB device port on the speaker.

Change input modes until you enter TF or USB mode. The speaker will automatically begin playing music off the device. **Note:** You must have a TF card or USB device inserted to switch to TF or USB input mode.

In TF card and USB mode, all playback is controlled by the buttons on the speaker.

- Press the [▶||] button to pause and resume playback.
- Press the [ + ] and [ - ] buttons to skip tracks.

## Charging the Speaker

Plug the micro-USB connector (smaller) of the included charging cable into the micro-USB port on the speaker. Plug the USB connector (larger) into a USB power source, or into a **5V USB charging adapter** (not included) and plug into a wall outlet.

The LED indicator on the speaker will **turn RED** while charging and turn OFF when fully charged. On low power, a tone will be periodically heard, indicating that the speaker should be charged.

## Powering ON/OFF

- Move the [Power] switch on the speaker to power ON and OFF.
- When powered ON, the speaker will enter Bluetooth pairing mode, and will automatically re-pair to any available previously-paired device nearby.

## Changing Input Modes

Press the [ M ] button on the speaker to switch input modes.

A TF card or USB device must be inserted or connected to switch to these modes.

## Using the LED Lights

The lights will automatically power ON with the speaker.

- Press + hold the [ M ] button on the speaker to turn the LEDs ON and OFF while the speaker is powered on.

## Adjusting Volume

In all modes, overall volume can be adjusted with the buttons on the speaker. In Bluetooth mode, volume can also be controlled by your connected device.

- Press + hold the [ + ] button to increase volume.
- Press + hold the [ - ] button to decrease volume.

## Adjusting Playback

In Bluetooth, FM radio, TF card and USB modes, playback can be controlled by the buttons on the speaker. In AUX mode, playback will be controlled by your connected device.

- Press the [▶||] to pause and resume playback (except in FM radio mode).
- Press the [ + ] button to skip to the next track/station.
- Press the [ - ] button to skip to the previous track/station.

## Connecting with Bluetooth

1. Power the speaker ON. A tone will be heard, and the speaker will enter Bluetooth pairing mode.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **BSSK9066** from the list of found devices.
3. After a successful pairing, a tone will be heard and you will be able to play music on the speaker.

In Bluetooth mode, playback and volume can be controlled by your paired device or the controls on the speaker.

## Using the FM Radio

Change input modes until you enter FM radio mode.

In FM radio mode, all playback will be controlled by the buttons on the speaker.

- Press the [▶||] button to *start or stop* scanning nearby radio stations. If allowed, the radio will make a complete scan of all available stations, and return to the first station.
- Press the [ + ] and [ - ] buttons to skip through stations.

## Using the 3.5 mm AUX Port

Plug one end of a 3.5 mm auxiliary cable (not included) into the 3.5 mm AUX port on the speaker. Plug the other end into the other headphone jack or audio output port on your media-playing device.

Switch to AUX mode, and begin playing music on your connected device.

In AUX mode, all playback will be controlled by your connected device.