


QUICKSTART

Dual Tripod and Wireless Karaoke Speakers

True Wireless Pairing


1. Turn both speakers' **[POWER/VOLUME]** dials clockwise to power both ON at the same time. Make sure both are in Bluetooth mode.
2. After ~5-10 seconds, they will automatically pair to each other. A tone will be heard, indicating that they have paired.
3. Set your mobile device to search for new Bluetooth devices. Select **BSSK9069** when it appears on the list of found devices.
4. After a successful pairing, a tone will be heard, and you will be able to play music on the speakers.

Power ON

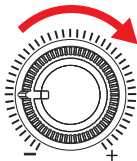

Disabling TWS Pairing

- **Press + hold** the **[▶||/TWS]** button on either speaker to disconnect the TWS pairing.
- When the TWS pairing is disconnected, the main speaker will remain connected to your BT device. Only the satellite speaker will be disconnected.

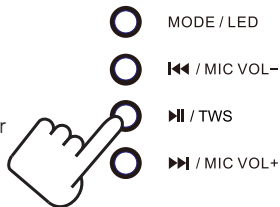

Two Ways to Reconnect

1. **Press + hold** the **[▶||/TWS]** button on the satellite (disconnected) speaker to reconnect.
2. Power both speakers OFF and then ON again at the same time. Make sure both are in Bluetooth mode. They will automatically reconnect after several seconds.

Note: The TWS function is available in Bluetooth mode only. It is not available in AUX, TF, USB or FM radio modes.