

Brookstone

Brookstone® trademark, name and logos are trademarks of BKST Brand Holdings LLC and used under license.
Manufactured and Marked by Southern Telecom, Inc. under license.

Southern Telecom
Brooklyn, NY 11220

Model No.: BSSTWS15

1-877-668-4839 (Toll Free)
Monday - Friday: 8AM - 10PM (EST)

Brookstone

SONICAIR

True Wireless Earbuds



TABLE OF CONTENTS

Compliance Information.....	1
Before You Begin...	
Additional Warnings.....	3
In the Box.....	3
Location of Controls.....	4
Getting Started	
Charging the Case.....	5
Charging the Earbuds.....	5
Powering ON/OFF.....	6
Bluetooth Pairing.....	7
Playing Music.....	8
Controlling Playback.....	8
Phone Calls.....	8
Storage & Maintenance.....	9
Specifications.....	9
Warranty Information.....	10

Printed in China
v1. 07-2020

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., used under license.

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

LITHIUM POLYMER BATTERY WARNINGS

This device contains a non-removable Lithium-Polymer battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.



Rating Label Definitions

— — — Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., used under license.



This symbol represents FCC Declaration of Conformity and compliance.



Warranty (cont'd)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Warranty Information

90-day Limited Warranty
Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our website at www.southern telecom.com
- Click on **Product Support**
- Select the **Brand** of your device
- Select **Service Request** and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Before You Begin...

READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.


- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- **Do not disassemble, modify, or repair the device.**
- Do not expose the device to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- **Do not submerge in water.**
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- **Always be aware of your surroundings when using the earbuds**
- **Never use earbuds while driving a vehicle, riding a bicycle, or operating anything that requires your undivided attention**

In the Box

- BSSTWS15 - True Wireless Earbuds (L & R)
- Charging Case (x1)
- USB Charging Cable (x1)
- Instruction Manual (x1)

Location of Controls

[Multi] Button:
(Press + Hold) (~3 - 4s): Power ON/OFF
(Press + Hold) (1.5s): Activate voice assistant
(Press): Play/pause music, answer/end calls
(2x Press) (R-Earbud): Next track
(2x Press) (L-Earbud): Previous track
(2x Press): Reject incoming call

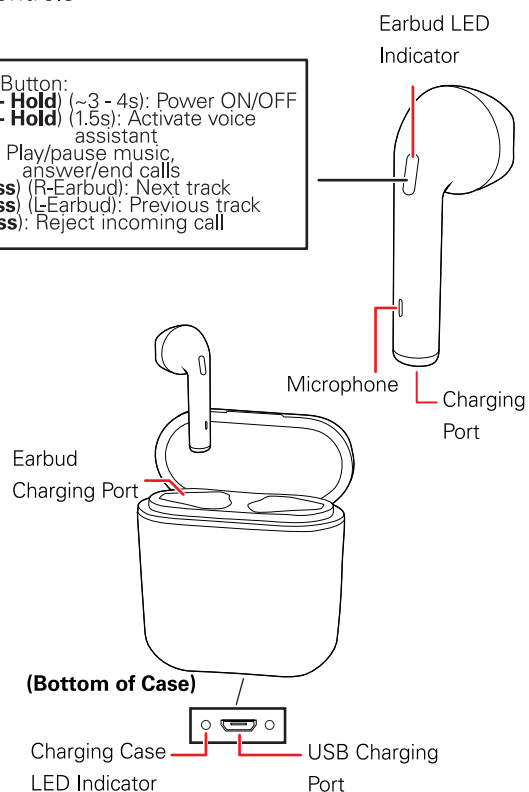

Storage & Maintenance

When not using the earbuds, it is recommended that they are stored away in the charging case and placed in a safe, dry location, away from sources of water or heat and free of dust and debris.

If the earbuds or case is dirty, wipe it down with a **clean microfiber cloth**. Do not clean with water or any sort of cleaning liquid or detergent.

Specifications

TWS Earbuds

Bluetooth Ver.: 5.0
Bluetooth Range: 33 ft
Freq. Response: 20 Hz – 20 kHz
Driver Size: 13 mm
Play Time: 3 hrs

Charging Case

Charging Case Capacity: 450 mAh

Playing Music

Make sure the earbuds are charged and properly connected to your Bluetooth-enabled device.

Adjusting Playback

Once you have paired to the earbuds, you can adjust playback and volume with the controls on your paired device, or with the earbud controls below.

- Press either **[Multi]** button to pause. Press again to resume.
- Double press the **[Multi]** button on the right earbud to skip to the next track.
- Double press the **[Multi]** button on the left earbud to skip to the previous track.

Activating Voice Assistant

To activate voice assistant, the TWS earbuds must be paired to a device that has a voice assistant, such as Siri® or Google Assistant®. For more on using voice assistant's please consult the instructional materials for them online.

- Press and hold the **[Multi]** button for 1.5 sec. to activate your device's voice assistant function.

Phone Calls

- Press either **[Multi]** button to answer an incoming call.
- Press either **[Multi]** button again to end the call.
- Double press either **[Multi]** button to reject an incoming call.

Charging the Case

Plug the small connector of the supplied USB charging cable into the USB charging port on the bottom of the case. Plug the large connector into the USB port on a computer, a USB charging device, or **5V USB adapter** (not included) and plug into a wall socket.

The LED indicator on the bottom of the case will **flash RED** while the case is being charged, and **turn solid RED** when the case is fully charged.




Charging the Earbuds

Open the lid of the charging case and slide the earbuds into case's earbud charging ports. The earbuds will automatically begin charging. The earbuds' LED indicators will **turn solid RED** when they are charging and turn OFF when they are fully charged.

NOTE: When the earbuds are low on power, a voice will be heard indicating that they need to be charged.

Powering ON/OFF

- Remove the earbuds from the charging case to power the earbuds ON.
- **Press and hold** either/both earbuds' **[Multi]** buttons for ~3-4 seconds to manually power the earbuds ON.
- Insert the earbuds into the charging case to automatically power them OFF and begin charging.
- **Press and hold** either/both earbuds' **[Multi]** buttons for ~3-4 seconds to manually power the earbuds OFF.

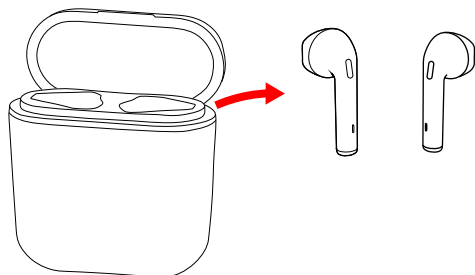

Note: The earbuds will automatically shut off if not connected to a Bluetooth device after a few minutes.

Note: Either earbud can be used independently.

Bluetooth Pairing

1 Pairing the Earbuds

1. Power the earbuds ON by removing them from the charging case or by pressing and holding the **[Multi]** button.
2. After a moment, a voice will be heard, indicating that the 2 earbuds are connected to each other. One earbud will **flash RED and BLUE**, the other will **intermittently flash BLUE**.
3. Enable Bluetooth on your device and go to your device's Bluetooth menu. Select **BSSTWS15** when it appears.
4. Once successfully paired to your device, a voice will be heard and both earbuds will **intermittently flash BLUE**.

