

Brookstone®

Brookstone® trademark, name and logos are trademarks of BKST Brand Holdings LLC and used under license.
Manufactured and Marked by Marcelle Group, LLC. under license.

Marcelle Group
Brooklyn, NY 11220

Model No.: BSWK622

1-877-668-4839 (Toll Free)
Monday - Friday: 8AM - 10PM (EST)

Brookstone®

Sunrise Wake-Up
Alarm Clock



TABLE OF CONTENTS

Compliance Information..... 1

Before You Begin...

 Additional Warnings.....3

 In the Box.....3

Getting Started

 Location of Controls.....4

 Powering the Clock.....6

 Setting the Time.....6

 Setting the Alarm.....7

 Sunrise Wake-up.....7

 Sunset Time.....8

 Using the Lamp.....8

 Using the FM Radio.....9

Warranty Information..... 10

Printed in China
v1. 09-2019

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Rating Label Definitions

⎓ Direct current symbol.



This symbol represents FCC Declaration of Conformity and compliance.

Warranty (cont'd)
NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Warranty Information

90-day Limited Warranty
Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship (“Warranty”) as follows:

- To obtain warranty service:
- Visit our website at www.southerntelecom.com
 - Click on **Product Support**
 - Select the **Brand** of your device
 - Select **Service Request** and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.


Before You Begin...
READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE

- To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.
- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
 - **Do not disassemble, modify, or repair the device.**
 - Do not expose the device to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
 - **Do not submerge in water.**
 - If using with a USB adapter, make sure the adapter is not damaged.
 - Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
 - Do not place this device on or near a microwave or similar kitchen appliance.

Questions & Customer Support
For any issues concerning this product, please visit our website at SouthernTelecom.com and click on **Product Support**.

- In the Box
- BSWK622 - Alarm Clock (x1)
 - Power Cable (x1)
 - Instruction Manual (x1)

Location of Controls

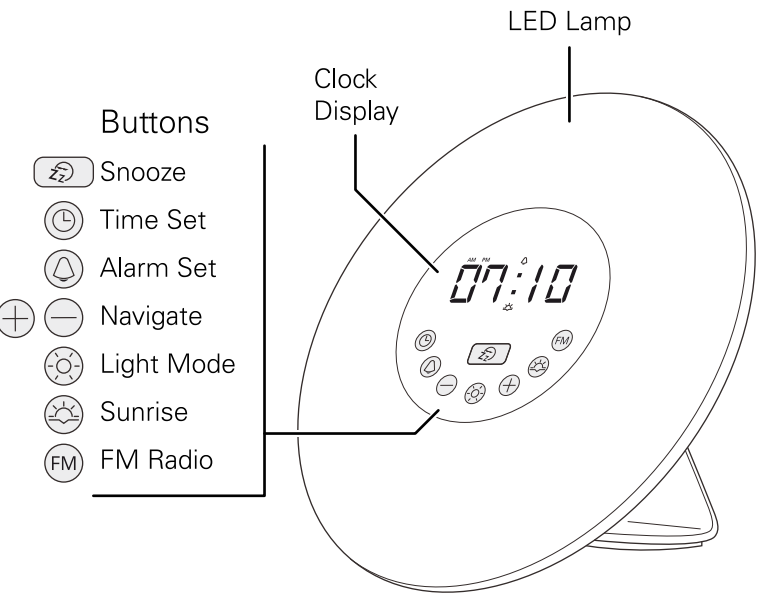

Using the FM Radio
For best reception, untie and extend the antenna wire on the back of the clock and position it towards an open space where it will have direct line of sight with the sky, such as a window.

1. Tap the **FM** button to enable/disable the FM radio.
2. Press and hold the **FM** button to scan and save nearby radio stations.
3. Use the **+** and **-** buttons to skip through saved radio stations.

Radio volume can be adjusted by pressing the **speaker** button. While adjusting, the current level will be shown on the clock display (between 00-15).

Sunset Time

A sunset time can be set for the alarm clock. 30 minutes before the set time, the light will reduce from 100% intensity until it turns off.

Tap the ☀️ button to enable/disable the sunset time. When enabled the 🌇 symbol will appear on the clock display.

1. Press and hold the ☀️ button, the hour on the clock display will begin flashing. Use the ⏴ and ⏵ buttons to adjust the hour. Tap the ☀️ button to confirm.

Note: Setting will be cancelled if not confirmed within ~5 seconds.

2. After confirming the hour, the minute on the clock display will flash. Use the ⏴ and ⏵ buttons to adjust the minutes. Tap the ☀️ button to confirm.

You can disable the light by pressing and holding the ☀️ button for ~3 seconds.

Using the Lamp


- Tap the 🌞 button to turn on the white light on the lowest intensity. Adjust the intensity level by pressing the ⏴ and ⏵ buttons.
- Press the 🌞 button a 2nd time to switch to color-changing mode. In this mode, the lamp will slowly fade through colors. Tap the ⏴ and ⏵ buttons to switch to a specific color.
- Press the 🌞 button a 3rd time to disable the light.

🎵 Nature Sounds

🔊 Volume Control

🕒 12/24 Hour Format

🌙 Display Adjustment

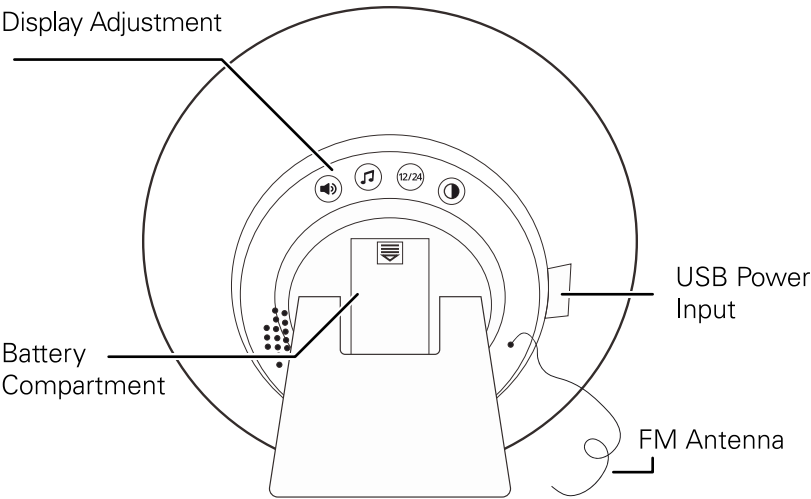

Powering the Clock

The clock can be powered with the included USB power cable or 2 AAA alkaline batteries. If using batteries, insert according to the polarity diagram on the inside of the battery compartment. Do not mix old and new batteries or different brands or sizes of batteries.

Note: When powering the clock with batteries, all light functions will NOT work. The light will only work when the clock is powered via USB.

Plug the small connector of the supplied power cable into the USB power input on the back side of the clock. Plug the other connector into a USB power source, such as a **5V/1A USB adapter** (*not included*) and plug into an electrical outlet.

Once the clock is powered on it will automatically enter Time Setting mode.

Setting the Time

1. When powered on, the hour on the clock display will begin flashing. Use the ⏴ and ⏵ buttons to adjust the hour. Tap the ⌚ button to confirm.

Note: If no action is taken after 10 seconds the time will automatically set. **To restart Time Setting mode, press the ⌚ button.**

2. After confirming the hour, the minute on the clock display will flash. Use the ⏴ and ⏵ buttons to adjust the minutes. Tap the ⌚ button to confirm.
3. Tap the 🕒 button on the back of the clock to select 12h or 24h time format. When the 12h format is selected, AM/PM will be displayed on the clock.

The brightness level of the clock display can be set with the 🌙 button on the back of the clock.

- The clock will be on low brightness by default.
- Press the 🌙 button once for high brightness.
- Press the 🌙 button a second time to turn the display off.
- If the display is off, press the 🌙 button to turn it back on in low brightness.

Setting the Alarm

Tap the ⌚ button to enable/disable the alarm. When enabled the 📌 symbol will appear on the display.

1. Press and hold the ⌚ button for ~3 seconds. The hour on the clock display will begin flashing. Use the ⏴ and ⏵ buttons to adjust the hour. Tap the ⌚ button to confirm.

Note: Setting will be cancelled if not confirmed within ~5 seconds.

2. After confirming the hour, the minute on the clock display will flash. Use the ⏴ and ⏵ buttons to adjust the minutes. Tap the ⌚ button to confirm.
3. The alarm will play nature sounds by default. Press the 🎵 button then use the ⏴ and ⏵ buttons to select a different nature sound (1-6) or the FM radio (7)*. When switching to a new sound, a 5 second preview of the sound will play. Press the 🎵 button again to confirm the sound for the alarm.

*-for more on the FM radio, refer to the FM Radio section later in this instruction manual.

When the alarm goes off you can snooze the alarm for 5 minutes by tapping the 🕒 button or disable it by tapping any other button on the front of the clock. The alarm will play its set sound for 2 minutes.

Sunrise Wake-Up

The sunrise wake-up will begin 30 minutes before the alarm goes off. It will increase light from 10% to 100%. During the sunrise wakeup, the 📌 symbol on the clock display will flash.

You can disable the light by pressing and holding the ☀️ button for ~3 seconds.