

Brookstone®

Brookstone® trademark, name and logos are trademarks of BKST Brand Holdings LLC and used under license.
Manufactured and Marked by Marcelle Group, LLC. under license.

Marcelle Group
Brooklyn, NY 11220

Model No.: BSWK804

1-888-550-9121 (Toll Free)
Monday - Friday: 8AM - 10PM (EST)

Brookstone®

Sunrise Alarm Clock

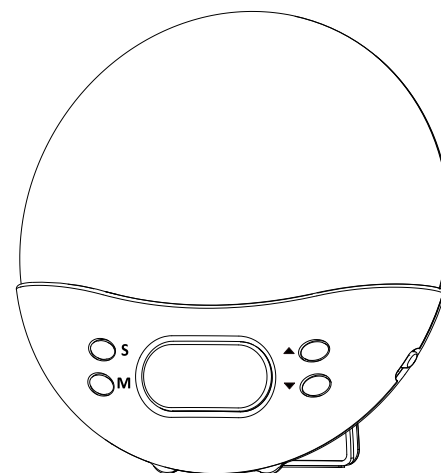


TABLE OF CONTENTS

Compliance Information.....	1
Before You Begin...	
Additional Warnings.....	3
In the Box.....	3
Getting Started	
Location of Controls.....	4
Charging the Clock.....	6
Using the Night Light.....	6
Setting the Time.....	6
Setting the Alarm & Snooze Settings.....	7
Switching Off the Alarm.....	8
Using Sunrise Light Mode.....	8
Manual Reset.....	9
Maintenance.....	9
Warranty Information.....	10

Printed in China
v1. 04-2020

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



Rating Label Definitions

— Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



This symbol represents FCC Declaration of Conformity and compliance.

Warranty (cont'd)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Warranty Information

90-day Limited Warranty
Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our website at www.southerntelecom.com
- Click on **Product Support**
- Select the **Brand** of your device
- Select **Service Request** and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Before You Begin...

READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- **Do not disassemble, modify, or repair the device.**
- Do not expose the device to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- **Do not submerge in water.**
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- Do not place this device on or near a microwave or similar kitchen appliance.
- **This device contains a built-in Lithium-Ion battery and should not be disposed of with regular household waste.** Product must be disposed of in compliance with all federal & local laws.


Questions & Customer Support

For any issues concerning this product, please visit our website at SouthernTelecom.com and click on **Product Support**.

In the Box

- BSWK804 - Alarm Clock (x1)
- USB Power Cable (x1)
- Instruction Manual (x1)

Location of Controls

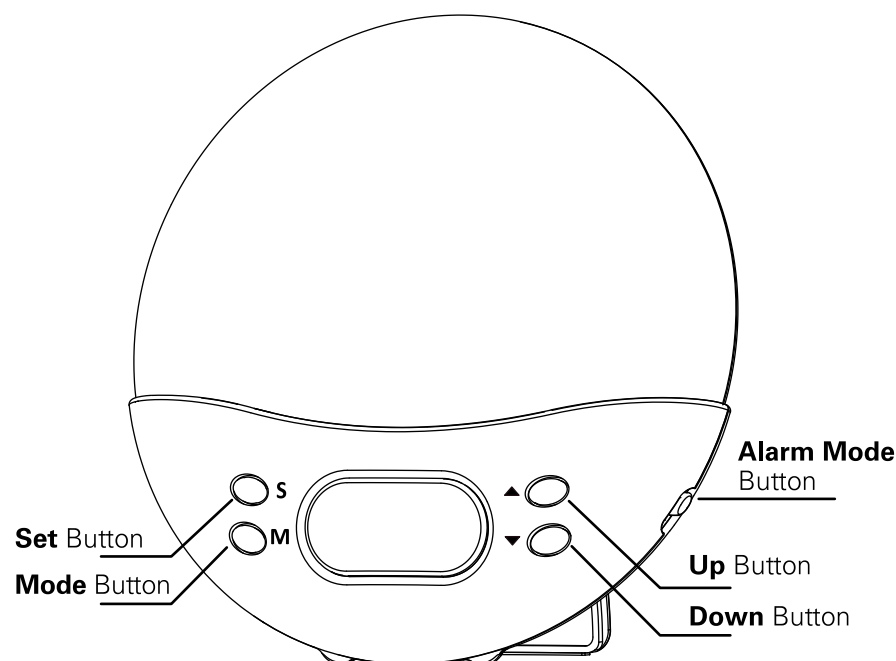

Manual Reset

If the clock is not working properly, you can try manually resetting the clock by pressing the Reset button on the back of the clock with the end of a paperclip or other small object.

Maintenance

Cleaning

If necessary, clean the clock with a dry or damp cloth. Never use harsh cleaning chemicals, or allow the clock or cable to come into contact with water or any other liquid.

Storage

If the clock will not be used for a longer period of time, it should be stored away from sources of wind, sunshine, heat or moisture. It is best stored in an airtight box or bag (not included).


Switching Off the Alarm

- Press any button to switch off the alarm.
- If the Snooze function is turned on, the alarm will ring again. The alarm can be put into Snooze mode a maximum of 3 times.
- To turn off the Snooze alarm, press the Mode button (M) to enter alarm mode and press the ▼ ▲ buttons.

Using Sunrise Light Mode

The Sunrise Light mode uses light to help wake you up in addition to the alarm. When the Sunrise Light mode is turned ON, the light will activate 30 minutes before the alarm rings, and begin gradually increasing in light brightness.


- Move Alarm Mode button on the side of the clock to the ☀️ position to turn the Sunrise Light function ON. The ☀️ symbol will be displayed on the screen.
- Move Alarm Mode button to the 🌙 position to turn the Sunrise Light function OFF. The Sunrise Light will not activate, and the alarm will ring only.

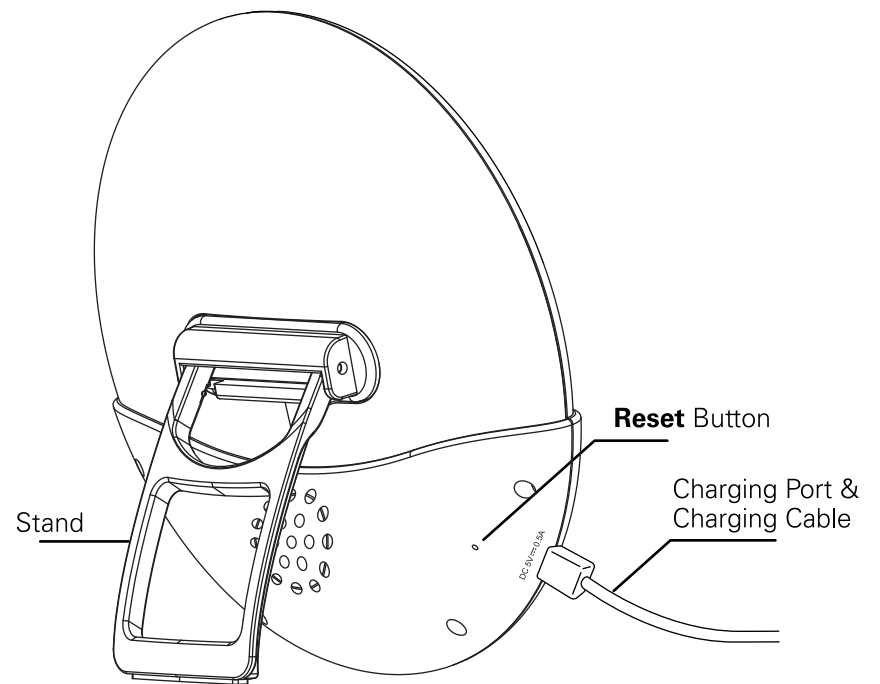

Charging the Clock

Plug the small connector of the included USB charging cable into the charging port on the side of the clock. Plug the large connector into a USB power source, such as a 5V USB adapter (*not included*) and plug into a wall socket.

Fully charge the clock before first use. It will take approximately 2 hours to fully charge the clock's built-in battery.

Note: Low battery can cause the alarm function to turn OFF. When the clock is low on battery, the Low Battery Symbol  will flash on the display screen, and a tone will be heard.

Using the Night Light

Press the ▼ button on the front of the clock to turn the night light ON/OFF and adjust the brightness setting.

Setting the Time

- Press the ▲ button to toggle between 12-hour and 24-hour time format.
- Press the Set button (S) to begin setting the Hour. Adjust using the ▼ and ▲ buttons, and press the Set button (S) to save. Repeat for the Minute, Year, Month and Date.
- If no button is pressed for an amount of time, the clock will automatically exit Time Setting mode.

Setting the Alarm & Snooze Settings

1. Press the Mode button (M) to enter Alarm Setting mode. "AL" will flash on the display screen.
2. Press the ▼ or ▲ buttons to turn the alarm ON/OFF. The 🌙 icon will appear on the display screen when the alarm is turned ON.
3. Continue pressing the ▼ ▲ buttons to turn the Snooze function ON/OFF. The ZZ icon will appear on the display screen when the Snooze function is turned ON.
4. Press the Set button (S). The Alarm Hour will begin flashing. Press the ▼ and ▲ buttons to adjust the Alarm Hour. Press the Set button (S) to save.
5. The Alarm Minutes will begin flashing. Press the ▼ and ▲ buttons to adjust the Alarm Minutes. Press the Set button (S) to save and move to the Snooze Setting mode.
6. The ZZ icon and "AL" will now flash on the display screen to indicate Snooze Setting mode. Press the ▼ and ▲ buttons to adjust the Snooze length. Press the Set button (S) to save.
7. Press the Mode button (M) to exit Alarm Setting mode and return to time display.

Note: The clock may automatically exit Alarm Setting mode if no button is pressed for a certain period of time.