

colorways

STELLAR
Alarm Clock Projector



Instruction Manual
CWLEDCLK

Before You Begin...

CAUTION

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

 
- **THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with this device.**
- Do not disassemble, modify, or repair the device.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- **Do not submerge in water.**
- Do not mix old and new batteries, or mix different types or brands of battery.

In the Box

- CWLEDCLK - **Alarm Clock Projector** (x1)
- Instruction Manual (x1)

Installing the Batteries

Remove the battery cover from the bottom of the clock. Insert 3 new AAA-sized Alkaline batteries following the polarity (+/-) diagram in the compartment. Do not mix old and new batteries, or mix different types or brands of battery. Replace the battery cover.

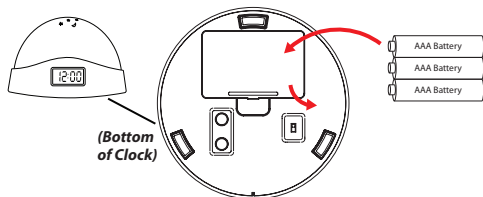


Getting Started

Clock Display Modes

The clock display will automatically turn ON after batteries are installed. The clock will show the time by default.

 - Press the **[ADJ]** button **once** to display **the alarm time**.
- Press the **[ADJ]** button **a 2nd time** to display **the date** (MMDD).
- Press the **[ADJ]** button **a 3rd time** to display **the seconds**.
- Press **a 4th time** to return to the time.

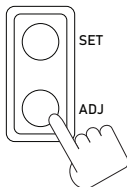

Note: the clock will automatically return to time display if no button is pressed after several seconds.

Setting the Clock Time and Date

1. Press the **[SET]** button 4 times. The current month (1-12) will be displayed. Press the **[ADJ]** button to increase the month to the desired digit, then press **[SET]** to save. The current day will now be displayed.
2. Press the **[ADJ]** button to increase the day to the desired digit, then press **[SET]** to save.
3. Repeat the above step to set the **hour** (AM/PM) and then **minute** of the **current time**. The clock will return to default time display.

Setting the Alarm Time

1. Press the **[SET]** button. The alarm clock time will blink, with **"AL"** appearing in the middle of the numbers. Press **[SET]** again. The **hour** of the **alarm time** will flash, along with **"A"** or **"P"** indicating AM or PM.
2. Press the **[ADJ]** button to increase the alarm time hour to the desired digit, then press **[SET]** to save. The **alarm time minute** will now blink.
3. Press the **[ADJ]** button to increase the alarm time minute to the desired digit, then press **[SET]** to save. The alarm time will be saved, and the clock will return to default time display.

Note: If you do not turn change any alarm settings, the clock will continue on to setting the date and current time.

Turning the Alarm ON/OFF

Press the **[SET]** button. The alarm clock time will blink.

- Press **[ADJ]** once to turn the alarm ON. The [(1·)] icon will appear at the top of the display, indicating that the alarm is on.
- Press **[ADJ]** a 2nd time to turn both the alarm and the hourly tone ON. The [(1·)] and [🔔] icons will appear on the display.
- Press **[ADJ]** a 3rd time to turn the alarm OFF but keep the hourly tone ON. The [🔔] icon only will appear on the display.
- Press **[ADJ]** a 4th time to turn both the alarm and the hourly tone OFF. Neither icon will appear on the display.

If you have changed the previous settings, press **[SET]** 3 times to save and return to time display. Otherwise, press **[SET]** 7 times to return to time display.

 
Shutting Off the Alarm

- When the alarm is ringing, press the **[ADJ]** button to snooze for 5 minutes. The [(t·)] icon will flash at the top of the clock display while in snooze mode.
- Press the **[SET]** button to shut the alarm off until the next day. The [(t·)] icon will appear solid on the display.
- To turn the alarm off completely, follow the instructions in the **Turning the Alarm ON/OFF** section above. The [(t·)] icon will disappear when the alarm is turn off.

Using the Projector


Move the power switch on the bottom of the clock to turn the star projector ON and OFF.

When powered ON, the projector lights will turn on and start cycling through different colors.



To project the clock display, press down on the top of the clock until it clicks. The clock will project the display in red light for ~15-20 seconds before fading away.

 For best results, project onto a surface that is at least 2 feet away.

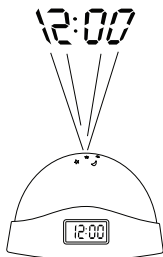

90-Day Limited Warranty

Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com
- Select the brand and model of your device
- Select "Service Request" and fill out the form to begin your inquiry
- Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China
Designed in USA
v1. 01-2022