# (Fold Inward) - - - - **▶**

(Back Cover)

# (Front Cover)

#### Re-Pairing the Earbuds

The CWP18 earbuds should pair to each other automatically when powered ON. If the earbuds come un-paired from each other, or only one earbud pairs to your device, try following these instructions to re-pair:

- Go to your device's Bluetooth settings and find the earbuds on the list of Bluetooth devices. Tap to manually "Forget" the earbud(s), then turn your device's Bluetooth OFF.
- 2. Place the earbuds in their case to power them OFF, then remove them to power
- them ON again.

  3. After a moment, the earbuds should automatically re-pair to each other. A voice will be heard indicating that they have paired to each other.

  4. Once re-paired, you can now pair the earbuds to your mobile device. Turn your
- device's Bluetooth back on again. Follow the instructions in the Bluetooth Pairing section of this manual to try pairing again.y

### Compliance Information

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the PCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause; undesired operation.

# Radiation Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

Direct current symbol.

This symbol signifies that this is a wireless device powered by Bluetooth® technology.

The Bluetooth The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, inc. and any use of such marks by Southern Felecom is under license.

This symbol represents FCC Declaration of Conformity and compliance.

### Warranty Information

#### 90-Day Limited Warranty

#### LIMITED WARRANTY TO ORIGINAL CONSUMER

LINIS CONTRAINET I U UNISIMENT CONSUMENT This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:

   Visit our customer support portal: www.customersupport123.com

   Select the brain d and model of your device

   Select: Service Request\* and fill out the form to begin your inquiry

   Exchanges require dated proof of purchase from an authorized retailer

you to file a claim with the carrier.

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, afters or repairs this product. All products being returned to the suthorized service center for repair must be suitably packaged.

products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPILED, INCLUDING, BUT NOT LIMITED TO, ANY IMPILED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY, DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY OR GENERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR QUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR BEPAIR REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PICE AT DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL DIFFECT. INDIRECT SPECIAL PUNITIVE OF CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAYINGS, DATA OR RECORDS CAUSED BY THE USE MISSES OR INABILITY TO USET HE PRODUCT EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SAILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTIES SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT AND IS NOTTRANSFERABLE.

ountries, states or provinces do not allow the exclusion or limitation of incidental or cons Softle countries, states or provinces do inclusive the exclusions may not apply to you. This werrant persecution or exclusions in any not apply to you. This werrant preserves or allow limitations on warranties, so limitation or exclusions may not apply to you. This werrant preserves were supported in a second province or province to province. Contact your authorized retailer to determine if another warranty applies.

ctor into a USB power source, such as the USB port on a computer, or into

a 5V USB adapter (not included) and plug into a wall socket.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.







### True Wireless Earbuds



Instruction Manual CWP18

### Before You Begin...

#### READ THIS MANUAL CAREFULLY AND SAVE FOR **FUTURE REFERENCE**

- To ensure safe and proper use, read all safety information before using the device. Only use with
- manufacturer-approved batteries, chargers, accessories, and supplies.

   THIS DEVICE IS NOT ATOY, do NOT allow children or pets to use or play with this device.
- Do not disassemble, modify, or repair the device.
  Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.

- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
  Do not submerge in water.
  Low power may cause poor Bluetooth connection or sound distortion.
  Do not overcharge battery.
  If using with a USB adapter, make sure the adapter is not damaged.
  Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
  The earbuds and case contain built-in batteries, and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

### Customer Support

For any questions or problems with your product, please visit our website at customerservice123.com

# In the Box

- CWP18 True Wireless Earbuds (x1)
- Charging Case (x1)USB Charging Cable (x1)User Manual (x1)

## Front of Case **Back of Case** Earbud Charging LED Indicator Case Charging LED Indicator Charging Port , O $\nu$ —LED Indicator [Multil Button: <u>~0</u> √ Press: Pause/resume playback, Answer/end phone call 2x Press: Adjust volume 4x Press: Dial last outgoing number

#### Location of Controls

### Insert the small connector of the supplied micro-USB charging cable into the micro-USB charging port on the back of the charging case. Insert the large



 
1. Make sure that the case is fully charged. Open the cover of the charging case and place the earbuds into the correct charging ports. They should easily "clip" into place and feel secure.

3. The earbuds will automatically begin

Charging the Case

charging when placed into the case. The earbuds' LED indicators will **turn RED** while charging and  ${\it turn}~{\it BLUE}$  when fully charged.

Note: A tone will be heard when the earbuds are low on battery. Please recharge when this



Getting Started

## Powering ON/OFF

- The earbuds will automatically power ON when removed from their case, and power OFF when placed into their case.
- When powered ON, the earbuds will automatically pair to each other and then enter Bluetooth pairing mode. They may automatically re-pair to a eviously-paired device in range.
- The earbuds can also be powered ON and OFF by pressing and holding the

Note: A tone will automatically power OFF if they do not connect to a Bluetooth device after 2 minutes

#### Adjusting Volume & Playback

To listen to music and talk on the phone using your True Wireless Earbuds, you must pair them to a Bluetooth-enabled device. If you are pairing the device for the first time, please see the **Bluetooth Pairing** section on the next page.

Once paired, playback can be controlled through your paired device, or with the controls on the earbuds below.

- 1x press the [Multi] button on either earbud to pause or resume playback. • Short press + hold the [Multi] button on the main earbud to skip to the next
- Short press + hold the [Multi] button on the auxiliary earbud to skip to the previous track

#### Bluetooth Pairing

- 1. Power the earbuds ON. Both of their LED indicators will **flash RED and BLUE**. 2. After a moment, a voice will be heard on the earbuds indicating that they have paired to each other. The LED indicator on the main earbud will flash RED and
- BLUE. The auxiliary earbud's LED indicator will be OFF. 3. Set your mobile device to search for Bluetooth devices. When it appears, select
- CWP18 from the list of found devices. 4. Once successfully paired to your device, a voice will be heard and the LED indicators on both earbuds will turn OFF.

Pairing Issues? See the Re-Pairing the Earbuds section on the next page.

#### Answering/Ending Phone Calls

When paired, you can control your paired device's phone functions using your device, or the controls on the earbuds listed below.

- 1x press the [Multi] button on either earbud to answer an incoming phone call.
   1x press the [Multi] button on either earbud to end a phone call.
- Press and hold the [Multi] button on either earbud to reject an incoming call.
  4x press the [Multi] button on either earbud to redial the last outgoing phone number dialed.

#### Activating Voice Assistant

If your Bluetooth-paired device has a Voice Assistant, you can activate it using the controls on the earbuds.

• 3x press the [Multi] button on either earbud to activate Voice Assistant.