(Fold Inward) - - - - **▶**

(Back Cover)

(Front Cover)

Compliance Information

FCC Information This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Rote: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment penerates, uses and can radiate radio frequency and, if not installed and used in accordance with the instructions, may cause harmful interference of radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

*Reorient or relocate the receiving antenna.

*Increase the separation between the equipment and receiver.

*Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

*Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operations.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

WARNING LHon Battery Inside
This product is fitted with a LHon battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.





This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® or mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Southern Telecom is under license. This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

90-Day Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:

 Visit our customer support portal: www.customersupport123.com

 Select the braid and model of your device

 Select "Service Request" and fill out the form to begin your inquiry

 Select "Service Request" and fill out the form an authorized retailer

 Exchanges require dated proof of purchase from an authorized retailer

you to file a claim with the carrier.

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, afters or repairs this product. All products being returned to the suthorized service center for repair must be suitably packaged.

products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSILY DESCRIBED ABOVE SHALL APPLY DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY OR JERRIOD STATED ABOVE NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. BEPAIR REPLACEMENT, OR REFUND, OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTORS OR ISSUED AND STATED THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LABLE FOR ANY INCIDENTAL DIRECT. INDIRECT, SPECIAL PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECONDS CAUSED BY THE USE, MISUSE OR INABILITYTO USE THE PRODUCT EXCEPT AS SECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FORECOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FORECOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTIES SHALL APPLY NOTWITHSTANDING THE FORECOING, CONSUMER'S NECOVERY AGAINST DISTRIBUTOR OF EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

ountries, states or provinces do not allow the exclusion or limitation of incidental or conse Softle Cultimities, states or provinces of increasor net exclusions may not apply to not. This or respective or callow limitations on warranties, so limitation or exclusions may may provide in order the province for allowing the province or province to province. Contact your authorized retailed to determine if another warranty applies. All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.





Getting Started

colorways Portable **Wireless Speaker**



Instruction Manual CW529

Before You Begin...

Customer Support

For any questions or problems with your product, please visit our website at customersupport123.com.

⚠ Caution

To ensure safe and proper use, read all safety information before using the device.

Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

• THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with

. Do not disassemble, modify, or repair the device.

- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not submerge in water. • Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
 If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials
- such as liquids, metallic powders, etc.

 The speaker contains a built-in battery, and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

In the Box

- CWP529 **Wireless Speaker** (x1) USB Charging Cable (x1)
- Instruction Manual (x1)

Location of Controls

Charging LED Indicator I.ED Indicator Charging (Back of Speaker) Off On Charging Port [+] Button: Press: Skip to next track Press + hold: Increase volume [**O**] Button: Press: Play/pause - [–] Button: Press: Skip to previous track Press + hold: Decrease volume

Charging the Speaker

Plug the small connector of the supplied USB charging cable to the USB charging port on the side of the speaker. Plug the large connector into the USB port on a computer or into a compatible 5V USB adapter (not included) and plug into an electrical outlet.

The charging LED indicator will turn RED while charging and turn OFF when fully charged. When low on power, a tone will be heard, indicating that the speaker should be charged.

Powering ON/OFF

- Make sure the speaker is charged before using for the first time
- Move the [Power] switch to the ON position to turn on the speaker. A tone will be heard and the speaker will enter Bluetooth pairing mode. The speaker will automatically re-pair to any nearby, previously-paired device.
- Move the [Power] switch to the OFF position to power the speaker off.

Playing Music

To listen to music on your speaker, make sure it is paired to a Bluetooth-enabled device. If you are pairing for the first time, see the **Bluetooth Pairing** section on the next page for instruction.

Bluetooth Pairing

- 1. Power the speaker on, A tone will be heard and the Bluetooth LED indicator will quickly flash BLUE.
- Set your mobile device to search for Bluetooth devices. When it appears, select **CWP529** from the list of found devices.
- 3. Once successfully paired, a tone will be heard and the Bluetooth LED indicator will slowly flash BLUE.

Once paired, you can adjust media playback and volume with the controls on your

- paired device, or with the buttons on the front of the speaker.
 Press the [O] button to pause and resume playback.
- Press the [+] and [-] buttons to skip tracks.
 Press and hold the [+] and [-] buttons to adjust volume.

