(Fold Inward) — — — **▶**

(Back Cover)

(Front Cover)

Using the FM Radio

Change input modes until you enter FM radio mode.

In FM radio mode, all playback will be controlled by the buttons on the speaker • Press the **center** of the **[Playback]** dial to *start or stop* automatically scanning & saving available radio stations. If it is not stopped, the radio will make a complete scan of and save all nearby radio stations with good reception.

 \bullet Press the \cite{black} dial to the \cite{black} and to the \cite{right} skip through saved stations.

Using a TF Card or USB Device

To insert a TF card, insert a TF card into the TF card slot on the speaker with the metal contacts facing down, and push in until it clicks.

To insert a USB device, such as a USB flash drive containing audio files, insert the USB device into the USB device port on the side of the speaker.

Change input modes until you enter TF or USB mode. The speaker will automatically begin playing music off the device. **Note:** You must have a TF card or USB device inserted to switch to TF or USB input mode.

In TF card and USB mode, all playback is controlled by the buttons on the speaker.

• Press the **center** of the **[Playback]** dial to pause and resume playback.

• Press the [Playback] dial to the left and to the right skip tracks.

Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment penerates, uses and can rediste radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference or radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

* Recrient or relocate the receiving antenna.

* Increase the separation between the equipment and receiver.

* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

* Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

exposure condition without restriction.

WARNING Li-ion Battery Inside
This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

Rating Label

— Direct current symbol.

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.





This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

90-Day Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:

 *Visit our customer support portal: www.customersupport123.com

 *Select the brand and model of your device

 *Select "Service Request" and fill out the form to begin your inquiry

 *Exchanges require dated proof of purchase from an authorized retailer

service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THANTHOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY OF THE RODGE SHALL APPLY DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY OF GLARANTY GIVEN OF ANY PERSON, IF HIM OR ENTITY WITH RESPECT TO THE PRODUCT OTHER EXPRESS WARRANTY OF GLARANTY GIVEN OF ANY PERSON, IF HIM OR ENTITY WITH RESPECT TO THE PRODUCT OF A THE ORDER OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR DAMAGES IS UCH AS BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINS, DATA OR RECORDS CAUSED BYTHE USE, MISSUES OR IN ABBLITYTO USE FOR THE PRODUCT EXCEPT AS STATE HEREN NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURPORAGE FORCE OF THE PRODUCT SOLD BY USERBURGHER WARRANTIES.

THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT WAS RAPRANTY BALL NOT EXCEED THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT SHAD BY USERBURGHER SHALL AND EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOTTRANSFERBLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty types ou posepical legal rights, and you may have other rights that very from state to state or province to province. Contact your authorized retailer to determine if another may have other rights that very from state to state or province to province. Contact your authorized retailer to determine if another and the province of the provi

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Designed in US Printed in China v1. 10-2021



Instruction Manual

LED Blast Boombox

DBT1063

Before You Begin...

READ CAREFULLY AND KEEP THIS MANUAL

Customer Support For any questions or problems with your product, please visit our website at customersupport123.com and click on Product Support.

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

• THIS DEVICE IS NOT A TOY, keep away from children and pets.

• Do not disassemble, modify, or repair the device.

- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet
- Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.

 If using with a USB adapter, make sure the adapter is not damaged.


 Do not allow the USB port or the connectors of the supplied USB cable to be exposed. to dust or water, or to come into contact with any conductive materials such as liquids,
- metallic powders, etc.

 The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device

In the Box

- DBT1063 Wireless Speaker (x1)
 2-in-1 Charging/AUX Cable (x1)
- User Manual (x1)

Micro-USB [Playback] Dial: Charging /AUX Port Play/pause, skip tracks, adjust volume, change input mode

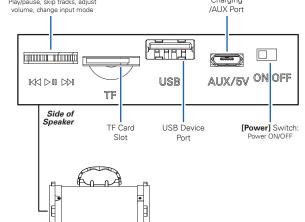

DBT1063

Location of Controls

Charging the Speaker

Plug the micro-USB connector of the included 2-in-1 charging/AUX cable into the charging/AUX port on the side of the speaker. Plug the USB (largest) connector into the USB port on a computer, or a **5V USB adapter** (not included) and plug into

The LED indicator will turn RED while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to

Powering ON/OFF

- Move the [Power] switch to power the speaker ON and OFF.
- When powered ON, the speaker will enter Bluetooth pairing mode, and will automatically re-pair to any available previously-paired device nearby.

Changing Input Modes

Press and hold the **center** of the **[Playback]** dial to switch between input modes.

ATF card or USB device must be inserted or connected to switch to these modes

Adjusting Volume

all modes, overall volume can be adjusted with the [Playback] dial on the side of the speaker. In AUX and Bluetooth modes, volume can also be controlled by your connected device.

Press + Hold Adjust Volume

Getting Started

- Press and hold the [Playback] dial to the right to increase volume.
- Press and hold the [Playback] dial to the left to decrease volume

- Adjusting Playback In Bluetooth, FM radio, TF Card and USB Device modes, playback can be controlled by the [Playback] dial on the side of the speaker.

 Press the center of the [Playback] dial to pause audio. Press again to resume.
- Press the [Playback] dial to the right to skip to the next track/station.
 Press the [Playback] dial to the left to skip to the previous track/station.

- 1. Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode. The LED indicator will **turn solid BLUE**.
- Set your mobile device to search for Bluetooth devices. When the list appears, select DBT1063 from the found devices.
- 3. After a successful pairing, a tone will be heard and you will be able to play music on the speaker.

Using the AUX Input

Insert the micro-USB connector of the included 2-in-1 charging/AUX cable into the charging/AUX port on the side of the speaker. Insert the 3.5 mm AUX jack end (smallest, round) into the headphone jack or 3.5 mm AUX output port on your

Switch input modes until you reach AUX mode.

In AUX mode, all playback will be controlled by your connected device.