# (Fold Inward) — — — **▶**

# (Back Cover)

# (Front Cover)

### Using the FM Radio

 
The USB charging cable must be plugged into the charging port, with the other end unplugged, in order to function as an antenna. See diagram at right.

Change input modes until you enter FM

In FM radio mode, playback will be controlled by the buttons on the speaker.

• Press + hold the [ ] button to start





## Using a TF Card or USB Device

Oshing a Thi Card of OSB Device To insert a TF card, insert a TF card into the TF card slot on the speaker with the metal contacts facing down, and push in until it clicks.

To insert a USB device, such as a USB flash drive containing audio files, insert the USB device into the USB device port on the speaker.

Change input modes until you enter TF or USB mode. The speaker will automatically begin playing music off the device. **Note:** You must have a TF card or USB device inserted to switch to TF or USB input mode.

In TF card and USB mode, all playback is controlled by the buttons on the speaker.

### Using Phone Functions

When paired to a Bluetooth device, you can take phone calls using the buttons on the speaker and talk through the built-in microphone.

• Press the [ ▶] button to answer an incoming call.
• Press the [ ▶] button again to end the call.

# Compliance Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference rot radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

\* Receiration reclocate the receiving antenna.

\* Increase the separation between the equipment and receiver.

\* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

\* Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operations.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING Li-on Battery India

Warning Li-on Battery India

This product is fitted with a Li-on battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).









This symbol represents FCC Declaration of Conformity and compliance.

# Warranty Information

# 90-day Limited Warranty Territory: United States/Canada

LIMITED WARRANTYO ORIGINAL CONSUMER
This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship! Civarranty') as follows:

- To obtain warranty service:

   Visit our customer support portal: www.customersupport123.com

   Select the brand and model of your device

   Select Service Request and fill out the form to begin your inquiry

   Exchanges require dated proof of purchase from an authorized retailer

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of ocustom firms of reasonable care, unauthorized modification including software modifications such as the installation of ocustom firms of the control of the submitted of the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OFHER THANTHOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY, DISTRIBUTIOR FUTURE DISCLAMDS ALL WARRANTIES, AFTER THE EXPRESS YEAR DESCRIBED ABOVE SHALL APPLY, DISTRIBUTIOR FUTURE DISCLAMDS ALL WARRANTIES, AFTER THE EXPRESS WARRANTIES OF THE ORIGINAL PURPOSE, OTHER THANTHOSE EXPRESS WARRANTIES OF THE ORIGINAL PURPOSE, OTHER THANTHOSE EXPRESS WARRANTIES OF THE ORIGINAL PURPOSE, OTHER THANTHOSE SHALL BE BINDING ON DISTRIBUTIOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURPOSE, OTHER THAN THE ORIGINAL PURPOSE. OTHER CARE SHALL BE STATED THE EXPLOSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTIOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, TROUBLECT, DISTRIBUTIOR OR OTHER SHALL APPLY, NOTIVITISTANDING THE FORDING OF THE PRODUCT SHALL APPLY, NOTIVITISTANDING THE FORDING OF THE PROPOSE OF THE PROPOSE

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Designed in US Printed in China v1. 09-2021

**Getting Started** 

# Wireless Speaker

with Reactive LED Lights



Instruction Manual DRT1071

# Before You Begin...

### **READ CAREFULLY AND KEEP THIS MANUAL**

Customer Support For any questions or problems with your product, please visit our website at customersupport123.com.

# **⚠** Caution

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

• THIS DEVICE IS NOT A TOY, keep away from children and pets.

 
- Do not disassemble, modify, or repair the device.
  Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet

# Do not submerge in water.

 
- Low power may cause poor Bluetooth connection or sound distortion.
   Do not overcharge battery.
   If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of

- In the Box
   DBT1071 Wireless Speaker (x1)
- Micro-USB Charging Cable (x1)
   User Manual (x1)

### [+]|[-]Buttons: [ M ] Button: 「 D ] Button:







# Location of Controls

additional speaker

# Charging the Speaker

Plug the small connector of the included micro-USB charging cable into the charging port on the back of the speaker. Plug the large connector into the USB port on a computer, or into a **5V USB adapter** (not included) and plug into a wall

The charging LED indicator will turn RED while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

## Powering ON/OFF

- Press + hold the [ ] button on the speaker to power ON and OFF:

  When powered ON, the speaker will enter Bluetooth pairing mode, and will automatically re-pair to any available previously-paired device nearby.

### Adjusting Volume

In all modes, overall volume can be adjusted with the buttons on the speaker. In AUX and Bluetooth modes, volume can also be controlled by your connected

- Press + hold the [ + ] button to increase volume.
- Press + hold the [ ] button to decrease volume.

## Adjusting Playback

In Bluetooth, FM Radio, TF and USB modes, playback can be controlled by the buttons on the speaker.

- Press the [ ] to pause playback. Press again to resume.
- Press the [+] button to skip to the next track/station.
- Press the [ ] button to skip to the **previous** track/station.

### Changing Input Modes

Press the [ M ] button on the speaker to switch input modes.

ATF card or USB device must be inserted or connected to switch to these modes.

### Pairing Two Speakers

- Power both speakers ON at the same time.
   Press the [ ] button on both speakers.
- 3. The speakers should pair to each other, and a tone will be heard. If the speakers do not pair to each other, try powering them OFF and following these instructions again.

# Bluetooth Pairing

- 1. Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode.
- 2. Set your mobile device to search for Bluetooth devices. When the list appears, select DBT1071 from the found devices.
- 3. After a successful pairing, a tone will be heard and you will be able to play music on the speaker.

### Using the AUX Input

Insert one end of a 3.5 mm auxiliary cable (not included) into the 3.5 mm AUX port on the speaker. Insert the other end into the headphone jack or 3.5 mm AUX output port on your media-playing device.

Switch input modes until you reach AUX mode.

In AUX mode, all playback will be controlled by your connected device