



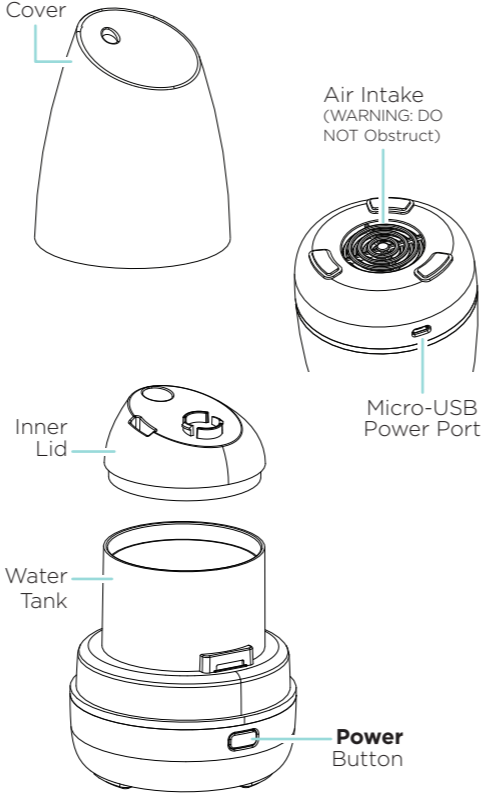 
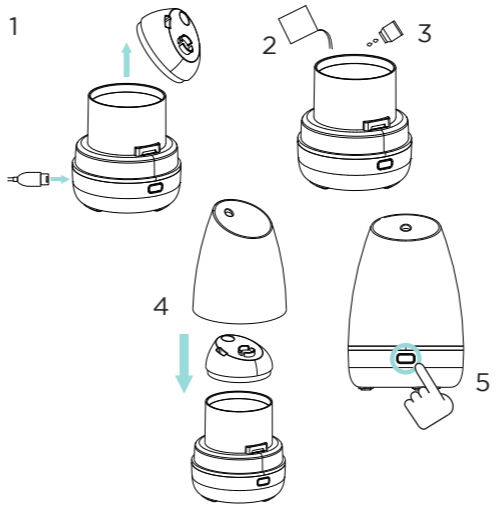 
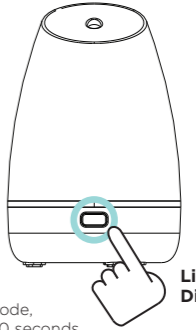 


Mahli User Guide (Cover)

(Front)

<h3>Precautions & Warnings</h3> <ol style="list-style-type: none"> Do not fill over MAX level line. Do not turn the aroma function on when the diffuser is empty. Do not touch the inside base of the tank. Clean regularly per the maintenance instructions in this user manual to avoid malfunctions. Always unplug the power cable before maintenance. Always pour any remaining oil out of the tank and wipe with a clean, dry cloth. Essential oils can stain. In the event of a spill or leakage, please wipe away any water or oil with a soft cloth. Do not let aroma blow directly onto furniture, clothing, art, or any valuable objects. Keep away from direct sunlight, heat sources, air conditioners, and fans. Always keep on a stable, flat surface. Do NOT place on a carpet, bed, cushion or other non-flat, non-stable surface. Keep away from electronic equipment. Do not tip the product as it may cause oil to enter the mechanism and cause malfunction. Do not use for more than 6 hours at a time. Never move the product while in use. Do not touch any part of the product with wet hands. Keep out of reach of children and pets. Children should not be left unsupervised near this product. This unit is not to be used by children or any person(s) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given express supervision and instruction. Keep the power jack clear of pathways, and do not forcefully pull or remove from the unit. If smoke or burning smell is detected, immediately unplug the unit. 	<h3>Legal Information</h3> <p>READ CAREFULLY AND KEEP THIS MANUAL</p> <p>FCC Information This device complies with Part 15 of the FCC Rules.</p> <p>Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>This product complies with the requirements for Part 18 of the FCC Rules. Although this product complies with FCC, it may interfere with other devices. If this product is found to interfere with another device, separate the other device and this product.</p> <p>Radiation Exposure Information This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.</p> <p>Rating Label Definitions</p> <p> Direct Current</p> <p> This symbol represents FCC Declaration of Conformity and compliance.</p> <p style="text-align: right; font-size: small;">Printed in China/Designed in the U.S. v105/2020</p>	<h3>Limited Warranty</h3> <p>This product as supplied and distributed new by Southern Telecom, Inc. to the original consumer purchaser is warranted by Southern Telecom against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.</p> <p>Obtaining Warranty Service To obtain warranty service on your Polaroid product go to our website, SouthernTelecom.com, and click on Product Support. Select Mahli, then click on Service Request to get started.</p> <p>Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.</p> <p>IN NO EVENT WILL SOUTHERN TELECOM, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY.</p> <p>Warranty Service Not Provided</p> <ul style="list-style-type: none"> This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, or unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged. No warranties, whether express or implied, including, but not limited to, any implied warranties of merchantability or fitness for a particular purpose, other than those expressly described above shall apply. Distributor further disclaims all warranties after the express warranty period stated above. No other express warranty or guaranty given by any person, firm or entity with respect to the product shall be binding on distributor. Repair, replacement, or refund of the original purchase price - at distributor's sole discretion - are the exclusive remedies of the consumer. In no event will distributor or its manufacturers be liable for any incidental, direct, indirect, special, punitive or consequential damages (such as, but not limited to, damages for loss of products, business, savings, data or records) cause by the use, misuse or inability to use the product. Except as stated herein, no other warranties shall apply. Notwithstanding the foregoing, consumer's recovery against distributor shall not exceed the purchase price of the product sold by distributor. This warranty shall not extend to anyone other than the original consumer who purchased the product and is not transferable. <p>Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.</p>	<div style="text-align: center;">  <h2>LOMI</h2> <h3>Serena</h3> <h4>Ultrasonic Diffuser</h4>  <p>Instruction Guide LOMD1074</p> </div>
--	---	---	--

<h3>Getting Started</h3> <h4>Questions & Support</h4> <p>If you have any questions or problems concerning this product, please visit our website at SouthernTelecom.com and click on Product Support.</p> <p>In the Box</p> <ul style="list-style-type: none"> LOMD1074 - Diffuser (x1) USB Power Cable (x1) Essential Oil (x1) User Manual (x1) <p>Before You Begin...</p> <ul style="list-style-type: none"> This product is NOT a toy, keep away from children and pets. This device is not intended to be a substitute for medical attention. The amount and intensity of aroma produced will vary. Factors that affect production of aroma can include water type, humidity, temperature, air current, and/or type or brand of essential oil used. It may take up to a half hour before you can smell the essential oil. Aroma Operation Time: Up to 6 hours Water Tank Capacity: 50 mL The suggested room size for this device is ~150 ft² (this may vary greatly by environment, type of essential oil used, etc.). Only 100% natural essential oil should be used with this product. Oil containing chemical fragrance, spice, or other impurities may cause malfunctions. ONLY use the supplied power cable. When not in use, the diffuser should be stored in a dry, cool location, away from sources of water or heat. It is recommended that the diffuser be covered to protect it from exposure to dust if it will not be in use for a long period of time. Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions. Do not submerge in water. Do not open this product or attempt to repair the unit yourself should it not be working. <p style="text-align: center; font-size: 2em; font-weight: bold; color: #00A08A;">MÄHLI</p>	<h3>Location of Controls</h3> 	<h3>Setup</h3> <ol style="list-style-type: none"> Remove the cover and inner lid and insert the small connector of the supplied USB power cable into the power jack on the side of the diffuser. Insert the other end into a 5V/1A USB power source, such as a 5V/1A USB adapter (not included) and plug into an electrical outlet. Fill the tank with room temperature water up to the MAX level line. Add 5 - 7 drops of essential oil. Place the inner lid and cover back on then set the diffuser on a flat, sturdy surface. Press the Power button on the front of the diffuser to turn ON.  <p>CAUTION: Using more than the recommended amount of oil may cause the diffuser to get clogged and not operate properly.</p>	<h3>Using the Diffuser & Lights</h3> <p>Set up the diffuser and connect to power.</p> <ul style="list-style-type: none"> Press the Power button on the front of the diffuser to turn the diffuser and LED lights ON. The lights will begin cycling through different colors. Press the Power button a 2nd time to freeze on the current LED light color. Press the Power button a 3rd time to turn the LED lights OFF. Press the Power button a 4th time to turn the diffuser OFF.  <p>Lights + Diffusion</p> <p>Intermittent Mode At any time, press and hold the Power button to switch between Continuous Mist mode and Intermittent Mist mode. The LED indicator will flash once to indicate the switch. In Intermittent mode, the diffuser will mist every 30 seconds.</p> <p>Note: The diffuser will automatically shut down if there is no water in the tank.</p> <p>When finished using, disconnect from power, drain any remaining water from the tank, carefully rinse, rinse and let dry. Carefully clean the nozzle over the ultrasonic pad with a cotton swab.</p> <p>Cleaning If you would like to more thoroughly clean the diffuser, use a small amount of neutral detergent, such as dish soap. Never use harsh chemicals, or submerge the diffuser in water.</p> <p>Storage If the diffuser will not be used for a long period of time, it is recommended to store in an airtight box or bag (not included) away from sources of sunshine, heat, wind or moisture.</p>
--	--	---	--

(Back)