

Compliance Information

READ CAREFULLY AND KEEP THIS MANUAL

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Rating Label Definitions

Direct Current

Comply with Waste Electrical and Electronic Equipment (WEEE) Directive (2012/19/EU)

The product is in compliance of energy efficiency.



This symbol indicates that information could be exchanged between wireless devices such as personal digital assistants (PDAs), mobile phones, laptops, computers, printers and digital cameras via a secure, low-cost, globally available short-range radio frequency band. The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc.

Warranty Information

90-day Limited Warranty

Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our website at www.southern telecom.com
- Click on **Product Support**
- Select the **Brand** of your device
- Select **Service Request** and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING. CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China
Designed in USA
v1.09/2019



LOMI

Relaxation 2-IN-1 KIT
Wireless Bluetooth Speaker
with Soothing Sounds & Eye mask



User Guide
LOMD5037

Before You Begin...

CAUTION

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **READ CAREFULLY AND KEEP THIS MANUAL**
- **THIS IS NOT A TOY.** Please keep away from children
- Low power may cause poor Bluetooth connection or sound distortion
- Do not overcharge the battery
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
- Do not submerge in water.
- Do not open this product or attempt to repair the unit yourself should it not be working.
- Do not allow the USB ports, power jack or other inputs of the device to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.

Questions & Support

If you have any questions or problems concerning this product, please visit our website at SouthernTelecom.com and click on **Product Support**.

In the Box

- LOMD5037 - **Wireless Speaker** (x1)
- USB Charging Cable (x1)
- Eye Mask (x1)
- User Manual (x1)
- Melodies App Flyer (x1)

Getting Started

Charging the Speaker

Insert the small connector of the supplied micro-USB charging cable into the USB charging port on the back of the speaker. Insert the large connector into the USB port on a computer, a USB charging device, or a 5V USB adapter (not included) and plug into a wall socket.

The charging LED indicator will **turn RED** while charging and turn off when fully charged. On low power, a tone will be heard indicating that the speaker needs to be recharged.


Location of Controls

Set Timer


- 15 min
- 30 min
- 1 hr

Ambient Settings

- White Noise
- Ocean Waves
- Rain Shower
- Tranquil Stream
- Summer Night

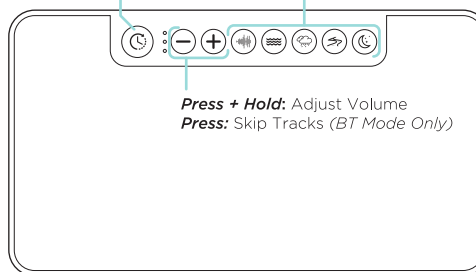

Press + Hold: Adjust Volume
Press: Skip Tracks (BT Mode Only)

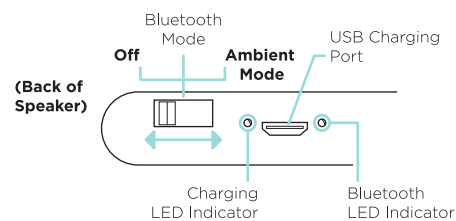

Powering ON/OFF

- Slide the **[Power]** switch to the middle position to power the speaker on in Bluetooth mode. The speaker will re-pair to any nearby-previously paired devices.
- Slide the **[Power]** switch to the right position to power the speaker on in Ambient mode
- Slide the **[Power]** switch to the left position to power off.

Adjusting Volume

- Press and hold the **[+]** and **[-]** buttons to adjust volume in either Ambient or Bluetooth mode.
- Alternatively, adjust volume from your paired device when connected via Bluetooth.

Using the Ambient Noise Modes

- Slide the **[Power]** switch to the right position to set the speaker in ambient mode.
- Using the buttons on the front, choose from White Noise, Ocean Waves, Rain Shower, Tranquil Stream, or Summer Night.
- Press the **[Timer]** button to set a timer that will automatically turn the speaker off after 15 minutes, 30 minutes, or 1 hour. The LED indicators next to the button will turn on to display the amount of time.

Note: The speaker will continue to play ambient noise indefinitely if no timer is set.

Playing Music

- To listen to music on your speaker, you must be paired to a Bluetooth device (see section below). Once paired, playback is controlled via your paired device or with the controls below:
- Press the **[+]** and **[-]** buttons to skip tracks.

Bluetooth Pairing

1. Slide the **[Power]** switch to the middle position. A tone will be heard and the Bluetooth LED indicator will **quickly flash BLUE**.
2. Set your phone to search for Bluetooth devices. Select **LOMD5037** when it appears on the list of found devices.
3. Once successfully paired, a tone will be heard and the Bluetooth LED indicator will **slowly flash BLUE**.