

Lomi User Guide

(Front)

Warning (continued)

- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Unplug & store away during rain, lightning & thunder storms, or when unused for long periods of time.
- Do not open or attempt to repair the unit yourself should it not be working.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged or wires are exposed; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- WARNING:** The mains plug is used as a disconnect device; the disconnect device shall remain readily operable.
- WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on apparatus.

Caution

- Do not use appliance for other than intended use.
- Do not operate unattended.
- Do NOT put fingers or hands into the product.
- Keep out of reach of children and pets. Children should not be left unsupervised near this product. This unit is not to be used by children or any person(s) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given express supervision and instruction.

Additional Precautions and Warnings

- The output power taken from the supply must not exceed the rating given on the power supply.
- Always turn off and unplug when not in use or before maintenance.
- Keep away from direct sunlight, heat sources, air conditioners, and fans.
- Always keep on a stable, flat surface. Do NOT place on a carpet, bed, cushion or other non-flat, non-stable surface.
- Keep away from electronic equipment.
- Never move the product while in use.
- Keep the power cable clear of pathways, and do not forcefully pull or remove from the unit.
- To disconnect, grip plug and pull from wall outlet. Never pull on cord to disconnect.
- If smoke or burning smell is detected, immediately unplug the unit.
- Do not use outdoors.
- If hot after using, wait for the device to cool down completely before touching.

Electric Heater Warnings

- WARNING** you must not cover this appliance. Covering this appliance presents fire risk and will activate the safety fuse permanently disabling the unit.
- Use only the voltage specified on the rating label of the appliance.
- Keep all objects at least 1 metre from the front, sides and rear of the appliance.
- This appliance is intended for household use only and not for commercial or industrial use.
- Outdoor use only.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
- Always unplug appliance when not in use.
- When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Customer Services Team.
- If your appliance does not work, or is not working properly, contact the place of purchase or the Customer Services Team.
- Do not connect the appliance to mains supply until completely assembled and adjusted.
- Ensure hands are dry before handling the plug or main unit.
- The heater must not be located immediately below a socket outlet.
- Ensure appliance is on a flat, stable, heat-resistant surface.
- Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
- Carry out regular checks of the supply cord to ensure no damage is evident.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not operate this appliance with a damaged cord, plug or other appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
- Do not heat, kick or whip the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is uncoiled before use.
- It is recommended that this appliance is plugged directly into the wall socket. The use of power boards is not recommended as many power boards are not designed to supply power to high voltage appliances. A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
- Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not place cord under carpet or cover with rug or furniture. Arrange the cord so it cannot be tripped over.
- Do not place appliance on bedding or on thick & long carpet where the springs may get blocked. Switch off and use handle provided when moving.
- Do not place appliance close to radiant heat source. Never use the appliance to dry clothes.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not sit on the appliance.
- Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
- There are no user-serviceable parts installed in the unit.
- Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
- This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science etc are stored.

Compliance Information

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Rating Label Definitions

The ETL Mark is proof of product compliance to North American safety standards. Authorities Having Jurisdiction (AHJs) and code officials across the US and Canada accept the ETL Listed Mark as proof of product compliance to published industry standards.

This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

90-Day Limited Warranty

Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com
- Select the brand and model of your device
- Select "Service Request" and fill out the form to begin your inquiry
- Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China / Designed in the U.S.
v1.02/2022



L O M I
HEATER
2-IN-1 PORTABLE
HEATER & FAN

User Guide
LOMH613

Before You Begin...

READ FULL MANUAL BEFORE USING & SAVE FOR FUTURE REFERENCE

Warning


- THIS IS NOT A TOY, please keep away from children.**
- WARNING:** Keep children away from the heater, cord and outlets. Never let children touch or play with the heater. Supervised attention must be given when children are present.
- Do not attempt to modify or repair the device yourself. There are no user serviceable parts.** If you experience any problems with the device, stop using immediately and contact the manufacturer.
- Do not cover.** If covered, there is the risk of overheating.
- Do not use this fan heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use the fan heater in the rooms with explosive gas or while using inflammable solvents, varnish or glue.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- The heater must be positioned at least 50cm from furniture or other objects.
- When the appliance is used in portable version, do not place it up against walls, furniture, curtains, etc.
- The appliance must be installed so that the switches and other controls can not be reached by persons using the bath tub or the shower.
- This appliance comes with a Y-type connection. Replacement of the feed cable must be entrusted to a technician only, because such work requires special tools.
- The appliance must not be positioned directly underneath a fixed power point.
- Do not use the appliance while it is cooling down, in order to avoid overheating with the attendant risk of fire.
- Do not use the appliance in rooms less than 4 square meter area.
- The heater is fitted with a safety device which will switch off the heater in case of accidental overheating (eg. Obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.

Questions & Support

If you have any questions or problems concerning this product, please visit our website at customersupport123.com.

Getting Started

Location of Controls

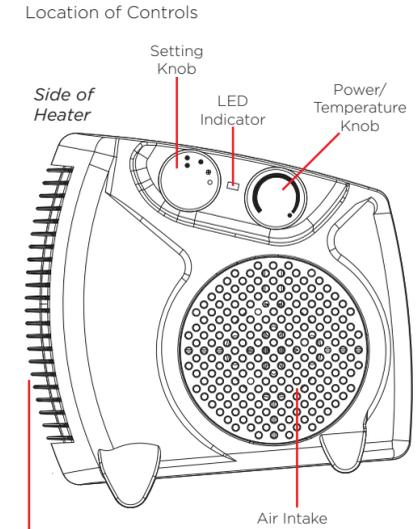

Setting Up


- Choose a location for the heater where it will be away from water, wind and heat and flammable materials. Leave 1m/3.3ft of clear space in front of the heater, and 50cm/20in behind.
- Unpack the heater and all components from the box. Remove all protective & packing materials from the heater and its components.
- Plug into a wall outlet.

Note: The appliance requires no installation, it should be used solely as a portable appliance. **Portable appliances are not suitable for use in a bathroom.**

Using the Heater

- Set up according to the instructions above.
- Turn the Power/Temperature Knob on the heater to Power ON/OFF and select the temperature. The LED indicator will light up RED when the heater is on.
- Turn the Setting Knob on the heater to turn the heater on High Power, Low Power, Fan ONLY, or OFF.

On the Fan ONLY setting, no heat will come out.

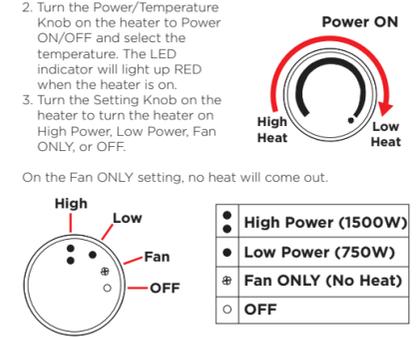

Auto Shutoff

The heater is fitted with a safety device which will switch off the heater in case of accidental overheating (eg. Obstruction of air intake and outlet grilles, motor turning slowly or not at all).

To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.

Cleaning & Storage

To clean, power OFF, unplug, and allow the heater to cool down completely.

Clean the outside of the heater with a damp cloth ONLY.

Clean the intake/outlet grilles frequently.

- Never use corrosive cleaners.**
- Never submerge ANY part of the heater in water.**
- Never touch the power plug with wet hands, or allow the plug to get wet.**

The heater should be stored in a cool, dry location away from combustible/flammable liquids and materials, and away from sources of light, heat, wind, moisture or water.

Additional Specific Safety Warnings

- Only connect the fan heater to a single-phase socket with a main voltage as specified on the rating plate.
- This appliance meets the electromagnetic compatibility requirements specified in EN 55004/95 with regard to interference with radio and TV sets.
- Do not leave your home while the appliance is in function: ensure that the switch is in OFF(O) position and the thermostat is in minimum position. Always unplug the appliance.
- Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 100cm away from the fan heater.
- If wall mounted do not fix to combustible material such as wooden, synthetic or plastic surfaces. Do not hang anything on or in front of the fan heater.
- Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
- Keep the air inlet and outlet free from objects: at least 1m in front and 50 cm behind the heater.
- Do not install the heater right below a socket.
- Do not let animals or children touch or play with the fan heater. Pay attention! The air outlet gets hot during operation (more than 90 C, or 175 F).
- Do not cover, if covered, there is the risk of overheating.
- If the cord of this appliance is damaged discontinue use of this product and contact your retailer for further instructions.
- Keep the fan heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, or fire or damage to the heater.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL SAFETY WARNINGS BEFORE USE. FOLLOW ALL SAFETY INSTRUCTIONS.



WARNING
RISK OF ELECTRIC SHOCK

READ ALL INSTRUCTIONS BEFORE OPERATING. ALWAYS FOLLOW ALL INSTRUCTIONS. FAILURE TO FOLLOW INSTRUCTIONS CAN RESULT IN SERIOUS INJURY.

CAUTION: RISK OF ELECTRIC SHOCK
The lightning bolt symbol is a warning alerting you to presence of "dangerous voltage" and risk of electric shock.

CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN
WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT ATTEMPT TO OPEN OR REPAIR UNIT. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

CAUTION: RISK OF DANGER
The exclamation point is a warning alerting you to important safety instructions that must be followed carefully.

Model No.:LOMH613
Input: 120 V~, 60Hz
Power: 1500 W

Warning
To reduce risk of electric shock, and to ensure safe and proper use, read all safety information before using the device.

- THIS IS NOT A TOY, Please keep away from children and pets.**
- Follow all instructions. Read all warnings.
- Only use with manufacturer-approved accessories, and supplies.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
- Keep away from rain and moisture. Do not submerge in water.
- Never operate or handle the product or plug with wet hands.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including appliances) that produce heat.

Important safety warnings continued on the next two pages.

(Back)