
Lomi User Guide (Cover)

(Front)

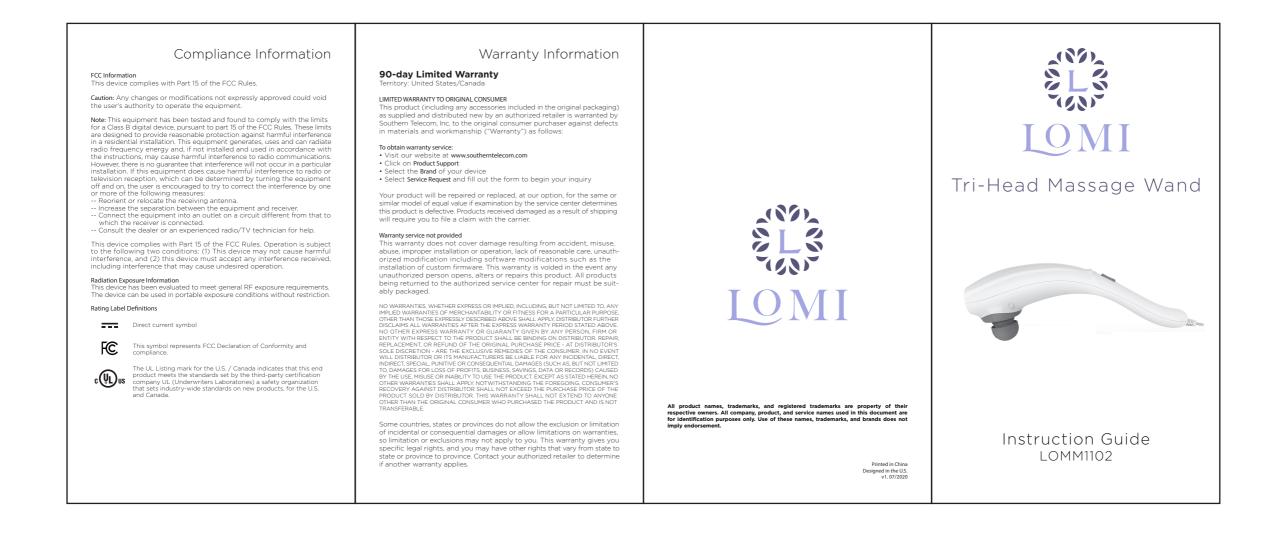

Before You Begin...

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP THIS MANUAL



A Warning

To reduce risk of burns, fire, electric shock or injury, and to ensure safe and proper use, read all safety information

ensure sare and proper use, read all safety informations
before using the device, and follow all instructions.
THIS IS NOT A TOY. Please keep away from children and pets.
Follow all instructions. Heed all warnings.
For indoor use only.
Only use with manufacturer-approved accessories, and supplies.
Do not expose the unit to extreme temperatures (heat or cold), open

Keep away from water and other moisture. t or plug with wet hands.

Never operate or nanole the product or plug with wet han Clean only with a damp or dry cloth.
 Install in accordance with the manufacturer's instructions.

Install in accordance with the manufacturer's instructions.
 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifers) that produce heat.
 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 Protect the power cord from being walked on or pinched particularly at plugs. Convenience receptacles, and the point where they exit from the apparatus.

 Unplug during lightning storms or when unused for long periods of time · Do not open or attempt to repair the unit yourself should it not be

working. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged or wires are exposed; liquid has been spilled or objects have failen into the apparatus; the apparatus has een exposed to rain or moisture, does not operate normally, or has

WARNING The mains plug is used as a disconnect device; the disconnect device shall remain readily operable.
 WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on apparatus.

NORTH AMERICAN MODELS WITH POLARIZED PLUGS:

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet. 4

Caution

Do not use appliance for other than intended use. Do not operate unattended. Do NOT put fingers or hands into the product.

 Keep out of reach of children and pets. Children should not be left unsupervised near this product. This unit is not to be used by children or any person(s) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given express supervision and instruction. Do not use after taking painkillers, alcohol, sedatives or any medication that can impair the user's ability to operate the

controls. Do not use on sensitive body parts such as the eyes or groin. Do not use on open skin eruption otherwise damaged skin

Additional Precautions and Warnings

Always turn off and unplug when not in use or before maintenance.
Keep away from direct sunlight, heat sources, air conditioners, and fans.
Do not use for longer than 15 minutes. Allow to cool between uses. Keep away from electronic equipment. If smoke or burning smell is detected, immediately unplug the unit.
It is recommended, if the product will not be in use for a long period of time, that the massager be to protect it from exposure to dust

Questions & Support

• Do not use outdoors.

If you have any questions or problems concerning this product, please visit our website at **SouthernTelecom.com** and click on Product Support.




MOT Intended for Medical Use

This product is designed as a non-professional device to soothe tired and aching muscles. It is not intended to be a substitute for medical attention. If your ailments persist or worsen after use, contact your doctor immediately

Please consult your doctor prior to using this product, if: You are pregnantYou have a pacemaker

· You have any concerns regarding your health In the Box

• I OMM1102 - Massager (x1) Massage Attachments (x3)
 Instruction Manual (x1)

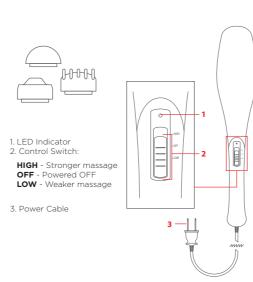


Remove any plastic or protective cover on the plug of the massager and plug into a wall outlet.

Move the control switch to the HIGH or LOW setting and gently place on sore area.

Consistently move the massager node around the area in a circular motion, making sure to NOT press down too hard or focus on one

 area for too long.



While in use, the LED indicator will be

solid GREEN.

To change the massager attachments, unscrew the one currently on the massager node and screw your selected one on.

supplied massager attachments attached if it is being used. Under no circumstances should the massager be used without one of the supplied massager attachments.

WARNING: When using the massager on the neck or lower back area, be careful to not apply excessive pressure as these areas can be more sensitive and more susceptible to injury than other parts of the body.

(Back)