



LOMI

Micro Vibrating  
Facial Roller & Massager



Instruction Guide  
LOMM2100

## Before You Begin...

### **READ CAREFULLY AND KEEP THIS MANUAL**

#### NOT Intended for Medical Use

This product is designed as a non-professional device for relaxation. It is not intended to be a substitute for medical attention. If your ailments persist or worsen after use, contact your doctor immediately.

Please consult your doctor prior to using this product if you have diabetes, poor circulation or heart disease, rheumatoid arthritis, are pregnant, or have any concerns regarding your health.

#### General Warnings

- **THIS IS NOT A TOY, please keep away from children.**
- Follow all instructions. Use the appliances only for their intended uses as described in this manual.
- Keep away from extreme temperatures (heat or cold) and open flames.
- Supervision is recommended when this appliance is used by, on or near children or individuals with certain disabilities.
- Never operate an appliance if it is not working properly, has been dropped, or is damaged or leaking.
- Keep the appliance away from heated surfaces.
- Do not operate after taking pain killers, sedatives or alcohol.
- Do not open this product or attempt to repair the unit yourself.
- Do not use on damaged or broken skin or with medical ointments.

# Getting Started

## Installing the Battery

1. Turn the battery compartment cover on the bottom of the facial roller handle counterclockwise to unscrew. Remove from the handle.
2. Install one (1) new AA-sized Alkaline battery, with the negative (-) end of the battery going in first.
3. Replace the compartment cover and screw back on.

## Using the Facial Roller

1. Install a battery according to the instructions above. Turn vibration ON by turning the battery cover counterclockwise until the facial roller starts to vibrate.
2. Starting along the jawline, press the jade roller firmly against your skin and slowly move upwards. Work from the center to the outer profile, always moving upwards and outwards. To finish, move slowly back to the jawline and end at the neck. Use every other day to keep the skin rejuvenated.
3. Power vibration OFF by turning the battery compartment cover clockwise until the facial roller stops vibrating.

## Storing the Facial Roller

When not using for a long period of time, remove the battery and store the facial roller in a cool, dry location, away from sources of water, heat or dust.

It is best stored in an airtight box or bag (*not included*).

## Cleaning the Facial Roller

Clean the facial roller with a soft, damp cloth, using no abrasive cleaners.

Do NOT immerse in water or any type of liquid, or allow the battery to get wet. Allow to dry completely before using.

# Compliance Information

Product: Micro Vibrating Facial Roller & Massager  
Model No.: LOMM2100  
Company: Southern Telecom Inc.  
Address: 5601 1st Ave, Brooklyn, NY 11220  
Contact: cs@customersupport123.com  
Phone: (877) 768-8481

## **FCC Information**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Warranty Information

## 90-Day Limited Warranty

Territory: United States/Canada

### LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

#### To obtain warranty service:

- Visit our customer support portal: [www.customersupport123.com](http://www.customersupport123.com)
- Select the brand and model of your device
- Select "Service Request" and fill out the form to begin your inquiry
- Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

#### Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.



LOMI

**All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.**