

# LOMMEN

## 3-in-1 Premium Grooming Kit



User Guide  
LOMMN1118

# Before You Begin...

**READ ALL SAFETY WARNINGS AND INSTRUCTIONS IN THIS MANUAL BEFORE USING PRODUCT. KEEP THIS MANUAL FOR FUTURE REFERENCE.**

## Razor Safety Warnings

- **THIS IS NOT A TOY**, do NOT allow children or pets to use or play with this device. Always keep razors out of the reach of children and pets.
- Be careful when moving or replacing razors, as they can cut. Always grip by the sides.
- Be careful not to press too hard while shaving as this can cause razor burn or cuts.
- Do not use on healing, sunburned, burned or damaged skin.
- Replace the razor when it has become too dull.
- To avoid rust, dry after use, and store in a dry location.

## Scrubber Safety Warnings

- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- Do not disassemble, modify, or repair the scrubber.
- Keep away from open flames, water, moisture, and extreme heat or cold.
- Supervision is recommended when this appliance is used by individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
- Never operate this appliance if it is not working properly or if it has been dropped or damaged.
- Keep the appliance away from heated surfaces.
- **Do not use on healing, sunburned, burned or damaged skin.**
- **This product is not recommended for use by individuals who have undergone facial cosmetic procedures, who have subcutaneous metal implants, or who are pregnant. Talk to your doctor before using this product if you have any health concerns.**
- **If you feel any pain as a result of using this product, stop using.**
- Do not open this product or attempt to repair the unit yourself.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- This device contains a built-in battery, and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.


## In the Box

- Safety Razor (x1)
- Replacement Blades (x3)
- Bath Pouf (x1)
- Sonic Facial Scrubber (x1)
- Micro-USB Cable (x1)
- Instruction Manual (x1)

# Getting Started

## Scrubber Location of Controls

Cleansing  
Brush Head  
(For Face)

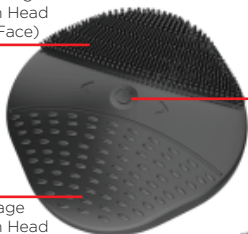


Power Button  
Strength Select

Massage  
Brush Head  
(For Body)

Micro-USB  
Charging Port

LED Indicator

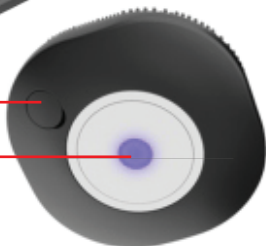

## Charging the Scrubber

**Allow the scrubber to dry completely before charging. Do not touch with wet hands. Do not use while charging.**

1. Lift the silicon cover over the charging port.
2. Plug the micro-USB (smaller) connector of the included charging cable into the charging port.
3. Plug the other connector into a USB power source such as the USB port on a computer, or into a **5V USB adapter** (*not included*) and plug into a wall socket.
4. The LED indicator will **light up RED** while the device is charging and **turn WHITE** when it is fully charged.
5. When finished charging, unplug the charging cable and place the silicon cover back over the charging port.

When low on power, the LED indicator will flash WHITE 5 times. Please recharge the device when this happens.

## Powering the Scrubber ON/OFF

- Press the **[Power]** button to power ON or OFF.
- When powered on, press the **[ > ]** button on the cleansing brush to **increase** vibration strength.
- When powered on, press the **[ < ]** button on the cleansing brush to **decrease** vibration strength.
- The LED indicator will flash WHITE when the scrubber is powered ON or OFF, or when the vibration strength is adjusted.

## Using the Scrubber

### On the Face

1. Charge the scrubber fully before using.
2. Wet your face with warm water. Apply facial cleanser soap to your face or to the cleansing scrubber, and power ON.
3. Apply the Cleansing Brush Head side to the face, rubbing gently in circles on your skin. It is recommended to cleanse each part of the face for 15 seconds, then move on to the next. Use the **[ < ]** and **[ > ]** buttons to adjust the vibration strength.

### As a Massager

The scrubber may also be used as a body massager. To use, power ON and apply the Massage Brush Head of the scrubber to the desired area.

## Using the Safety Razor

1. Thoroughly wet the area you will shave with warm water.
2. Apply bar soap or shaving cream to the area you wish to shave. Rub in a circular motion to whip up a foam. Apply the soap or shaving cream in an upward motion to help the hairs stand tall so they will be easier to cut.
3. Shave slowly and carefully, especially at first. Be careful while shaving over hard parts of the face or body since this does not pivot like a disposable razor. Pull loose skin tight while shaving to avoid cuts.
4. Rinse the razor every few swipes to remove hair.
5. When finished, rinse the area clean with cool water, and pat dry with a towel. Pat the razor completely dry as well to avoid rust, and store in a dry location.

**Warning:** Take care when handling razors. Grip by the sides.

# Compliance Information

## FCC Information

This device complies with Part 15 of the FCC Rules.

**Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

## WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



## Rating Label Definitions



Direct current symbol.



This symbol signifies that the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol signifies and declares that this equipment complies with battery charging which complies with California CEC and energy efficiency.



This symbol represents FCC Declaration of Conformity and compliance.

# Warranty Information

## 90-Day Limited Warranty

Territory: United States

### LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

#### To obtain warranty service:

- Visit our customer support portal: [www.customersupport123.com](http://www.customersupport123.com) and select **"Support"**.
- Select the brand, fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

#### Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

**All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.**

Printed in China  
Designed in the U.S.  
v1. 03/2022