 


M7500 User Guide

09/07/2018

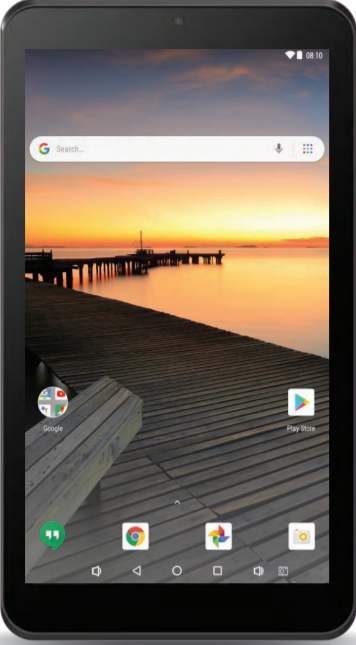

M7500 User Guide

In the box

 
- 7" Tablet
- Screen protector
- User guide
- Tablet sleeve
- Microfiber cleaning cloth
- 16GB MicroSD card
- Charger
- Micro USB cable

Care & safety precautions

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICE TO QUALIFIED SERVICE PERSONNEL.

Buttons, ports & hardware

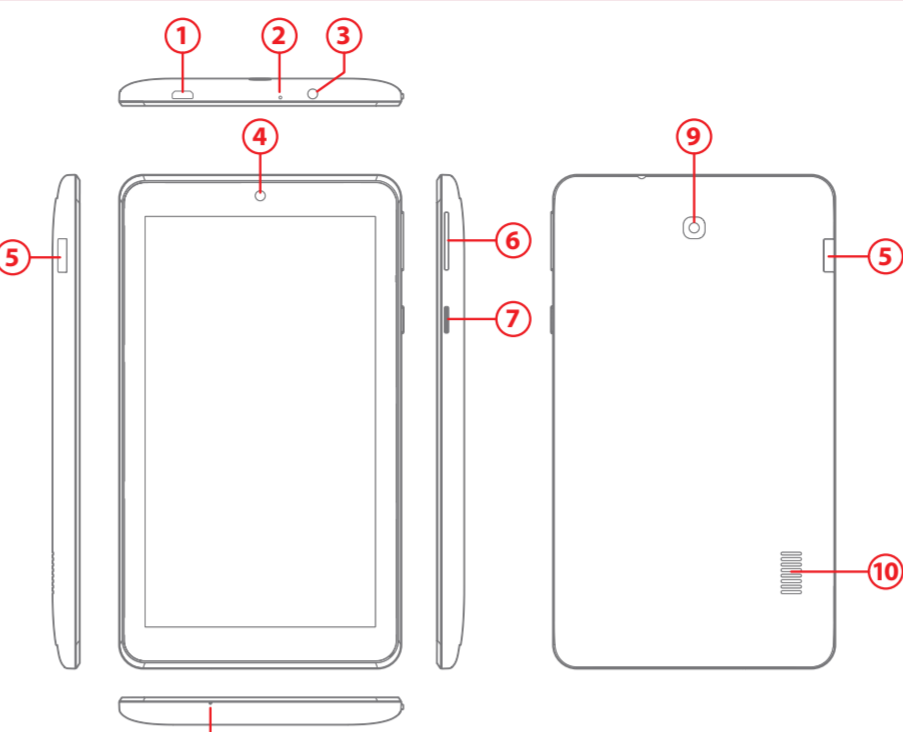


- 1 Micro USB port
- 2 Reset
- 3 Headphone jack
- 4 Front camera
- 5 Micro SD card slot
- 6 Volume buttons
- 7 Power button
- 8 Microphone
- 9 Rear camera
- 10 Speaker

SPECIFICATIONS:

- 7" HD, IPS display
- Android™, B.1 Oreo™ (Go edition)
- Quad-core processor
- 1GB RAM
- Front & rear cameras
- 8GB storage + 16GB MicroSD
- Wi-Fi 802.11 b/g/n dual-band
- 3,000 mAh battery

Charging

 Connect the tablet to a wall outlet using the included Micro USB cable and charger as shown below.

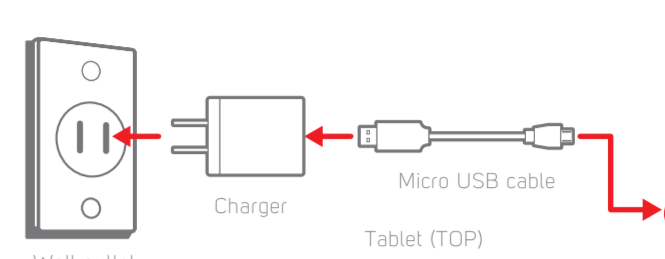

When charging, the lightning indicator will appear in the battery icon.

Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet (turning the display off) to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.
- It is recommended to keep the brightness level at 50% or under if the tablet is in use while charging.

Power ON / OFF

Turning on

Press & hold the **Power button** until the startup screen appears.

Power off the tablet

 
Press & hold the **Power button** until the "Power off" option appears.

Lock the tablet (standby)

Briefly press the **Power button**. (Lock the tablet to conserve the battery).

Unlock the tablet

Briefly press the **Power button**, and slide the **Lock icon** up.

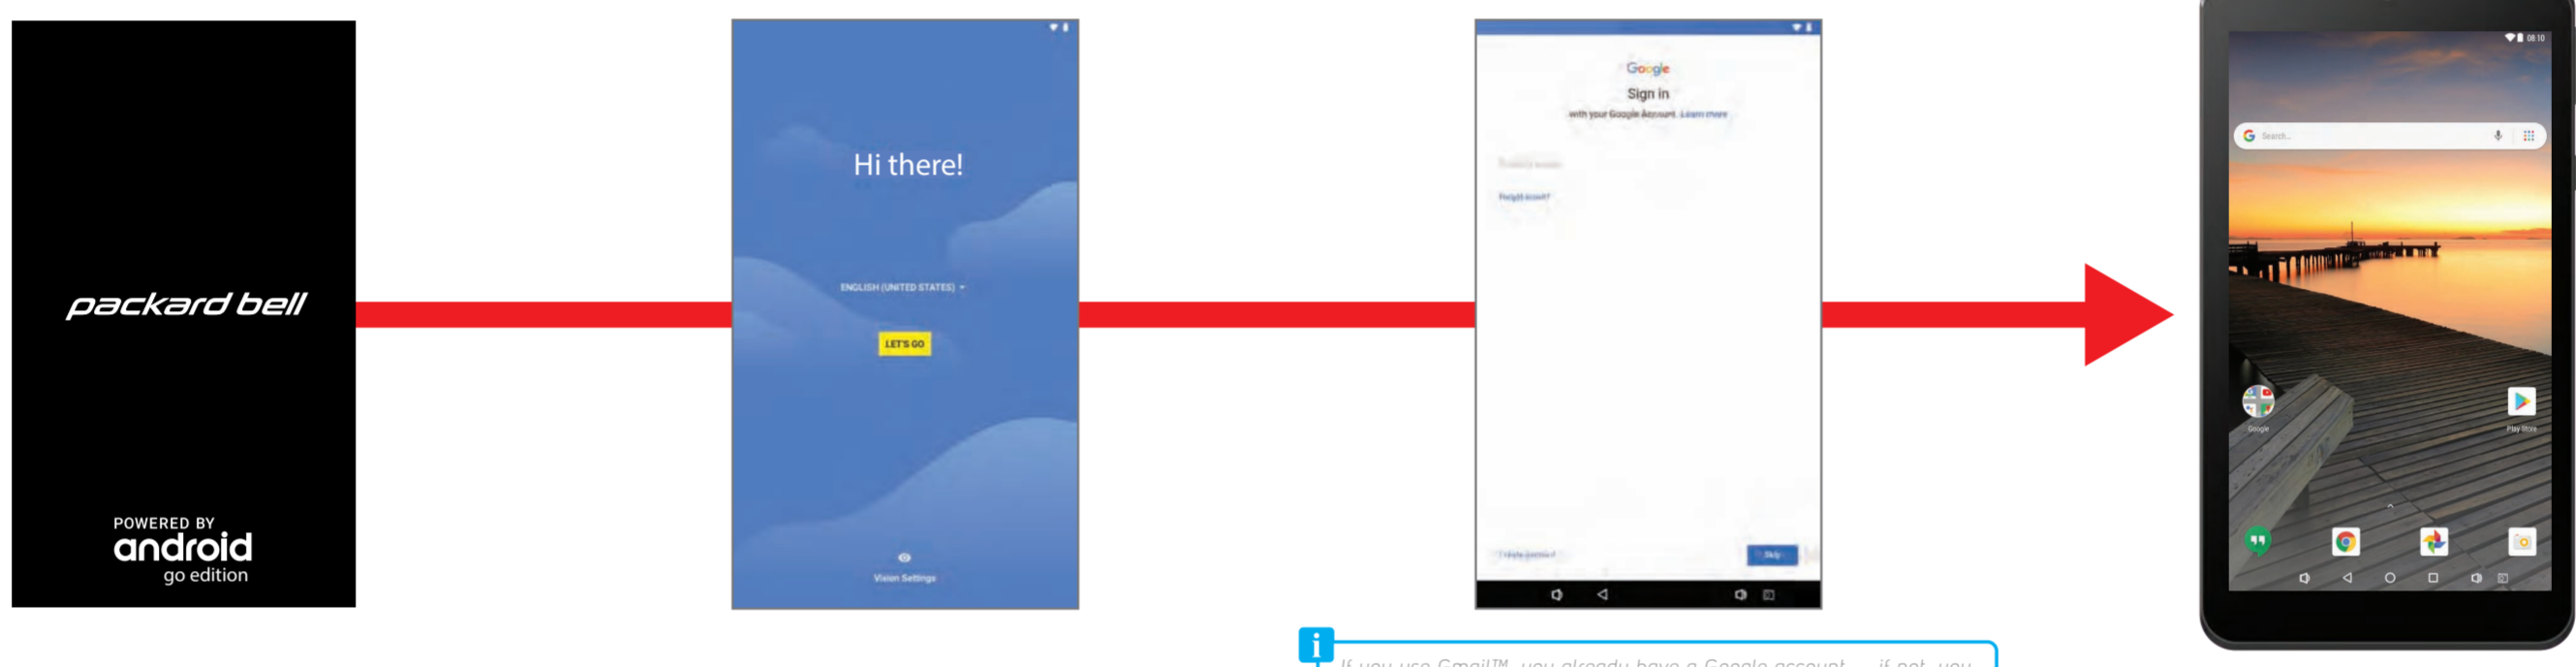


1 Press and hold the **Power button** to get started.

2 Follow the initial setup wizard prompts.

3 To use the Google Play Store, sign into or create a Google account.

1 If you use Gmail™, you already have a Google account — if not, you can create an account now.

 
Google Play




Google Play is a digital content experience from Google where you can find and enjoy your favorite music, movies, TV shows, books, and Android™ apps and games. It's your entertainment hub; you can access it from the web or from your Android device, and your content is instantly available across your devices.

Home Screen

Press and hold widgets to place them on the home screen as shown below.

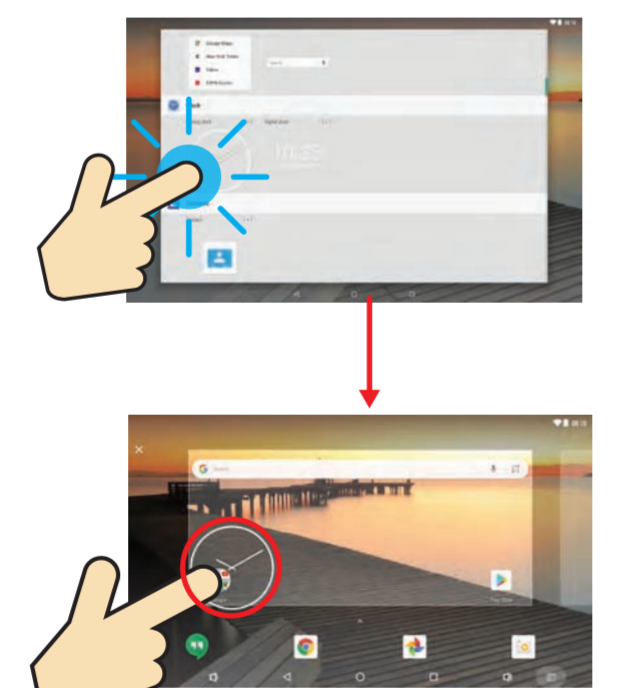


 Swipe up \wedge indicator on the home screen to access the Apps Screen.

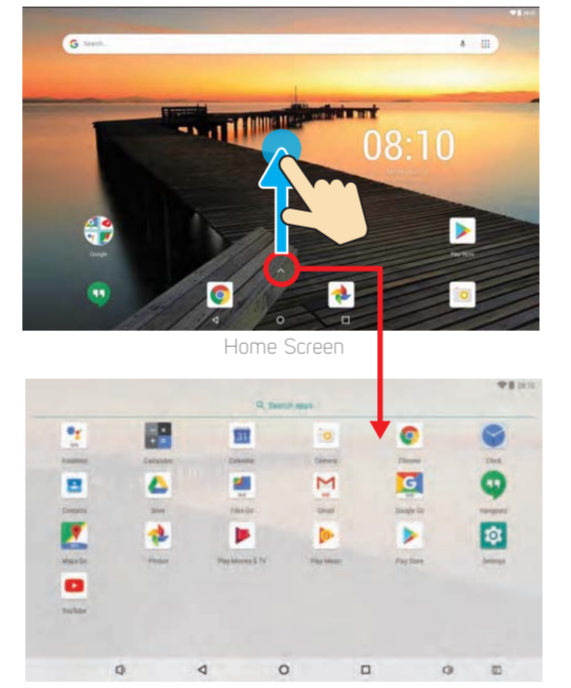

Widgets

 
To add a widget, press and hold anywhere on the home screen, and select the "Widgets" option.

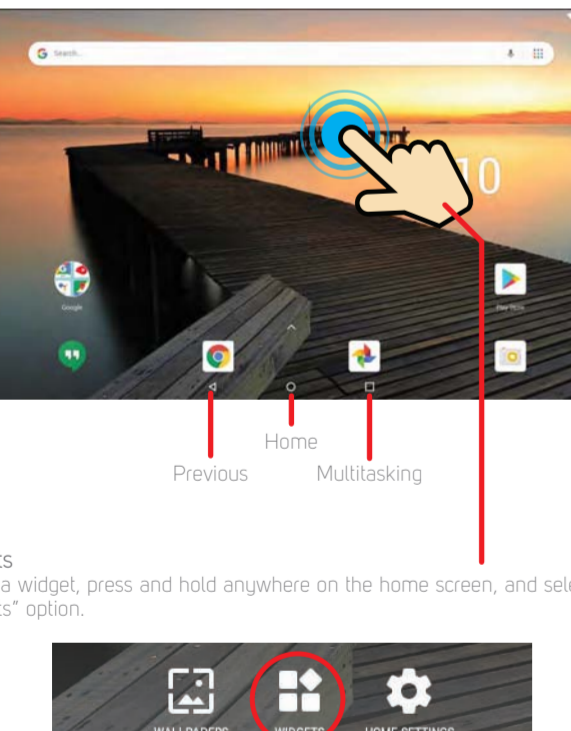

Notifications and Quick Settings


Notifications panel

 Swipe down from the top edge of the screen to display the Notifications panel where you can browse and reply to your emails, check software updates, reminders and more.

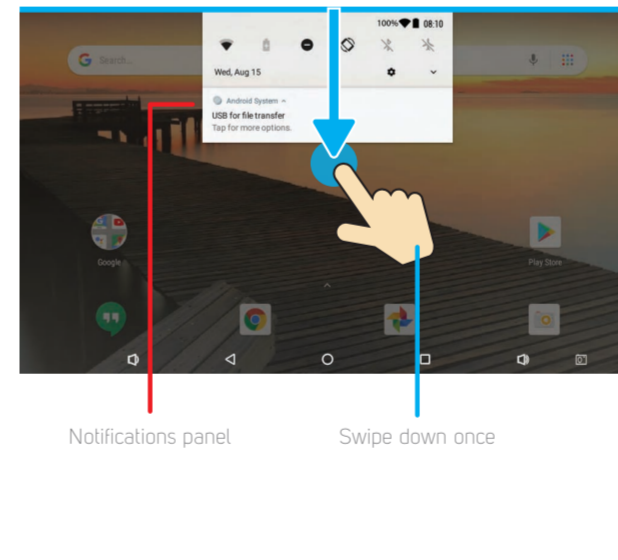

Quick Settings panel

 
Swipe down twice from the top edge of the screen to expand and access the Quick Settings panel, where you can easily enable/disable Wi-Fi, Bluetooth, Airplane mode and other settings.

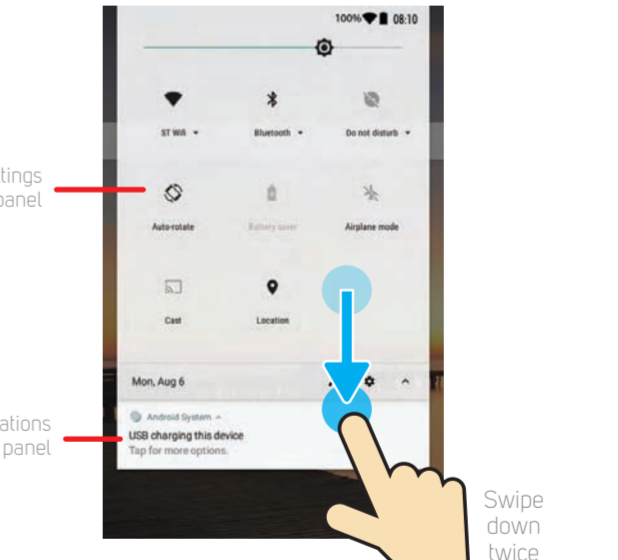

Connecting

Wi-Fi and Bluetooth®

 To enable/disable Wi-Fi or Bluetooth®, simply tap the icons on the Quick Settings panel as shown below.

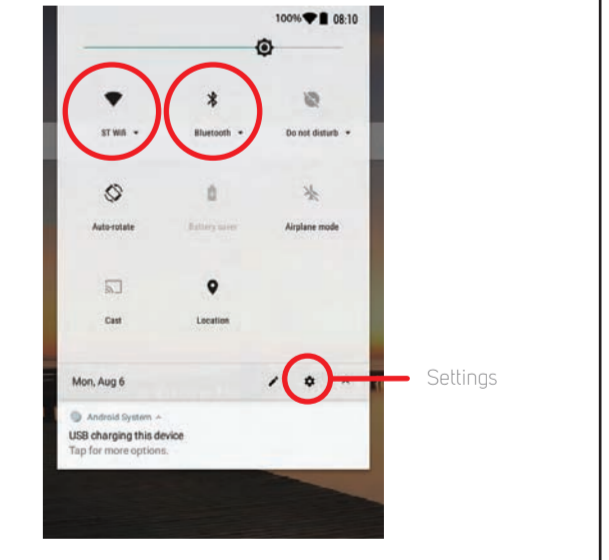


To access more settings options, select the **Settings** icon.

Expanding the storage

Inserting a Micro SD card


To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.

 To remove the Micro SD card, gently press it inward to eject.

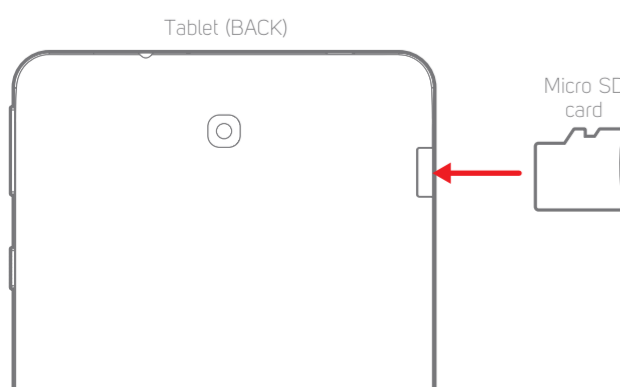

Transferring files

 - Connect the tablet to the computer using the included Micro USB cable as shown below.
- Tap the notification on the tablet screen.
- Select "Transfer files".
- The internal storage of the tablet will appear on your PC.

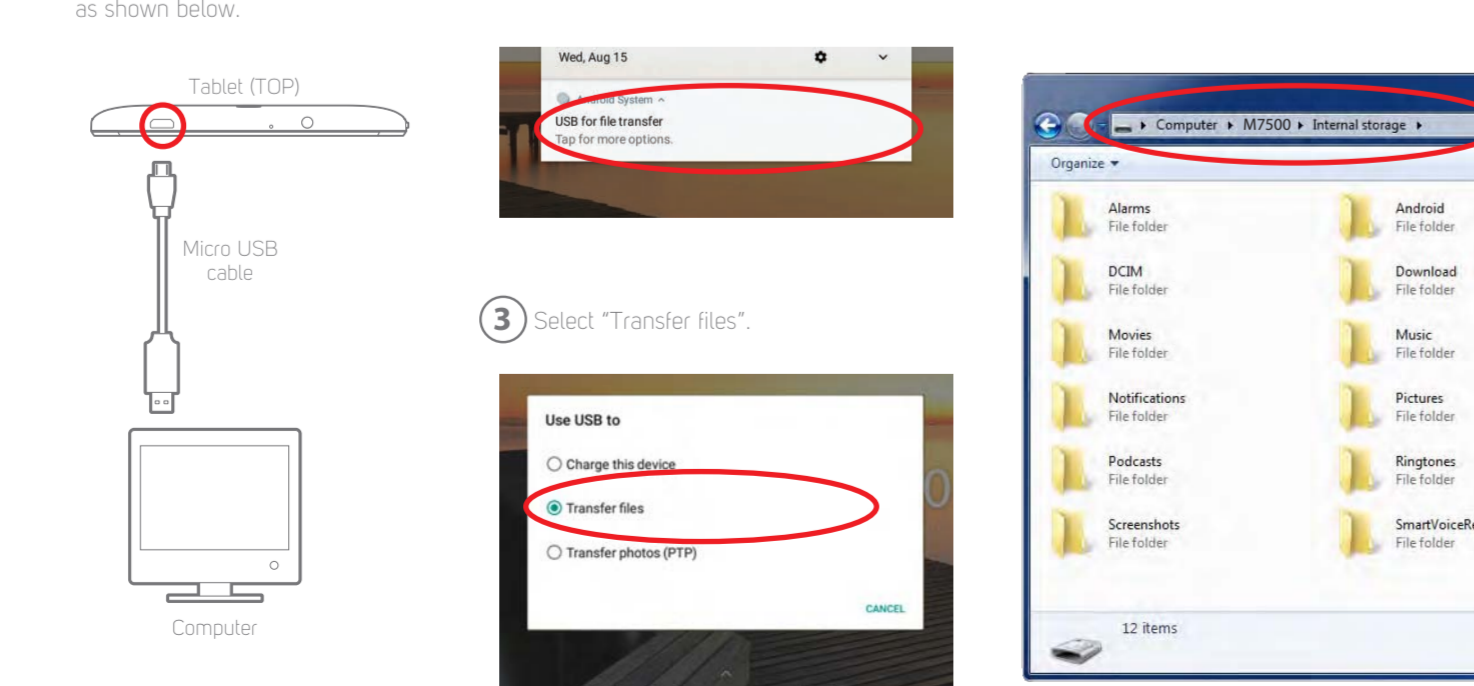


Miscellaneous

Reset

If the tablet malfunctions or freezes, you can use the Reset button to restart it.

 To reset the tablet, take a metal pin (such as the end of a paper clip) and gently push the recessed Reset button on the back of the tablet as shown below.

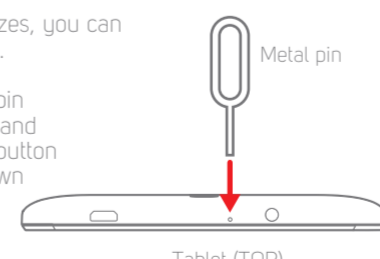

The tablet will restart.

Text-To-Speech

Google Text-to-speech powers applications to read the text on your screen aloud. For example, it can be used by:

- Google Play Books to "Read Aloud" your favorite book
- Google Translate to speak translations aloud so that you can hear the pronunciation of a word
- TalkBack and accessibility applications for spoken feedback across your device
- ... and many other applications in the Play Store

To use Google Text-to-speech on your Android device, go to **Settings>System>Languages & Input>Advanced Text-to-speech output**. Select **Google Text-to-speech Engine** as your preferred engine.

For more information regarding TTS, please go to: www.southerntelecom.com/ts_tabletsupport.html

Legal information

FCC Part 15: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

Information Regarding Exposure to Radio Frequency Energy

Your tablet is designed and manufactured not to exceed the emission limits for exposure to RF energy set by the Federal Communications Commission of the United States (FCC). Information on your device is on file with the FCC and can be found under the Display Name section of <http://www.fcc.gov/electronicproductinformation> after searching on the FCC ID for your device, which can be found on the back of the device.

If your electronic device has internet connectivity, on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to ensure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedure during the recycling process.

Battery Disposal & Recycle: This device contains a lithium-ion battery. The battery must be recycled and disposed of properly. Contact your local waste management office for information on battery recycling or disposal. #USE100000907

Specific Absorption Rate (SAR)

This device meets the government's requirements for exposure to radio waves. The Specific Absorption Rate (SAR) limit set by the FCC is 1.6W/kg. The highest SAR value reported for the FCC for this device is 1.35W/kg and complies with the limit.

Battery Disposal & Recycle: This device contains a lithium-ion battery. The battery must be recycled and disposed of properly. Contact your local waste management office for information on battery recycling or disposal. #USE100000907

Designed and distributed by Southern Telecom Inc. 5600 1st Avenue, Brooklyn, NY 11204 © 2018 All Rights Reserved. Made in China. Packard Bell is a registered trademark of P&G Holding LLC. Google, Android, Google Play and other marks are trademarks of Google LLC. Oreo is a trademark of Mondelez International, Inc. group. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. All other trademarks and trade names are those of their respective owners.

Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

This Product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc., to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

Product Type: Tablet, Territory: United States/Canada, Parts Warranty: 1 Year, Labor Warranty: 1 Year

To obtain warranty service:

- Call the Customer Support number located below, or go to our website portal to receive an SRD number.
- Provide proof of the date of purchase within the package (date of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address for R.O.D. (boxed), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Customer Support:
1-877-768-8461 (Toll Free) Monday - Friday, 8AM - 10PM (EST) www.southerntelecom.com
400 Kennedy Drive, Greenville, NJ 08872 Click on 'Product Support'

Warranty service not provided:

- This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmwares. The warranty is voided in the event any unqualified person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. OTHER THAN THOSE EXPRESSLY DECLARED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, SHALL BE GUARANTEED OR GIVEN BY THE ORIGINAL PURCHASER OF THE PRODUCT OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS REVENUE, DATA OR CONSEQUENTIAL CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY WITHIN THE FOREGOING. CONSUMERS PURCHASING AGAINST THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, or impose or restrict remedies that may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.