 


Installation

 
1. Place your telephone on a hard, flat surface.
2. Insert one modular plug of the COIL CORD into the jack of the telephone handset and the other modular plug of the COIL CORD into the jack or the left side of the telephone base (See Figure 1 on the next page).
3. Insert one modular plug of the STRAIGHT LINE CORD into the jack at the back of the telephone labeled [TEL-LINE] and the other modular plug of the STRAIGHT LINE CORD into a modular wall jack.

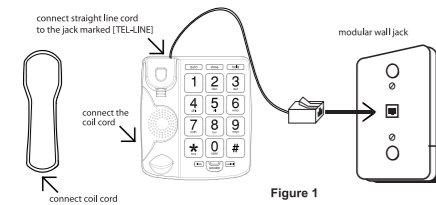

4. Make sure all plugs snap firmly into place.
5. Pick up the handset and confirm you hear a dial tone.

Wall Mount Installation

1. Make sure you have a wall plate (*not included*) to mount the phone on.
2. Connect the mountable wall bracket to the back of the base (figure 2).
3. Plug the STRAIGHT LINE CORD into a modular wall phone jack.
4. Align the holes on the base with the mounting studs on the wall plate and pull the base down onto the studs until the telephone is secure.
5. Set the hook switch to the wall mount position by pulling it out with your thumb and forefinger, flipping it around and replacing it.

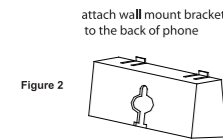

Using the Phone

Phone Operation

- **Making a call:** Lift the handset or press the [Speaker] button, listen for a dial tone, then dial the number you wish to call.
- **Receiving a call:** When the phone rings, lift the handset or press the [Speaker] button.
- **Ending a call:** While a call is active, hang up the handset, or if on speaker, press the [Speaker] button.
- **Handset volume:** Slide the [RECEIVER] switch to [H] for high volume or [L] for low volume.
- **Speaker volume:** Slide the [SPEAKER] switch to [H] for high volume, [M] for medium volume or [L] for low volume.
- **Ringer volume:** Slide the [RINGER] switch to [H] for high volume or [L] for low volume.
- **Tone or Pulse dialing:** Slide the [MODE] switch to [T] for tone dialing or [P] for pulse dialing.
- **Flash:** Press the [Flash] button to activate services such as call waiting or call transfer. You must subscribe to these services from your telephone service provider.
- **Redial:** To redial the last number called, pick up the handset or press the [Speaker] button, then press the [Redial] button.
- **Hold:** To place a call on hold, press the [Hold] button while a call is active, then place the handset on the hook (music will play on both the phone and the other party's line). To release the hold, lift the handset or press the [Speaker] button.

Memory Dialing

This telephone can store up to 10 phone numbers (up to 16 digits), which will remain stored in memory unless you erase or change them by entering other numbers, or unplug your telephone from the wall jack.

To program numbers into memory:

1. Lift the handset or press the [Speaker] button.
2. Press the [Store] button.
3. Enter the phone number you would like to store.
4. Press the [Store] button.
5. Press a number from [0-9] for the memory location where you would like to store the phone number.
6. Hang up the handset or press the [Speaker] button.

To dial out from the memory:

1. Lift the handset and listen for a dial tone.
2. Press the [Auto] button.
3. Press the memory location [0-9] you would like to dial from.
4. The number stored in that location will be dialed automatically.

Troubleshooting Tips

- **No dial tone:** Check to see if your phone is properly connected to the modular wall jack (See the **Installation** section).
- **Phone does not ring:** Make sure the [RINGER] switch (located at the back of the phone) is set to the [L] or [H] position.
- **Handset volume is too low:** Slide the [RECEIVER] switch to the high (H) position.
- **Speaker volume is too low:** Slide the [SPEAKER] switch to the [M] or [H] position.

Product Maintenance

- Follow the guidelines below to properly maintain this product:
- Avoid putting it near heating appliances and devices that generate electrical noise (for example: motors or fluorescent lamps).
 - DO NOT expose to direct sunlight or moisture.
 - Avoid dropping the unit and/or other rough treatment.
 - Clean with a soft cloth.
 - Never use a strong cleaning agent or abrasive powder because this will damage the finish.
 - Retain the original packaging in case you need to ship it at a later date.

Limited Warranty

90-day Limited Warranty
Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our website at www.southerntelecom.com
- Click on **Product Support**
- Select the **Brand** of your device
- Select **Service Request** and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

packard bell

BIG BUTTON CORDED HANDSET
User Manual

packard bell



All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China
v1. 10/2019

PB300

 
Before You Begin...

Legal Information

This telephone system meets FCC Standards for Hearing Aid Compatibility.

WARNING:

TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

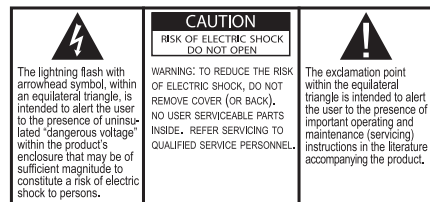

Rating plate and caution marking are marked on the bottom of enclosure of the apparatus.



FCC Part 15 Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Privacy of Communications may not be ensured when using this product.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Part 68 Information 1. Notification to the Local Telephone Company

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company. The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring and by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

**US Number is located on the cabinet bottom.
REN Number is located on the cabinet bottom.**

2. Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

FCC Part 68 Information (cont'd)

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

Important Safety Instructions

NOTE: Some of the below precautions may not apply to your product, e.g.: Battery and power cord precautions.

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink or swimming pool).
5. Do not place this product on an unstable surface.
6. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
7. Never push objects of any kind into the ventilation slots of this product as they may touch dangerous voltage points or create a short circuit that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
8. Use only the power cord and batteries indicated in this manual.
9. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
10. Plug the adaptor to the socket - outlet that is closest to the equipment and which is easily accessible.
11. Do not allow anything to rest on the power cord. Do not install this product where the cord may have anyone walking on it.
12. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
13. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
14. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.
15. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled onto the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.

Important Safety Instructions (cont'd)

- E. If the product has been dropped and damaged.
 - F. If the product exhibits a distinct change in performance.
16. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
17. Do not use the telephone to report a gas leak in the vicinity of the leak.
18. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

 
For Products that Require Batteries

Important Battery Precautions

- Use only the type of battery specified in this user manual.
- Batteries may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged.
- Do not dispose of the battery(ies) in a fire. They may explode. Check with local codes for disposal instructions.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing different types of batteries or inserting them incorrectly, may cause them to leak.
- Discard any leaky or deformed battery immediately. Leakage from battery acid can cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

SAVE THESE INSTRUCTIONS

Telephone Jack Requirements



Modular Telephone Line Jack

To use this phone, you must have an RJ11C modular telephone jack. If you do not have a modular jack, please call your local telephone company to find out how to get one installed.

Important Installation Information

- Never install telephone wiring during a lightning storm.
- Never touch uninsulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Temporarily disconnect any equipment connected to the phone, such as faxes, other phones, or modems.

Should have any questions or problems concerning this product, please visit our website at SouthernTelecom.com and click on Product Support or call our customer support line at (877) 768 - 8481 (Mon. - Fri., 8am - 10pm EST).

Getting Started

 
In the Box



PHONE BASE



HANDSET

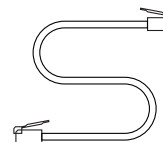


STRAIGHT LINE CORD



COIL CORD




 INSTRUCTION MANUAL

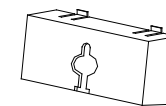

WALL MOUNT

 Location of Controls

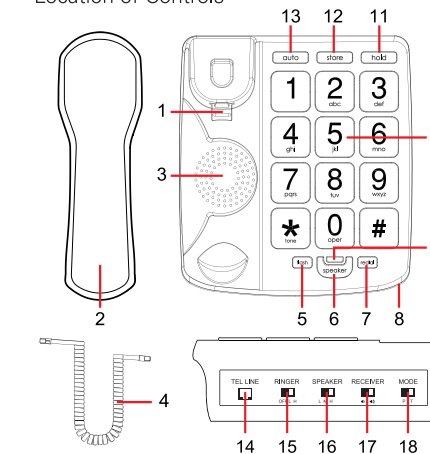

1. Hook Switch
2. Handset
3. Speaker
4. Coil Cord
5. **[Flash]** Button
6. **[Speaker]** Button
7. **[Redial]** Button
8. Microphone
9. Call indicator Light
10. Numeric Keypad
11. **[Hold]** Button
12. **[Store]** Button
13. **[Auto]** Button (Memory Dialing)
14. **[TEL-LINE]** - Line Jack
15. **[RINGER]** Switch - Ringer Volume
16. **[SPEAKER]** Switch - Speaker Volume
17. **[RECEIVER]** Switch - Handset Volume
18. **[MODE]** Switch - Tone/Pulse Dialing
19. Mountable Wall Bracket