

During charging, keep your device and adapter near room temperature for efficient battery charging.

o not use the device in rain or other wet locations.

case the device gets wet, unplug all cables and turn off the device. not attempt to dry the device with an external heat source.

Unplug all cables and turn off the device before cleaning. Jse a soft, lint-free cloth to clean the device and display. Avoid getting moisture in open ports.

old spilling any liquid on the device.

- outinely check the device for proper and safe conditions. If there is any damage, or broken parts, remove the device from use. f for any reason the screen (display) is fractured or cracked, immediately remove
- this product from use and contact Eustomer Support.
- It is rare but possible for seizures to be triggered by light flashes or patterns such as those on device or TV screens. To reduce exposure to this potential hazard, play Awatch in a well-lit room, sit an appropriate distance from the screen and take 10 o 15-minute breaks every hour.

e your hearing checked.

- Keep out of reach of children under 3 years of age.
- Children pulling on the cord could cause the device or other equipment to which the device is connected to fall with possibility of property damage, serious injury. or death. Adult supervision required during use. Long-term exposure to loud sounds, at high volume, may result in permanent
- When using headphones or earbuds, it is recommended that the product is listened to at lower volumes for shorter periods of time
- Set the volume while in a quiet environment; turn the volume down if you cannot hear the people speaking near you.
- imit the listening time to 90 minutes, followed by a quiet period. The louder the olume, the less time required before your hearing may be affected. you experience ringing in your ears or hear muffled speech, stop listening and

A ■ 4 (4) <u>BBB</u>

In tablet mode, you can bring up the virtual keyboard

of your screen.

by tapping the iii icon on the lower right-hand corner

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



ale, is intended to alert the user to the presence of uninsu

WARNING risk of Electric Shock do not open ARNING: To reduce the risk of electric shock, do not remove cov

to user serviceable parts inside. Refer servicing to qualified service






10.1" tablet


Keyboard

In the box

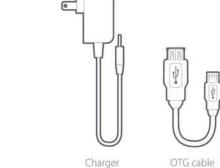



Features

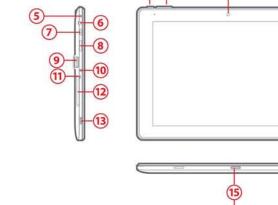



2) Volume buttons (9) USB port Front camera 4) Rear camera (11) Reset button

(6) Headphone jack (13) Stereo speakers

Expanding the storage

Inserting a Micro SD card

- The tablet supports Micro SD cards up to 256GB (not included).

To install a Micro SD card into the tablet, gently open

into the card slot until it clicks and locks into place.

the cover and carefully insert the card as shown below

To remove the Micro SD card, gently press it inward to eject.

- 64-bit, Intel quad-core processor
- 2GB RAM

Specifications:

- 32GB internal storage*

10.1" IPS display (1280 x 800)

- MicroSD card slot (expandable up to 256GB) 5,000 mAh Li-ion battery
- Stereo speakers
- HD, front/rear cameras Wi-Fi 802.11 b/g/n
- Bluetooth 4.0

*Actual Internal memory may vary depending on the operating system of the device and the preloaded apps.

Legal information

Re-orient or relocate the receiving antenna.

receiver is connected.

Increase the separation between the equipment and receiver.

including Interference that may cause undesired operation."

Charging

Wall outlet

Connect the notebook to a wall outlet using the included power adapter as shown below.

Tablet (SIDE)



Agree to Microsoft's legal terms.

Completing initial setup

Complete the initial Windows setup by choosing your


country/region, language, keyboard layout, and time zone.



To dock the tablet to the keyboard, align the tablet and the keyboard, then slide the tablet into the dock as shown

the keyboard as shown below, then gently pull the tablet

The tablet will automatically recognize the keyboard when docked properly.

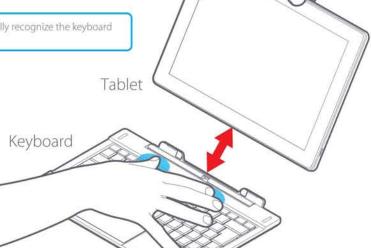


The touchpad does not have a mechanical click. Tap to select.

 A IMPORTANT







B FCC limits.

If your electronic device has internal memory on which personal or other confidential LIMITED WARRANTY TO ORIGINAL CONSUMER This equipment has been tested and found to comply with the requirements for a data may be stored, you may want to perform a data sanitization process before you This Product (including any accessories included in the original packaging) as supplied packaging) as supplied. Class B digital device under Part 15 of the Federal Communications Commission (FCC) dispose of your device to assure another party cannot access your personal data. and distributed new by an authorized retailer is warranted by Southern Telecom, Inc.

harmful interference in a residential installation. This equipment generates, uses and to research the best sanitization process for your device before disposal. You may ("Warranty") as follows:

the instructions, may cause harmful interference to radio communications. However, during the recycling process. there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which Battery Disposal & Recycle can be determined by turning the equipment off and on, the user is encouraged to This device contains a Lithium-ion battery. The battery must be recycled or disposed try to correct the interference by one or more of the following measures:

of properly. Contact your local waste management office for information on battery recycling or disposal.

Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes on modifications to this equipment not expressly approved by the party responsible for © 2017 All Rights Reserved. Made in China. compliance could void the user's authority to operate the equipment.

· Connect the equipment into an outlet on a circuit different from that to which the

"This device complies with Part 15 of the FCC Rules. Operation is subject to the

following two conditions: under license. (1) this device may not cause harmful interference, and

can radiate radio frequency energy and, if not installed and used in accordance with also check with your local recycling facility to determine their data sanitization procedures

Intel, Intel Logo, Intel Atom, Intel Inside, Intel Inside Logo, are trademarks of Intel (2) this device must accept any interference received, Corporation in the U.S. and/or other countries.

Shielded USB cables must be used with this unit to ensure compliance with the Class All other trademarks and trade names are those of their respective owners.

c/o Southern Telecom 400 Kennedy Drive

volded in the event any unauthorized person opens, alters or repairs this product.

Product Type: Tablet, Territory: United States / Canada, Parts Warranty: 1 Year,

Charging

Call the Customer Support number located below, or go to our website portal to

 Prepay all shipping costs to the authorized service center, and remember to insure CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATE

CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHAS PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEN TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

1-877-668-4839 (Toll Free) www.southerntelecom.com Monday - Friday: 8AM - 10PM (EST) Click on "Product Support"

Your product will be repaired or replaced, at our option, for the same or similar model other rights that vary from state to state or province to province. Contact your authorized of equal value if examination by the service center determines this product is defective. retailer to determine if another warranty applies.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc.

Customer Service Dept. 36

This warranty does not cover damage resulting from accident, misuse, abuse, imprope installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmwares. This warranty

rules. These requirements are intended to provide reasonable protection against defects in materials and workmanship NO WARRANTIES WHETHER EXPRESS OR IMPLIED INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULA PLIRPOSE OTHER THAN THOSE EXPRESSLY DESCRIBED AROVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATES ABOVE, NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTORS SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVEN

WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL DIRECT

INDIRECT, SPECIAL PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NO

LIMITED TO DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORD

Some countries states or provinces do not allow the exclusion or limitation of incident

or consequential damages or allow limitations on warranties, so limitation or exclusions

may not apply to you. This warranty gives you specific legal rights, and you may have

Labor Warranty: 1 Year To obtain warranty service:

Limited Warranty

receive an SRO number. Provide proof of the date of purchase within the package (Dated bill of sale).

HEREIN, NO OTHER WARRANTIES SHALL APPLY NOTWITHSTANDING THE FOREGOIN Include a return shipping address (no P.O. Boxes), a telephone contact number, and

the defective unit within the package. · Describe the defect or reason you are returning the product.

Customer Support:

Products received damaged as a result of shipping will require you to file a claim with

The shipping address of the authorized service center is:


Sayreville NJ 08872



Keyboard Dock

To undock the tablet from the keyboard, firmly hold



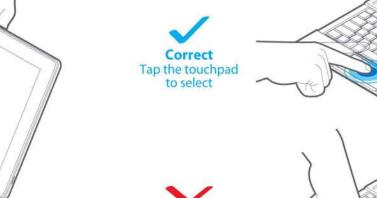



you cannot use the USB port of the tablet.

When the tablet is connected to the keyboard,

Information Regarding Exposure to Radio Frequency Energy

exposure to RF energy set by the Federal Communications Commission of the United States (FCC). Information on your Device is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/ea/ after searching on

Your Device is designed and manufactured not to exceed the emission limits for the FCC ID for your Device, which can be found on the back of the Device.

Designed and distributed by Southern Telecom Inc. Brooklyn, NY 11220

Packard Bell® is a registered trademark of JMM Lee Properties, LLC and is used

Warranty service not provided

users) found at the bottom left to finish your initial setup

Connect to your Wi-Fi network.

p 🚟 to see all the pre-installed apps.



4. Select "Use Express settings" (recommended) found at

the bottom right or select "Customize settings" (advanced