

Instruction Manual AUDIO-HIVE Modular Gaming LED Panel and Wireless Speaker PBSK207

# Before You Begin...

# READ CAREFULLY AND KEEP THIS MANUAL

### \rm Caution


To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- THIS DEVICE IS NOT A TOY, keep away from children and pets.
- . Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not submerge in water.
- . Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

### In the Box

- Speaker Panel (x1)
- LED Panel (x3)
- Mounting Plates w/ Adhesive (x4)
- Remote Control (x1)
- USB Charging Cable (x1)
- User Manual (x1)

# Light Panel Location of Controls

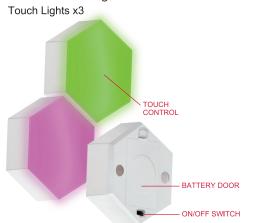


#### Installing Light Panel Batteries

- 1. Remove the battery compartment cover from the back of the LED light panel.
- Install 3 AAA-sized (1.5V) batteries into the battery compartment, following the polarity (+/-) guide on the inside of the compartment. Do not mix old and new batteries, or mix different brands or types of battery.
- 3. Replace the battery cover.

# Light Panel Setup & Use

### Mounting the Light Panels/Speakers

 - Select a location on your wall where you would like to install the light panels and speaker. Decide how you would like to arrange the speaker and panels.
- Peel the paper off of the adhesive on the back of the first metallic plate to be mounted. Stick the plate onto the desired location on the wall, and press and hold onto the location for 1 minute to secure the adhesive.
- 3. Repeat step #2 for the other metallic plates.
- 4. You may now place the LED panels and speaker onto the wall-mounted metallic plates, to secure them to the wall. They will magnetically stick to the plates.



### Using the Light Panels

The light panels can be controlled using the touch buttons on the fronts, or using the remote control. See the Remote Control instructions on the next page.

- Flip the [Power] switches on the backs of the light panels to power ON/OFF.
- Touch the center on the front of the LED light panel to turn the light ON. Press repeatedly to cycle through different colors.
- Press + hold (2s) the center of the touch panel to power OFF.
- Flip the [Power] switch OFF when finished using to conserve battery.

# Using the LED Panels' Remote Control

**Note:** You may need to remove a plastic tab from the remote control battery before using the remote control.

- Flip the **[Power]** switch on the light panels to turn ON.
- Use the remote control to change colors/modes.
- Flip the **[Power]** switch on the light panels to turn OFF and conserve battery.

### Changing Remote Control Battery

The remote control battery can be replaced with a 3V CR2025 button cell battery. Insert with the positive terminal pointing upwards.

### **IR Remote Control**



1	ON/OFF	Turn the product on and off
2	WHITE SELECTOR	Select white color
3	MULTI-COLOR SELECTORS	Change the color to match your mood
4	FLASH	Flash color-changing mode
5	STROBE	Strobe color-changing mode
6	FADE	Fade color-changing mode
0	SMOOTH	Smooth color-changing mode
8	DIMMER BUTTONS	Adjust the brightness/intensity

# Using the Speaker

#### Charging the Speaker

Plug the small connector of the included charging cable into the charging port on the side of the speaker.

Plug the large connector into a USB power source, such as the USB port on a computer, or a **5V USB adapter** (not included).

The LED indicator will turn RED while charging and turn OFF when fully charged.

### Powering the Speaker ON/OFF

- Press + hold the O button to power ON and OFF.
- When powered ON, the speaker will enter Bluetooth pairing mode. The speaker will automatically re-pair to any available previously-paired device nearby.

### Bluetooth Pairing

- Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode. The LED indicator *quickly flash BLUE*.
- Set your mobile device to search for Bluetooth devices. Select **PBSK207** when it appears on the list of found devices.
- After a successful pairing, a tone will be heard, and the LED indicator will turn solid BLUE. You will be able to play music on the speaker.

When Bluetooth paired, you can use the controls on the speaker below:

- Press the 🙂 button to pause/resume playback.
- Press the 🕐 button to answer an incoming call. Press again to hang up.
- Press + hold the () button to reject an incoming call.
- 2x press the U button to redial the last outgoing call.

# Compliance Information

#### **FCC** Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the ECC Bules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received including interference that may cause undesired operation.

#### Radiation Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



#### Rating Label Definitions

---- Direct current symbol.

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



BC This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology.



This symbol represents FCC Declaration of Conformity and compliance.

## Warranty Information

#### 90-Day Limited Warranty

Territory: United States/Canada

#### LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

#### To obtain warranty service:

- · Visit our customer support portal: www.customersupport123.com
- · Select the brand and model of your device
- · Select "Service Request" and fill out the form to begin your inquiry
- · Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

#### Warranty service not provided

This varianty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTES OF SHAL MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THANT THOSE EXPRESSLY DESCRIBED ABOVE SHAL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESSLY DESCRIBED ABOVE SHALL WARRANTES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESSLY DESCRIPTION ADAMANT GIVEN BY ANY PERSON. THIS OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAR, REPLACEMENT, OR REFUND OF THE ORIGINAL FURCHASE PRICE - A DISTRIBUTOR'S SOLE DISCRETION - ARET HE EXCLUSIVE REMEDIES OF THE CONSUMER'S SUMMOS, DATO RO RECORDS) OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT INDIRECT, SPECIAL, PUNTIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PHOFTS, BUSINSES, SUMIOS, DATO RR RECORDS) CAUSED BY THE USE, MISUES OR INABILITY TO USE THE PRODUCT EXCEPT AS STATED HEREIN, NO OTHER WARRANTES SHALL APPLY. NOTITIFISTANIONE THE FORGOING. THIS WARRANTY SHALL NOT EXCERTANTES SHALL APPLY. NOTITIFISTANDING THE FORGED THE PRODUCT SUCE THAT DISTRIBUTOR BALL NOT EXCERTION THAN THOR OTHER WARRANTES THAN THE ORIGINAL CONSUMER'S RECOVERY AGAINST SHALL NOT EXCERT AS TATED HEREIN, NO OTHER THAN THOS THAN THE ORIGINAL CONSUMER'S PARE THE FORDUCT THE PRODUCT BUS TO STATED ADAVOS THAN THO ROMANDAL CONSUMER'S AND THE PRODUCT AND IN OT NOT THANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on varianties, so limitation or exclusions may not apply to you. This warrarty dyaptes you specific legit lights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

> Designed in US Printed in China v1. 01-2022