



TECHUP

Smart Wireless **Outdoor Cam**



Instruction Manual TUSCAM301

What's in the box

Please consult this checklist for all parts.



TUSCAM301 Camera



Power adapter



 
USB cable



3 Screws & screw anchors (2 packages)



Bracket (A) - magnetic



Bracket (B)



 
User manual

Installing a TF / Micro SD Card

Before connecting to power, undo the silicone cover on the back of camera, and insert your TF/micro SD card (not included) into the TF/micro SD port. The TF card will only fit in one direction.

Charging/Powering the Camera


1. Undo the silicone cover on the back of the camera, and plug the small connector of the included USB cable into the micro-USB power port.
2. Plug the large connector into the USB port on the included USB power adapter, and plug the adapter into a wall outlet.
3. The LED indicator next to the power port will light up RED while charging and turn BLUE when fully charged.

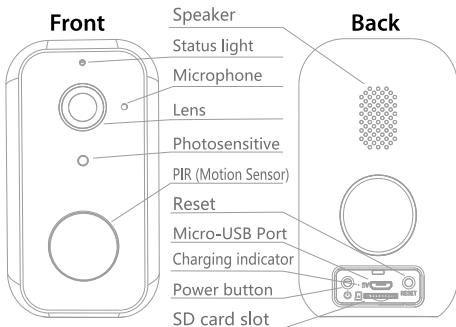

***Note: You must undo the silicone cover over the control panel to access the reset button, micro-USB power port and power button.**


Power port	DC 5V±10%
Power on/off	Press the button for 3 seconds to turn on/off the camera
Status light	<ul style="list-style-type: none"> • Solid red light on: the camera is malfunctional • Blinking red light: wait for network connection (slowly) connecting the network (quickly) • Blinking blue light: currently connecting • Solid blue light on: the camera is working correctly
SD card slot	Support local SD card storage (Max.128G)
Reset	Press and hold on for 5 seconds to reset the camera
Charging indicator	<ul style="list-style-type: none"> • Solid red indicator on: battery is charging • Solid blue indicator on: charging completed
Battery capacity	9600mAh (two 21700 lithium-ion batteries)

 Mode 1 Bracket "A" (magnetic bracket) Installation

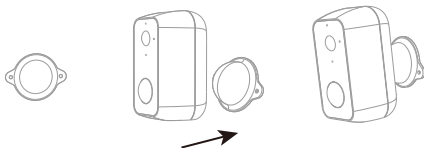

1. Choose a location for the bracket, and install the screw anchors. Place the bracket in place, and screw to the wall.
2. Place the back of the camera close to the bracket. It will adhere magnetically.

 Mode 2 Bracket (B) Installation

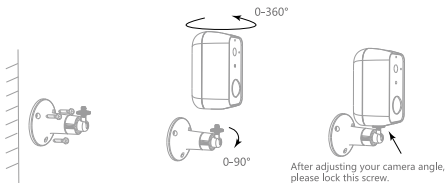

1. Choose a location for the bracket, and install the screw anchors. Place the bracket in place, and screw to the wall.
2. Screw the bottom of the camera onto the bracket's screw head as shown above.

Setting Up

Download the App

SmartZone for both iOS and Android OS. Search for “SmartZone Living” in your device’s App Store or Google Play store, or scan the QR Code below by opening your device’s camera, holding over the QR code, and clicking the link when it shows up at the top.

Search “SmartZone Living” in your device’s app store

or

Scan the QR code



Set up router

The device supports 2.4GHz WiFi (does NOT support the 5GHz), and connects to the WiFi network. Please set the parameters of the router before connecting the WiFi network, and record the SSID and password of your WiFi.



2.4GHz

 


5GHz




Registration process



- Step 1 Open the SmartZone app, click "Sign Up", read the "User Agreement and Privacy Policy" and click "Agree."

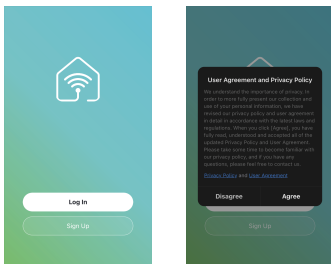


 
- Step 2 Input a valid email address and tap "Get Verification Code". Input the verification code to log in. You will be prompted to set a password. Set a password and tap "Done."

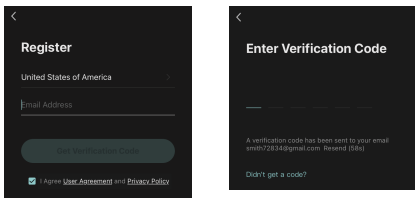

  - 1 In the app, tap "Me" >> "Home Management" >> "Create a home", and you can customize the home name and related settings. Click "Save."

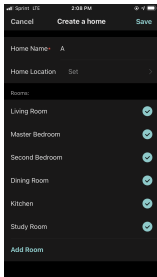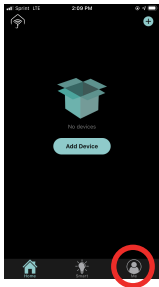

 
 
- 2 On the "Home" tab, tap "Add Device" or "+", and then select "Smart Camera" to add camera.

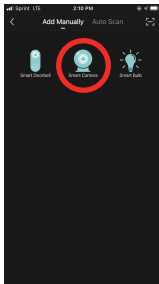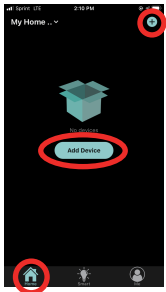

QR Code Configuration

- 3 Make sure the camera is charged up or connected to power. Press + hold the "⏻" button on the back of the camera for 3 seconds to power ON.

  Follow the instructions in the app, using the included pin to press the "Reset" button on the back of the camera. When the LED indicator starts flashing quickly and/or a tone is heard, tap "Next". Then input your WiFi's passwords and click "Next". Tap "↶" to change network.

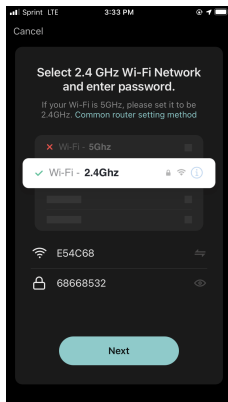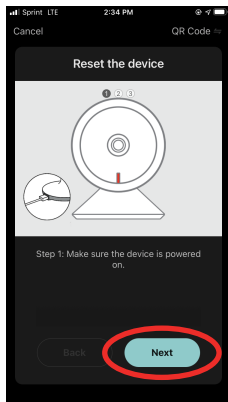

Note:

- 1) Camera supports 2.4GHz WiFi network ONLY.
- 2) The number of bits in the SSID and passwords of the router should not exceed 24 digits.

QR Code Configuration

 
 
 
- 4 Please be patient waiting for the camera's LED indicator to start flashing RED.**

When this happens, make sure the app is displaying a QR code, like the screen at right. Hold the camera up to your phone, and **use the camera to scan the QR code that is displayed on your phone.**

When it scans, the camera will sound a tone. After you hear the tone, tap "I Heard a Prompt."

If you're having trouble scanning, try holding the camera/phone at different distances and angles from each other until the camera makes a tone.

App is displaying QR code on phone

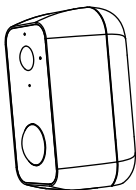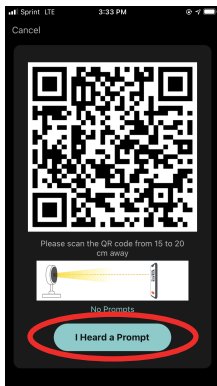
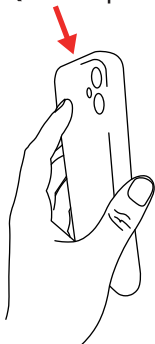


Camera is scanning phone screen





Please hold your device 6-8" away from the camera.

  - 5 When connecting, you should make sure your router, device, and the camera are as close as possible. When the camera has been added successfully, the screen on the right below will display. Tap "✎" to edit the camera's name if you wish.

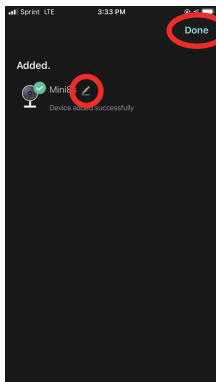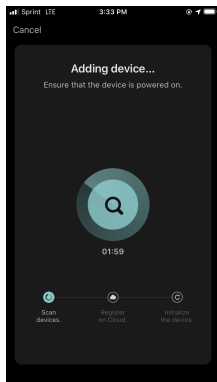

  On the "Smart Camera" screen ,tap "⚙️". You can set the camera's basic functions.

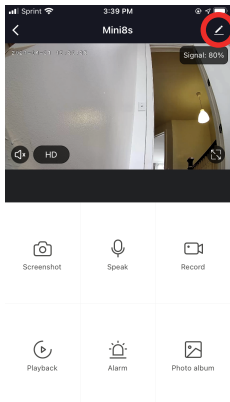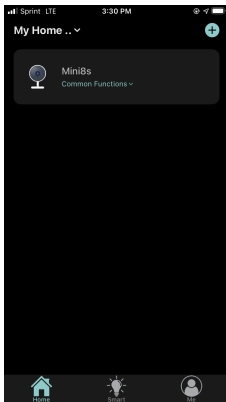

Q: The device cannot be previewed properly?

A: Check whether the network is normal, you can place the camera close to the router, and if not, it is recommended to reset the device and add it again.

Q: Why is it still in the list of devices after resetting?

A: The reset device only resets the network configuration of the camera, but cannot change the configuration on the App or remove the camera, and must be deleted by the App.

Q: How to remove the camera network from another router?

A: First remove and reset the device on the App and then configure the device again by the App.

Q: Why doesn't the device identify the SD card?

A: It is recommended to plug in SD card after powering OFF. Confirm whether the SD card is normally available and that the format is FAT32. Be sure to check whether your internet is working properly also.

Q: Why I can't get the notifications from the App?

A: Please confirm that the App has been running on the phone, and the relevant notification function has been activated in the app. Check your device's settings to make sure the app is authorized to send notifications.

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

Rating Label Definitions



Direct current symbol.



This symbol signifies that the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol represents FCC Declaration of Conformity and compliance.

Warranty

1-Year Limited Warranty

Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com
- Select the brand and model of your device
- Select "Service Request" and fill out the form to begin your inquiry
- Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.