Precautions & Warnings

- 1. Do not fill the water tank over MAX level line marked on the
- outside of the water tank.

 2. Do not turn the aroma function on when the tank is empty.

 3. Do not touch the inside base of the tank.
- Clean regularly per the maintenance instructions in this user manual to avoid malfunctions.
- Always unplug the power cable before maintenance.
 Always pour any remaining water out of the tank and wipe
- with a clean, dry cloth.
- 7. Essential oils can stain. In the event of a spill or leakage, please wipe away any water or oil with a soft cloth.

 8. Do not let mist blow directly onto furniture, clothing, art,
- 9. Keep away from direct sunlight, heat sources, air conditioners, and fans.

 10. Always keep on a stable, flat surface. Do NOT place on a
- carpet, bed, cushion or other non-flat, non-stable surface.

 11. Keep away from electronic equipment.
- 12. Do not tip the product as it may cause water or oil to enter
- the mechanism and cause malfunction.

 13. Do not use for more than 6 hours at a time.
- 14. Never move the product while in use.
- 15. Do not touch any part of the product with wet hands.
- 16. Keep out of reach of children and pets. Children should not be left unsupervised near this product. This unit is not to be used by children or any person(s) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given express supervision and instruction.
- Keep the power cable clear of pathways, and do not forcefully pull or remove from the unit.
- 18. If smoke or burning smell is detected, immediately unplug

Legal Information

READ CAREFULLY AND KEEP THIS MANUAL

FCC Information

is device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation, if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
This device has been evaluated to meet general RF exposure requirements,
The device can be used in portable exposure conditions without restriction.

Rating Label Definitions

This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

90-Day Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

To obtain warranty service:

• Visit our customer support portal: www.customersupport123.com

Visit our customer support portal: www.customersupport123.com
 Select the brand and model of your device
 Select "Service Request" and fill out the form to begin your inquiry
 Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must

be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSIY DESCRIBED ABOVE SHALL APPLY DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER, IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL DIRECT, SPECIAL PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISSUES OR INABILITY OU SET THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY NOTWITHSTANDING THE FOREGOINS, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THE VIRE THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

vie /

Ultrasonic Diffuser with Succulents & LED Lights



User Guide OLID1070

Getting Started

Questions & Support

If you have any questions or problems concerning this product, please visit our website at customerservice123.com and click on the Brand of your product.

In the Box

- OLID1070 **Diffuser** (x1) USB Power Cable (x1)
- 5 mL Essential Oil (x1)


Before You Begin..

NOT INTENDED FOR MEDICAL USE

- · This device is not intended to be a substitute for medical
- The amount and intensity of aroma produced will vary. Factors that affect production of aroma can include water type, humidity, temperature, air current, and/or type or brand of essential oil used.
- · It may take up to a half hour before you can smell the essential
- Tank Operation Time:
- 5-6 hours (continuous) 10-12 hours (intermittent)
- Water Tank Capacity: 80 mL
- The suggested room size for this device is ~215 ft² (this may vary greatly by environment, type of essential oil used, etc.). product, Oil containing chemical fragrance, spice, or other
- impurities may cause malfunctions.

 Only use the supplied power cable. If using a USB adapter,
- it MUST be a 5V/1A USB adapter (not included). • When not in use, the diffuser should be stored in a dry, cool
- location, away from sources of water or heat. It is recommended that the diffuser be covered to protect it from exposure to dust if it will not be in use for a long period


Location of Controls

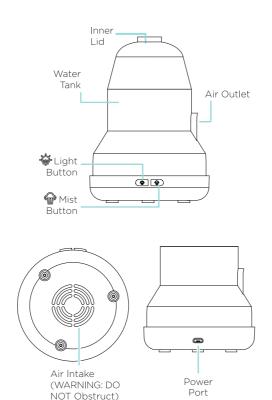

- 1. Insert the pin of the supplied USB power cable into the power port and plug into a USB port on a computer or 5V/1A USB adapter (not included) and plug into a wall socket.
- 2. Pull the outer and inner lids up to remove



 - 3. Fill the tank with room temperature water up to the MAX level line.
- 4. Add 2 3 drops (~0.1 0.15 mL) of essential oil.



- 5. Cover the tank with the inner lid and outer lid. Place the diffuser on a flat, stable surface.
- 6. Pour the included stones into the trough so they sit at the









Using the Diffuser

- Press the **P** Mist button **1 time** to turn the diffuser ON in **continuous diffusion** mode.
- ullet Press the $\mbox{\em Ω}$ Mist button **a 2nd time** to change to **intermittent diffusion** mode. In intermittent diffusion mode, mist will be diffused every -30 seconds. This greatly increases the length of time the diffuser will operate before the water
- Press the Mist button a 3rd time to turn the diffuser OFF.



Using the Lights

- Press the light button to turn the diffuser lights ON in breathing mode. The diffuser light will slowly fade in and
- \bullet Press the the Light button again to lock the current color in
- Continue pressing the 😽 Light button to cycle through all the different light modes, and to turn the lights OFF.



Warning: Please make sure there is water in the tank before **operating to avoid damage to the unit.** If there is no water in the tank, the LED will flash five times, indicating that the tank needs to be filled. The diffusion function will not operate

When finish using. Drain any remaining water from the tank, carefully rinse and let dry. Carefully clean the nozzle over the ultrasonic pad with a cotton swab.

If you would like to more thoroughly clean the diffuser, use a small amount of neutral detergent, such as a dish soap.