

Mahli User Guide (Cover)

(Front)

Setting the Alarm Time

- Press the **[SET]** button until the alarm time is displayed.
- Press the **[UP]** button to turn the alarm ON or OFF. The dot in the lower left corner of the clock display will light up when the alarm is turned on.

- When the alarm is turned on, press + hold the **[SET]** button to set the alarm time. The alarm hours will begin flashing. Press the **[UP]** and **[DOWN]** buttons to adjust.
- Press **[SET]** to save the alarm hour setting. The alarm minute digits will begin flashing. Press the **[UP]** and **[DOWN]** buttons to adjust, and press **[SET]** to save. The clock will return to its default display mode.

Snooze Function

- Press the **[SNOOZE/LIGHT]** button when the alarm goes off to activated the Snooze function. The alarm will ring again in 5 minutes. The sunrise light will continue to shine at full brightness during the snooze time.
- To turn the alarm and sunrise light off completely, press and hold the **[SNOOZE/LIGHT]** button when the alarm goes off. This only turns them off for the day, and they will activate again as normal the next day.

Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product complies with the requirements for Part 18 of the FCC Rules. Although this product complies with FCC, it may interfere with other devices. If this product is found to interfere with another device, separate the other device and this product.

WARNING: Li-Ion Battery Inside
This product is fitted with a Li-Ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

Radiation Exposure Information
This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Rating Label Definitions

- Direct current symbol.
- This symbol signifies that the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.
- This symbol signifies and declares that this equipment complies with battery charging which complies with California CEC and energy efficiency.
- This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Southern Telecom is under license.
- This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

90-day Limited Warranty
Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our website at www.southerntelecom.com
- Click on **Product Support**
- Select the **Brand** of your device
- Select **Service Request** and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Sunrise Alarm Clock

Instruction Manual
OLID1082

RECYCLE 1.800.822.5878

Printed in China/Designed in the U.S.
v1. 07/2020

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Before You Begin...

Caution
To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- READ CAREFULLY AND KEEP THIS MANUAL**
- THIS IS NOT A TOY.** Please keep away from children.
- Low power may cause poor Bluetooth connection or dysfunction.
- Do not overcharge the battery.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
- Do not submerge in water.**
- Do not open this product or attempt to repair the unit yourself should it not be working.
- Do not allow the USB ports, power jack or other inputs of the device to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- Do NOT place any metal object onto the charging pad.**
- Magnetic strip cards, including credit cards, phone cards, identification cards and boarding passes may be damaged by the magnetic field if placed on or near this device.
- Do not place this device on or near a microwave or similar kitchen appliance.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

Questions & Support
If you have any questions or problems concerning this product, please visit our website at SouthernTelecom.com and click on **Product Support**.

In the Box

- OLID1082 - Sunrise Alarm Clock (x1)
- USB Power Cable (x1)
- User Manual (x1)

Getting Started

Location of Controls

Back of Clock

Connecting to Power

Insert the small connector of the included USB power cable into the power input port on the back of the clock. Insert the large connector into the USB port on a computer or into a compatible **5V/1.5A USB Power Adapter** (not included) and plug into a wall outlet.

The dock display will turn on when the clock is connected to power.

If the clock is disconnected from power, it will only save the time and settings for 60 seconds.

Bluetooth Pairing

To listen to music on the clock speaker, you must be paired to a Bluetooth device. Follow the instructions below to pair your device.

- Connect the clock speaker to power. A tone will be heard and the speaker will enter Bluetooth pairing mode.
- Set your mobile device to search for Bluetooth devices. When the list appears, select **OLID1082** from the found devices.
- After a successful pairing, a tone will be heard and you will be able to play music on the speaker.

When paired via Bluetooth, audio playback and volume adjustment will be controlled by your paired device.

The speaker may automatically re-pair to a previously-paired device in range when it is connected to power. To pair to a different device, go into your device's Bluetooth menu and un-pair from the OLID1082 speaker.

Using the Wireless Charging Pad

Connect to power. Place your Qi-enabled device on top of the alarm clock, in the center of the wireless charging pad. Your device should begin charging.

If your device does not begin to charge, try repositioning your device on the charging pad.

You may need to remove your smartphone case to charge properly.

Using the USB Power Output

You can power or charge a USB device using the USB power output port on the back of the clock.

To use, simply plug your device's USB connector into the USB power port while the clock is connected to power.

Using the Bedside Light

- Press the **[SNOOZE/LIGHT]** button on the top of the clock to turn the bedside light ON in white light mode.
- Press the **[SNOOZE/LIGHT]** button to adjust the light brightness between low, medium and high.
- Press and hold the **[SNOOZE/LIGHT]** button to switch to color-changing light mode.
- In color-changing light mode, press the **[SNOOZE/LIGHT]** button to choose a light color.
- Press and hold the **[SNOOZE/LIGHT]** button to switch back to white light mode. Note: the bedside can only be powered OFF from white light mode.

Using the Sunrise Light

The clock's sunrise light function will turn on 20 minutes before your alarm time, and gradually increase in brightness until your alarm goes off. See the **Setting the Alarm** section on the last page of this manual for instructions.

To use the sunrise light, set the alarm before you go to sleep.

Display Modes

Press the **[UP]** button on the back of the clock to switch between clock display modes. Press the **[SET]** button to save as the default mode.

- Mode 1** shows the time for 10 seconds and the date and temperature for 2 seconds.
- Mode 2** shows the time, alarm, date and temperature at all times.
- Mode 3** shows the time on the display at all times. In this mode, press the **[SET]** button to display the alarm, date and temperature for 15 seconds.

Setting the Date

- Press the **[SET]** button until the date is displayed.
- Press + hold the **[SET]** button to set the date. The year will begin flashing. Press the **[UP]** and **[DOWN]** buttons to adjust.
- Press **[SET]** to save the year setting. The month will begin flashing. Press the **[UP]** and **[DOWN]** buttons to adjust, and press **[SET]** to save the month.
- The day will begin flashing. Press the **[UP]** and **[DOWN]** buttons to adjust, and press **[SET]** to save. The clock will return to default display mode.

Changing Temperature Units

- Press the **[SET]** button until the temperature is displayed.
- Press the **[DOWN]** button to switch between degrees Fahrenheit (° F) and Celsius (° C).
- Press **[SET]** to save. The clock will return to default display mode.

Setting the Time

- Press the **[SET]** button until the time is displayed.
- Press + hold the **[SET]** button to set the time. The time hours will begin flashing. Press the **[UP]** and **[DOWN]** buttons to adjust. The dot in the upper left corner of the display will appear when the hour is in PM.

- Press **[SET]** to save the hour setting. The minute digits will begin flashing. Press the **[UP]** and **[DOWN]** buttons to adjust, and press **[SET]** to save. The clock will return to its default display mode.

See the last page of this manual for alarm clock setting instructions.

(Back)