$(Fold Inward) - - - - \rightarrow$

(Back Cover)

(Front Cover)

Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation of this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of fand on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Recrient or relocate the receiving antenna.

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

Radiation Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

This symbol represents FCC Declaration of Conformity and compliance.

his symbol signifies that this is a wireless device powered by Bluetooth® technology.

Warranty Information

90-day Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product fincluding any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:

 Visit our website at www.southerntelecom.com

 Click on Product Support

 Select the Brand of your device

 Select Service Request and fill out the form to begin your inquiry
- Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require

Warranty service not provided

Warranty service not provided This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Tetured to the authorized service center for repair must be suitably packages.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSIV DESCRIBED ABOVE SHALL APPLY, DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY OR PERIOD STATED ABOVE. NO THER EXPRESS WARRANTY OR GUARANTY GENE MY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE. AT DISTRIBUTOR'S SOLE DISCRETION. ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR SOLE DISCRETION. ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, POOL OSS OF PROFITS, BUSINESS, SAMINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT EXCEPT AS STATED HERBIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PROPROCET SOLD BY DISTRIBUTOR THAT WARRANTE SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PROPROCET SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PROPROCET SOLD BY DISTRIBUTOR.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

Polaroid, Polaroid & Pixel, Polaroid Color Spectrum, and Polaroid Classic Border Logo are trademarks of PLB, IP Holding

PLR IP Holdings. LLC does not manufacture this product or provide any manufacturer's warranty or support

www.polaroid.com @2020 All rights reserved

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under license

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.



Polaroid

Instruction Manual

True Wireless Buds Charging Bundle



Polaroid



Designed in US Printed in China

Before You Begin...

READ THIS MANUAL CAREFULLY AND SAVE FOR **FUTURE REFERENCE**



- ⚠ Caution

 To ensure sate and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

 **THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with this device,

 **Do not desseamble, modify, or repair the device,

 **Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.

 Do not swhemere in water.

 Low power may cause poor Bluetooth connection or sound distortion.

- authorities of the correct way to dispose of this device;

 Do NOT place any metal object onto the charging pad.

 **Magnetic strip cards, including credit cards, phone cards, identification cards and boarding passes may be damaged by the magnetic field if placed on or near the wireless charging pad.*

 Do not place the wireless charging pad on, in or near a microwave or similar kitchen appliance.

Customer Support

For any questions or problems with your product, please visit our website at SouthernTelecom.com and click on Product Support.

In the Box

- PBT161 True Wireless Earbuds (x1)
- Charging Case (x1) Qi-enabled Wireless Charging Pad (x1)
- USB Cable (x1) User Manual (x1)

[Multil Button: device's voice assistant Press + Hold (1s): Reject call Press: Play/pause music, 3x Press: Redial last number Microphone

Location of Controls

Getting Started

Setting Up the Wireless Charging Pad

Plug the small connector of the included power cable into the power port on the side of the charging pad. Plug the large connector into the USB port on a computer or or a compatible 5V USB adapter (not included) and plug into a wall socket.

 
on the charging pad will light up **solid** RED to indicate that it is connected

Using the Wireless Charging Pad

The included wireless charging pad can wirelessly charge the case, and any other Qi-compatible device. Check your device's instruction manual to see if it is compatible with the Qi charging standard.

- 1. Set up the wireless charging pad.
- Place the bottom of the case or device in the center of the charging pad as shown.
- 3. An LED indicator on the charging pad will light up **solid BLUE** when it is charging a device. The LED indicator on the bottom of the case will **flash BLUE** while charging and turn solid BLUE when the case is fully charged.

Note: You may need to remove the case on your device to charge. If the device does not begin charging when placed on the wireless charging pad, try repositioning it.

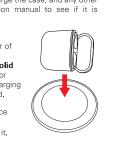

Charging the Case Directly

Plug the small connector of the supplied USB charging cable into the USB charging port on the bottom of the case. Plug the large connector into the USB port on a computer, a USB charging device, or **5V USB adapter** (not included) and plug into a wall socket.

The LED indicator on the bottom of the case will flash BLUE while charging, and turn solid BLUE when the case is fully charged

Charging the Earbuds

Open the lid of the charging case and insert the earbuds into the case's earbud charging ports. The earbuds will automatically begin charging. The earbuds' LED indicators will turn solid RED and the LED indicator on the bottom of the case will turn solid BLUE when the earbuds are charging. When the earbuds are fully charged, th ndicator will turn OFF and the earbuds' LED indicators will turn BLUE for 30 seconds before turning OFF.

NOTE: When the earbuds have less than 5% charge remaining, a voice will be heard and the earbud LED indicators will flash RED every 10 seconds.

Powering ON/OFF

The earbuds will automatically power ON when removed from their charging case and power OFF when inserted into the case. When inserted, the earbuds will automatically power off and begin charging, and the earbuds' LED indicators will **turn RED**.

You can also power the earbuds ON/OFF manually by pressing and holding the earbuds' [Multi] buttons.

- Press and hold the earbuds' [Multi] buttons for 3 seconds to power them ON • Press and hold the earbuds' [Multi] buttons for 4 seconds to power them OFF.
- **Note**: The earbuds will automatically power OFF after 5 minutes if they are not paired to a Bluetooth device. The LED indicators will flash blue and red once.

Pairing the Earbuds

- 1. Power both earbuds ON at the same time. Hold them close together as shown at right. Both earbuds' LED indicators will **flash RED and BLUE**.
- After a moment, a voice will be heard, indicating that the 2 earbuds have paired to each other.
- Set your Bluetooth-enabled device to search for Bluetooth devices. Select **PBT161** when it
- appears on the list of found devices.

 4. Once successfully paired to your device, a voice will be heard. The earbuds' LED indicators will
- briefly flash RED and BLUE and then will turn OFF.

Adjusting Playback

Once you have paired to the earbuds, you can adjust playback and volume with the controls on your paired device, or with the earbud controls below.

• Press either [Multi] button to pause. Press again to resume.

- 2x press the left earbud's [Multi] button to skip to the previous track.

 2x press the right earbud's [Multi] button to skip to the next track.

 Press and hold either [Multi] button for 2 seconds to activate your device's voice. assistant.

You must be paired to a Bluetooth device to listen to music and use the earbuds' phone functions. Consult the **Pairing the Earbuds** section of this user manual for instruction.

• Press either [**Multi**] button to answer an incoming call.

• Press either [**Multi**] button again to end the call.

- Triple press either [Multi] button to redial the last outgoing or incoming phone number.
 Press and hold either [Multi] button for 1 second to reject an incoming call, including while you are on the phone.