(Fold Inward) — — — **▶**

(Back Cover)

(Front Cover)

Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Rote: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected,

• Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

WARNING Li-ion Battery Inside
This product is fitted with a Lion battery, Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency. This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® under locen and logos are registered trademarks owned by Bluetooth SiG, Inc. used under locense.

Warranty Information

90-day Limited Warranty Tarritors: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Souther Relecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

• Visit our customer support portal: www.customersupport123.com

• Salect the braid and model of your device

• Salect "Service Request" and fall out the form to begin your inquiry

• Salect "Service Request" and fall out the form to begin your inquiry

• Exchanges require dated proof of purchase from an authorized retailer

 
Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service parter determines this nondure is defective. Products received damaged as a result of shipping will require you to file a claim with

authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABLITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSIV DESCRIBED ABOVE SHALL APPLY, DISTRIBUTOR FURTHER DISCLAMS ALL WARRANTIES AFER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR FILOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR FOR WARRANTY OR FILOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR FOR THE PRODUCT SHALL BE BIDDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE AT DISTRIBUTOR'S SOLE DISCRETION. A REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE AT DISTRIBUTOR OR ITS WANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITUR OR CONSEQUENTAL DAMAGES FOR LOSUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS I CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREN, NO OTHER WARRANTIES SHALL APPLY, NOTWITHISTANDING THE FORECOME, CONSUMER'S RECOVERY AGAIN DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY TRANSFERABLE.

Designed in US Printed in China v1. 12-2020

Polaroid



Visit us at customersupport123.com



Polaroid



PBT270 Stereo Melody Wireless Headphones User Manual

Before You Begin...

Customer Support

For any questions or problems with your product, please visit our website at customersupport123.com

⚠ Caution

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

• THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with

- Do not disassemble, modify, or repair the device.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not submerge in water
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
 If using with a USB adapter, make sure the adapter is not damaged. • Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials
- such as liquids, metallic powders, etc.

 The headphones contain a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

In the Box

- PBT270 Wireless Headphones (x1)
- USB Charging Cable (x1)
- Instruction Manual (x1)

[▶] Button: Press + hold: Power ON/OFF Press: Play/pause, Answer/end call 2x Press: Redia last phone number (Side of right **)** [_] Button: 100C Microphone Charging LED Indicator (Bottom of right earcup)

Location of Controls

Charging the Headphones Plug the small connector of the included power cable into the charging port on the headphones' right earcup. Plug the large connector into the USB port on a computer or a compatible 5V USB adapter (not included) and plug into a wall socket.

The headphones' LED indicator will turn solid RED while charging and turn OFF when fully charged. On low battery, a voice will be heard, indicating that the headphones need to be charged.

Getting Started

Powering ON/OFF

- Press and hold the [▶] button for ~3-5 seconds to power the headphones ON or OFF.
- When powered on, a voice will be heard and the head-phones will enter Bluetooth pairing mode. They will automatically re-pair to any nearby, previously-paired device with Bluetooth enabled.

Playing Music

 
To listen to music on the headphones you must be paired to a Bluetooth-enabled device. Consult the Bluetooth Pairing section of this manual for further instruction.

Bluetooth Pairing

- 1. Power the headphones ON. A voice will be heard, and the LED indicator will quickly flash BLUE.
- 2. Set your mobile device to search for Bluetooth devices. When it appears, select PBT270 from the list of found devices.
- 3. After a successful pairing, a voice will be heard and the LED indicator will slowly flash BLUE.

In Bluetooth mode, playback and volume can be adjusted with the on-ear controls, or with your paired device.

- Press the [▶] button to pause or resume playback. The headphones' LED indicator will flash BLUE once you begin playing audio after pairing.
- Press the [+] and [] buttons to skip tracks.
- Press and hold the [+] and [–] buttons to adjust volume.



Phone Calls

To use the phone functions on the headphones, you must be connected to a Bluetooth-enabled device.

- Press the [▶] button to answer and end phone calls. Playback will automatically pause and resume.
- 2x press the [►] button to dial the last outgoing phone number.
- Press and hold the [►] button to reject an incoming call and send straight to voicemail.