(Fold Inward) — — — **▶**

(Back Cover)

(Front Cover)

Using the Remote Control

- [ტ] Button:
- Enter/leave standby mode
- [MODE] Button: Change input mode
- [►||] Button: Pause/resume playback
- [LED] Button:
- Change LED light mode
- [▶▶I] Button:
- Skip to next track
- [► Button: Skip to previous track
- [VOL+] Button:
- Increase volume
- [VOL-] Button: Decrease volume













Compliance Information

FCC Information This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Rote: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC flules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference at radio communications. However, there is no quarantee that interference will not occur in a particular installation, if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Recrietar relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undestined operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction.

Rating Label Definitions

Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology.

Warranty Information

LIMITED WARRANTY TO ORIGINAL CONSUMER

- To obtain warranty service:

 Visit our customer support portal: www.customersupport123.com

 Select the brand and model of your device

 Select "Service Request" and fill out the form to begin your inquiry

 
 Select "Service Request" and fill out the form an authorized retailer

 Exchanges require dated proof of purchase from an authorized retailer

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of
reasonable cere, unauthorized modification including software modifications such as the installation of custom firmware. This
warranty is volded in the event any unauthorized person opens, afters or repairs this product. All products being returned to the
authorized service center for repair must be suitably packaged.

Designed in US Printed in China v1. 12-2020

Polaroid



Visit us at customersupport123.com



Polaroid



PBT3059

37 Inch Home Theater Soundbar User Manual

Before You Begin...

Customer Support

r any questions or problems with your product, please visit our website at SouthernTelecom.com and click on Product Support.

To ensure safe and proper use, read all safety information before using the device.

- Only use with manufacturer-approved batteries, chargers, accessories, and supplies. • THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with
- . Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.

- In the Box
 PBT3059 Soundbar (x1)
- Power Adapter (x1)
- User Manual (x1)

Location of Controls [Volume] Dial: Power ON/OFF. Adjust volume -USB Port AUX Port-<u>* / M</u> ◯ ◯ AUX _TF Card Port [*/M] Button: Switch input mode, DC 9V (Side of Power Port

Getting Started

Wall Mounting the Soundbar

- 1. Remove the soundbar and its contents from packaging. 2. Using a pencil, mark two spots on a wall measuring 31.5 inches apart.
- 3. If installing to a wooden surface, hammer a nail, or drive or drill a mounting screw (mounting materials not included) into the wall at each marked location If installing to drywall or a brick surface, you may need to install plastic anchors
- to properly secure the mounting screws.

 4. Place and hang the soundbar from its mounting holes on the back onto the



Connecting to Power

Plug the pin of the supplied power adapter into the DC 9V power port on the side of the soundbar. Plug into an electrical outlet.

- Turn the [Volume] dial to the right until it clicks to power ON. A tone will be heard, and the soundbar will enter Bluetooth pairing mode. It will automatically re-pair to any nearby, previously-paired device with Bluetooth enabled.
- Turn the [Volume] dial to the left until it clicks to power OFF.



Changing Input Modes

Press the [*/M] button on the side of the soundbar or the [MODE] button on the remote control to switch input modes.

A USB device or TF card must be inserted to switch to these modes.

Adjusting Volume

Adjust volume by turning the **[Volume]** dial on the soundbar, or use the controls on your connected device.

Using the LED Lights

 Press + hold the [★/M] button on the soundbar or press the [LED] button on the remote control to flip through LED light modes.

- Bluetooth Pairing
 1. Power the soundbar ON. A tone will be heard and soundbar will enter Bluetooth
- 2. Set your mobile device to search for Bluetooth devices. When it appears, select PBT3059 from the list of found devices.

 3. After a successful pairing, a tone will be heard and you will be able to play music

In Bluetooth mode, playback will be controlled by your paired device. Volume can be adjusted with the dial on the soundbar or with the controls on your paired device.

Using the 3.5 mm AUX Input

Insert one connector of a 3.5 mm auxiliary cable (not included) into the 3.5 mm aux input port on the soundbar.

Insert the other connector into the headphone jack or 3.5 mm aux output port on your media-playing device. The soundbar will automatically switch to AUX mode.

In AUX mode, all playback will be controlled by your connected device.

USB Device and TF Card Input

Insert a USB device, such as a USB flash drive, or micro SD/TF card into the USB or TF card input ports on the side of the soundbar.

Note: To listen to music on your USB device, you may need to have files stored in the root folder of the device. Check your USB device's manufacturer information

If the soundbar does not automatically switch to the correct mode, press the [*/M] or [MODE] button until you enter USB or TF card mode. The speaker will automatically begin playing music off the device.

In USB and TF mode, playback and volume adjustment will be controlled with the buttons on the remote control. See the **Using the Remote Control** section on the next page of this manual for details.