# (Fold Inward) - - - - **▶**

# (Back Cover)

# (Front Cover)

### Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment penerates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING Li-lon Battery Inside
This product is fitted with a Li-lon battery, Do not damage, open, or dismantle the battery and do not use it in damp and/or corrossive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology.

This symbol represents FCC Declaration of Conformity and compliance.

### Warranty Information

### 90-day Limited Warranty Territory: United States/Canad

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product fincluding any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:

   Visit our website at www.southerntelecom.com
   Click on Product Support
   Select the Brand of your device
   Select Service Request and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, afters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

IO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential dam allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specifyingts, and you may have other rights that vary from state to state or province to province. Contact your author retailer to determine if another warranty applies.

Polaroid, Polaroid & Pixel, Polaroid Color Spectrum, and Polaroid Classic Border Logo are trademarks of PLR, IP Holdings

PLR IP Holdings, LLC does not manufacture this product or provide any manufacturer's warranty or support.

polaroid.com @2020 All rights reserved

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under license

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.



Designed in US Printed in China

# **Polaroid**

Instruction Manual

**Groove Pulse** Wireless Speaker

PBT3079



### Before You Begin...

## Customer Support

For any questions or problems with your product, please visit our website at **SouthernTelecom.com** and click on **Product Support**.

### READ CAREFULLY AND KEEPTHIS MANUAL

- THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with
- Do not disassemble, modify, or repair the device.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- . Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.

such as liquids, metallic powders, etc.

- Do not overcharge battery.If using with a USB adapter, make sure the adapter is not damaged Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

### In the Box


- PBT3079 Wireless Speaker (x1)
- USB Charging Cable (x1)User Manual (x1)

## Location of Controls Wireless Speaker PBT3079 Control Charging LED Bluetooth LED Indicator (Back of Speaker) Charging On Off Charging [LED] Button [Power] Switch Port Change LED

## Getting Started

### Charging the Speaker

Insert the small connector of the included USB charging cable into the charging port on the back of the speaker. Insert the large connector into a USB power port or into a 5V USB adapter (not included) and plug into an electrical outlet.

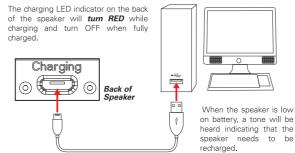

### Powering ON/OFF

### Charge the speaker fully before using.

- Move the [Power] switch on the back of the speaker to power both the speaker & the LED lights ON or OFF.
- When powered on, the speaker may automatically re-pair to a previously-paired Bluetooth device in range.



In order to play audio on the speaker, you must be paired to a Bluetooth device. See the **Bluetooth Pairing** section below for instruction.

Once paired, all audio playback and volume will be controlled by your paired

- Bluetooth Pairing

  1. Power the speaker ON. A tone will be heard, the speaker will enter Bluetooth pairing mode, and the Bluetooth LED indicator on the side of the speaker will
- quickly flash BLUE.

  2. Set your mobile device to search for Bluetooth devices. When it appears, select
- PBT3079 from the list of found devices.

  3. After a successful pairing, a tone will be heard, and the Bluetooth LED indicator will slowly flash BLUE.

Note: Keep the speaker within 30 feet of your device.

### Using the LED Lights

The built-in LED lights will automatically power ON when the speaker is powered on, and will begin cycling through different colors.

- Press the [\*] button again to turn the LED lights OFF.
- Press and hold the [ \* ] button to switch to sound-reactive light mode. The lights will dance to the beat of your music. For best results, turn up the volume.
   Press and hold the [ \* ] button again to exit sound-reactive light mode. You will
- return back to the color-cycling mode, where you can freeze on a color or turn the lights OFF.