

Polaroid



PBT3770

37" Home Theater Soundbar & Wireless Subwoofer

User Manual

Before You Begin...

READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE



Caution

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- **Do not submerge in water.**
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- The earbuds and case contain built-in batteries, and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

Customer support

For any questions or problems with your product, please visit our website at customersupport123.com

Specifications

Soundbar: 2" x 2.25" 4Ω40W
Soundbar size: 940 x 103 x 70 mm
Subwoofer: 5.25" 4Ω50W
Subwoofer size: 198 x 203 x 275 mm

 
In the box

- 37" soundbar
- Subwoofer
- Remote control
- Adapter (x2)
- AUX cable
- AUX-RCA cable
- Screws (x2)


Buttons & ports

Soundbar

SOUNDBAR
BUTTONS (SIDE)

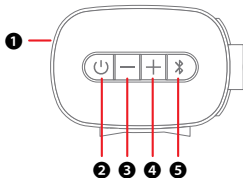


SOUNDBAR
PORTS (BACK)

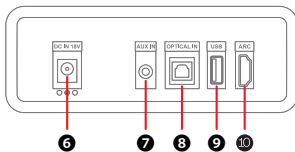 

- ❶ LED screen
- ❷ Power button
- ❸ Volume - / previous button
- ❹ Volume + / next button
- ❺ Bluetooth button
- ❻ DC IN 18V port
- ❼ AUX IN port (3.5mm audio)
- ❽ OPTICAL port
- ❾ USB port
- ❿ HDMI-ARC port

Subwoofer

 
SUBWOOFER
PORTS (BACK)

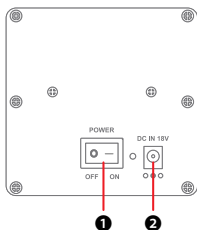

- ❶ Power button
- ❷ DC IN 18V port

Remote control

 The remote control requires 2 AAA batteries (not included).

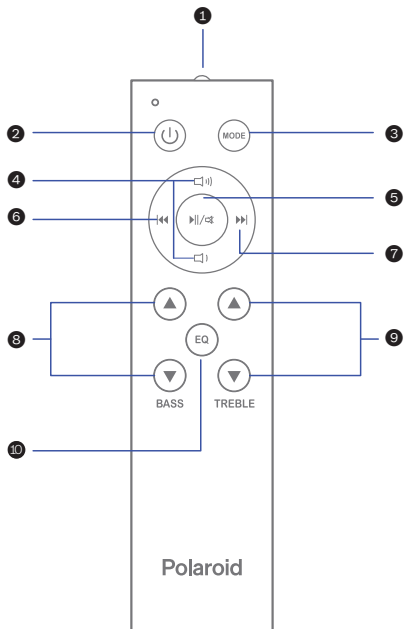

- ① Remote control receiver
- ② Power button
- ③ Mode button
- ④ Volume control buttons
- ⑤ Play / pause / mute / unmute
- ⑥ Previous track
- ⑦ Next track
- ⑧ Bass control buttons
- ⑨ Treble control buttons
- ⑩ EQ button

Operation Guide

Turning on the speakers

1. Plug one end of supplied adapters into both soundbar and subwoofer, and plug the other end to the wall outlet.
2. Press and hold the power button to turn on the soundbar.
3. Press the power switch to turn on the subwoofer.
4. A tone will be heard to indicate the device has been turned on, and the soundbar and subwoofer will connect with each other wirelessly and automatically.

Note: The device has memory function, when reopen it, it will enter into the mode you've selected last time

Connecting via Bluetooth

1. Turn on the speaker, and press the Bluetooth button on the soundbar or the "MODE" button on the remote control to enter the bluetooth mode.
2. A tone will be heard, in the meantime, the LED screen of the soundbar will show "bBLUE".
3. Go to the Bluetooth settings on your device, and select "**PBT3770**" from the list.
4. After the successful pairing, a tone will be heard to indicate your device is connected to the speaker, then you can play music.

LED
SCREEN

bBLUE

Connecting via AUX

1. Press the power button of the soundbar or MODE button on the remote control to enter AUX mode.
2. The LED screen of the soundbar will show "AUX".
3. Plug one end of standard AUX or AUX-RCA cable to the soundbar, and connect the other end to the wall outlet.

AUX

Connecting via USB

1. Press the power button of the soundbar or the MODE button on the remote control to enter the USB mode.
2. The LED screen of the soundbar will show "NO".
3. Plug your USB device to the soundbar, then the LED screen will show "USB". The LED screen will show the elapsed time of the song while playing music.

no

00:00

Connecting via Optical

1. Press the power button of soundbar or the MODE button on remote control to enter the optical mode.
2. The LED screen of the soundbar will show "Opt".
3. Plug one end of standard optical cable (not include) to the soundbar, connect the other end to the "optical digital audio out" port of your device.

Note: Some DVD and blu-ray players have optical audio output and can make use of this option if the TV doesn't support HDMI ARC.

LED
SCREEN

Opt

Connecting via HDMI

1. Press the power button of the soundbar or the MODE button on the remote control to enter the HDMI mode.
2. The LED screen of the soundbar will show "Hd".
3. Plug one end of standard HDMI-ARC cable (not include) to the soundbar, connect the other end to your device.

Note: The HDMI ARC port is usually clearly marked on the back of the device. Most smart televisions after 2009 are usually HDMI ARC compatible.

Hd

Volume control

- Press and hold + or - button of the soundbar to increase or decrease the volume.
- Press the ◀ or ▶ button of the remote control to increase or decrease volume.
- Press the mute button to mute or unmute.

Note: The LED screen of the speaker will show the volume level from 0 (min) to 32 (max) while adjusting it.

000

032

Sound effect


The speaker has 3 equaliser presets: 'Music', 'Movie' and 'News'.
Press "EQ" button on the remote control to select your preferred preset.

- Music: Enhanced bass sound
- MOVIE: Neutral and surround sound
- NEWS: Enhanced vocal sound

Use the treble and bass buttons on the remote control to adjust the sound effect.


Note: EQ, Bass, Treble can be only controlled with the remote control.

REMOTE CONTROL

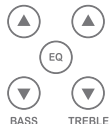

Mounting the soundbar

1. Mark two spots on the wall 29.25 inches apart and make sure the spots are leveled.
2. Drill screws (included) into the marked spots on the wall. Make sure to leave some space between the wall and the screw head to hang the mounting holes of the speaker.
3. Hang the mounting holes on the back of the speaker to the installed screws on the wall.

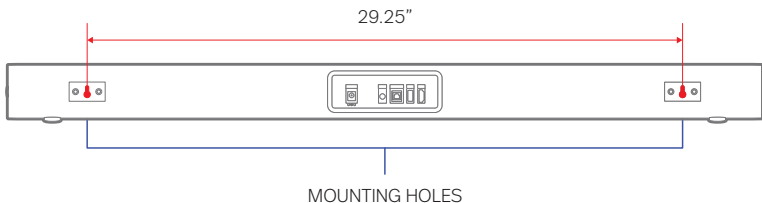

E-Waste Notification

Where appropriate, all consumer electronics manuals must contain this statement to ensure compliance with US e-waste regulations:

PLR IP Holdings, LLC, its licensees and affiliates, fully supports all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to www.polaroid.com and reference Social Responsibility <http://www.polaroid.com/social-responsibility> to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Polaroid

 


Polaroid



Have questions? We've got answers.

Visit us at customersupport123.com



Instantly recognizable. Instantly reassuring. The Polaroid Classic Border and Polaroid Color Spectrum logos let you know you've purchased a product that exemplifies the best qualities of our brand and that contribute to our rich heritage of quality and innovation.

©2021 All rights reserved.

Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings LLC, does not manufacture this product or provide any manufacturer's warranty or support.

Product features, specifications and appearance are subject to change without notice.