$(Fold Inward) - - - - \rightarrow$

(Back Cover)

(Front Cover)

Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, fir not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- of the following measures:

 Recrient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with competible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

Rating Label Definitions

=== Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology.

Warranty Information

90-day Limited Warranty Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

- To obtain warranty service:

 Visit our website at www.southerntelecom.com
 Click on Product Support
 Salect the Brand of your device
 Salect the Brand of your device

you to file a claim with the carrier

Warranty service not provided

1 Adjustable Mic Stand

3. Handle

5. [LED] Button

9 Mic 1 Input

10. Mic 2 Input

11 Mic Volume Knob

12. Mic Echo Knob

13. Main Volume Knob

6. [Power] Switch

7. USB Charging Port 8. 3.5 mm Auxiliary Input

Narranty service not provided his warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of easonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being eturned to the authorized service center for repair must be suitably packaged.

returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STAFED ABOVE. NO THEN EXPRESS WARRANTY OR GUARANTY GIVEN BY MAY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUPACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT EXCEPT AS TATED HERRIN, NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PROPRIET SOLD BY DISTRIBUTOR. SOLD BY STRIBUTOR STALL NOT EXCEPT FOR THE PROPRIET SOLD BY DISTRIBUTOR.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific le rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Ø 0000.....

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you pruchased this product to determine a location where you can appropriately dispose of the product.

Polaroid, Polaroid & Pixel, Polaroid Color Spectrum, and Polaroid Classic Border Logo are trademarks of PLR, IP Holdings LLC, used under license.

PLR IP Holdings, LLC does not manufacture this product or provide any manufacturer's warranty or suppo

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under license

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands rioses not innols vendresement.



Polaroid Instruction Manual **Party Speaker** PBT7095

Printed in China

LED Indicator

Slowly flashing BLUE

OFF Speaker is fully charge

Solid RED

Quickly flashing BLUE Speaker is ready to pair

Before You Begin...

Customer Support

For any questions or problems with your product, please visit our website at **SouthernTelecom.com** and click on **Product Support**.



To ensure safe and proper use, read all safety information before using the device.

Only use with manufacturer-approved batteries, chargers, accessories, and supplies. • THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with

- Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or
- wet conditions. • Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.

In the Box

- PBT7095 Wireless Speaker (x1)
- Microphone (x1)Adjustable Mic Stand (x1)
- USB Charging Cable (x1)User Manual (x1)

Location of Controls

Adjust

Plug the small connector of the supplied USB cable to the USB charging port on the top of the speaker. Plug the large connector to the USB port on a computer, or into a **5V USB adapter** (not included) and plug into a wall socket.

The LED indicator will *turn RED* while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

Powering ON/OFF

Charging the Speaker

- Flip the [Power] Switch to the ON position to power ON. A tone will be heard, and the speaker will enter Bluetooth pairing mode. It will automatically re-pair to any nearby, reviously-paired device with Bluetooth enabled. • Flip the [Power] switch to the OFF position to power

Playing Music

To play music on the speaker, you must be paired to a Bluetooth-enabled device or connected with an aux cable. See the **Bluetooth Pairing** and **Using with a Wired** Device sections of this manual.

Adjusting Volume

- To adjust volume, turn the Main Volume Knob on the top of the speaker, or use the controls on your connected device.
- To adjust microphone volume, turn the Mic Volume Knob.

Bluetooth Pairing

Getting Started

ON

OFF

1. Power the speaker ON. A tone will be heard and the LED indicator will **quickly** flash *BLUE*.

- Set your mobile device to search for Bluetooth devices. When it appears, select PBT7095 from
- the list of found devices. After a successful pairing, a tone will be heard and the LED indicator will slowly flash BLUE.
- In Bluetooth mode, playback and volume can be adjusted by the controls on the top of the speaker. or by the controls on your paired device.

Using with a Wired Device

Insert one connector of a 3.5 mm auxiliary cable (not included) into the 3.5 mm

auxiliary input port on the top of the speaker.

Insert the other connector into the headphone jack or 3.5 mm aux output port on your media-playing device. The LED indicator will **turn solid** *BLUE* and all Bluetooth pairings will be disabled when an aux cable is in use.

Using the Speaker Lights

Press the **[LED]** button to cycle through the light modes.

Setting Up the Stand

Insert the base of the included mic stand into the stand holder on the top of the speaker, as shown in the diagram at right.

Pull the body of the stand up or down to adjust to the desired height.

(0)

Using the Microphone

Plug the connector of the included microphone into the Mic 1 Input port on the top of the speaker. Slide the microphone into the microphone holder at the top of the

You can plug a second microphone (not included) into the Mic 2 Input port on the top of the speaker.

Microphone Controls

- Slide the microphone's power switch to the ON or OFF position to power the microphone ON or OFF.
- Adjust microphone echo using the Mic Echo Knob. • Adjust microphone volume using the Mic Volume Knob.

NOTE: In order to avoid loud feedback, keep the microphone pointed in the opposite direction of the speaker. When not using, turn the mic volume down or turn the microphone off

